

OPERATING GUIDE

HEATED VEST



Step 1

Connect battery to the cable in pocket of vest using either USB port

Button on front of vest will flash 3 colours then turn off.



Step 2



Press and hold power button on front of vest until button lights up

You need to do this within a few seconds or the battery will turn off and you will have to disconnect then reconnect the battery



Step 3

Place battery in pocket and zip it back up.

IMPORTANT

The powerbutton will pulse red. This is The fast-heat mode.

NOTE: The vest will cut out and power off within 5 minutes unless you select a heat mode (Step 4)



Step 4

To change heat setting single press the power button to cycle through the 3 heat modes



Low [longest run time]

Medium

High [shortest run time]



Step 5

To power off the vest, press and hold the power button until there is no light from button

If you need to power the vest on again you may need to disconnect the battery then reconnect and follow Step 3



Wash Care

Ensure you remove battery before you wash your vest

Most stains should be wiped off with a cloth and water. Make sure you wash separate with zippers closed

