



User's Manual for 1.01 Cubic Ft White Keypad Jewelry Safe

Read all instructions before using this safe.

 
 
WARNING

- For security purposes, change the factory default code as soon as possible. Factory default code is 168 and 12345678
- Test registered pin code a few times before closing the safe door.
- Avoid leaving door open and unattended; it will allow unauthorized individuals to reprogram the safe, gaining full access to the safe and its contents.
- Body of safe consists of two steel plates filled with a fire-retardant material
- Do NOT store combustible materials in this unit.
- In the event of a fire, we recommend caution when opening the safe. If you feel unsure about opening the safe because of the contents stored, contact your local fire department for assistance.
- Store emergency keys in a secure place; NOT inside of the safe.
- Keep children away from safe; they should not play with or around the safe at anytime. Children at play could accidentally get locked inside the safe or accidentally pull on the safe door causing safe to tip over if not properly mounted.
- Failure to follow these warnings could result in serious injury or death.

NOTE: BARSKA is not responsible for any damage or lost contents in the safe due to moisture.

NOTE: BARSKA is not responsible if the safe is stolen or contents in the safe.

PARTS OF THE SAFE

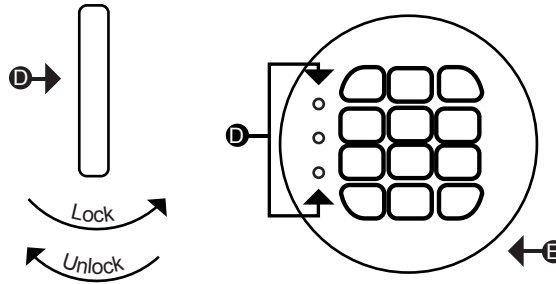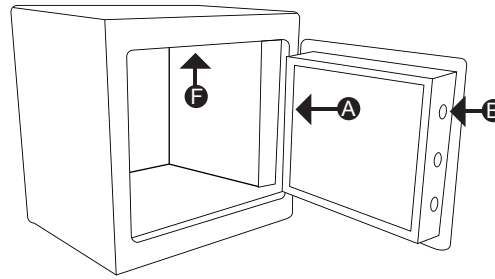

- A. Initialization Button
- B. Bolts
- C. Handle
- D. Indicator Lights
- F. Keypad and Keypad Cover - turn keypad counter clockwise to expose Battery Compartment and Emergency Key Access

BATTERY & KEY ACCESS

Push down on button located under the key pad and turn keypad cover counter clockwise.

 
DO NOT pull on the wires or touch the electronic components.

Install Battery

Insert one new 9V alkaline battery into the battery compartment and restore keypad cover.


Key Access

Insert access key into key slot and turn clockwise to open safe.

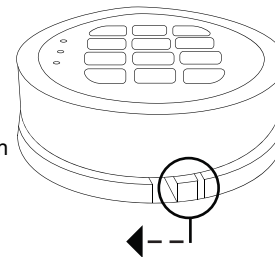

MOTION SENSOR LIGHT

 1. Motion Sensor Light has magnet bar at rear, so it can attach on the interior surface of safe. Before you start to use safe, please remove the light from safe and install with 4 AAA batteries.

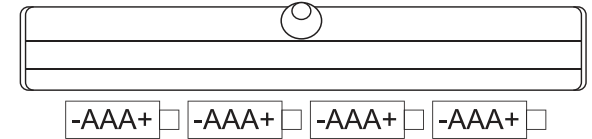

2. Motion Sensor Light should be automatically activated when the safe door is opened each time. Light should turn off within a delay time after the safe door is closed.

PIN CODE REGISTRATION

Safe retains 2 pin codes
1st Safe Default Pin Code : 168
2nd Safe Default Pin Code : 12345678

Changing First Pin Code

1. Press initialization button located on the inside of the safe, lock will beep twice and yellow indicator light will be lit.
2. Enter desired Pin Code (1-8 Digits) then press “ * ” button. 2 short beeps will be heard and yellow indicator light will disappear.
3. With door open turn handle counter clockwise to extend the bolts. Enter registered pin code and press “ # ” safe should unlock. Turn handle clockwise and retract bolts; registration is complete.

Note: If safe does not unlock then pin code registration was unsuccessful. Please start over with Pin Code Registration.

Changing Second Pin Code

1. Press “ 00 ” on the keypad, then press the initialization button located on the inside of the safe, lock will beep twice and yellow indicator light will be lit.
2. Enter second desired Pin Code (1-8 Digits) then press “ * ” button. 2 short beeps will be heard and yellow indicator light will disappear.
3. With door open turn handle counter clockwise to extend the bolts. Enter registered pin code and press “ # ” safe should unlock. Turn handle clockwise and retract bolts; registration is complete.

Note: If safe does not unlock then pin code registration was unsuccessful. Please start over with Pin Code Registration

OPENING AND CLOSING SAFE WITH PIN CODE

WARNING: Safe will lock user out for 15 minutes after 3 consecutive incorrect password attempts. Leave Batteries in the safe and wait 15 min for safe functions to return. Batteries MUST REMAIN in safe.

Open

1. On the key pad enter in either of the registered Pin Codes and press and release “ # ” to confirm.
2. Turn the handle to the unlocked position and pull safe door open.

Close

Close the safe door and turn the handle to the locked position.

LOW BATTERY WARNING

If a quick red light flashes while accessing and using the safe, this indicates that the batteries are low, please replace battery as soon as possible.

MOUNTING INSTRUCTIONS

- Be aware of the load bearing. Failure to do so can result in personal injury and/or damage to property.
- Barska recommends that this safe be anchored to the wall.
- Your safe must be shimmed level to assure proper lock functions and to keep the door from swinging open too quickly or closing by itself.
- To avoid rust on the safe, never set the safe directly on a cement floor. We recommend a spacer be placed between the safe and the cement.
- Exposure to chemicals or other adverse environments may cause the warranty to become invalid.
- The safe is designed to support itself when the doors is opened. However caution should be used to avoid pulling it over. To maximize security and stability, bolting the safe to the floor is recommended.
- Measure the location of the pre-set drill holes; mark their exact position onto the wall
- This safe comes with 2 pre drill holes measuring 3/8" Diameter, located at the back of the safe. You will need to drill the mounting screws through the interior carpet.
- Use proper drill tools depending on the type of surface you are mounting the safe (wood, tile, or concrete)

- Drill the appropriate size holes for the anchors you are using.
- Carefully press the anchor into the holes at this time.
- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely.

CARE AND MAINTENANCE

- Your safe is built to last. However, please understand that the locking mechanism has some precision parts. If you experience ANY difficult opening or closing your safe, DO NOT FORCE THE HANDLE, call 888.666.6769 for technical support. If the handle is forced or ABUSED, it may jam the components in the lock, which will require a safe technician to unlock your safe. This causes an inconvenience for both the owner and Barska and may lead to claim denials.
- Keep liquids away from the keypad. Spills on the keypad will cause damage and possibly electric shock.
- If necessary use a damp cloth to clean the safe. DO NOT use chemicals or cleaning agents.
- Secure safe in a proper area to prevent it from falling and causing damage or injury.
- The mechanism inside the door and the hinges are permanently lubricated, this needing no maintenance. Occasionally it may be necessary to lubricate the door bolts. To do so, extend the door bolts completely with the door open. Wipe a small amount of oil around each bolt.
- DO NOT over stuff the contents of the safe, it can damage the motor mechanism or the contents.
- DO NOT disassemble the product. For all repairs and maintenance, contact BARSKA Customer Service 888.666.6769 for technical support.



1 YEAR LIMITED WARRANTY

Safe

BARSKA warrants this new safe to be free of original defects in material and/or workmanship under normal use for a period of twelve (12) months from the date product is received by purchaser. This warranty does not include damage caused by improper installation or maintenance. Damage from misuse, abuse, accident (such as dropping), normal wear and tear, fire, flood, or acts of nature. Damage from service or repairs other than those performed by BARSKA. Labor, cost and shipping charges for the removal and replacement of defective parts beyond the initial twelve-month warranty period. All transportation and shipping charges. Removing or altering the seal under any circumstances will automatically void the warranty.

This warranty is limited to original purchaser and is not transferable. This warranty applies only to products purchased in the United States.

Please email info@barska.com or call 1.888.666.6769 for Return Merchandise Number (RMA#) before any returns. The RMA number must appear on the outside of the shipping package. Product must be packed carefully and sturdily in its original packaging to prevent damage in transit and returned freight pre-paid to:

BARSKA OPTICS
Repair Department
855 Towne Center Drive
Pomona, CA 91767

Please include all of the following when returning BARSKA products for service and/or replacement:

1. Please write your complete details (Name, Address, Telephone #, E-mail address, RMA#, etc.)
2. Purchase receipt or Proof of Purchase. (Original/Copy)
3. A brief explanation of the defect.
4. A Check/Money Order of \$90.00 to cover inspection, shipping and handling.

*Please allow 6-8 weeks for delivery.

BARSKA will examine and test returned product and repair or replace defective part(s) or units with new part(s) or a new unit if necessary within the warranty period. Purchaser is required to remit \$90.00 to BARSKA for return shipping and handling at time product is returned. If repair is required after warranty period expiration, purchaser will be charged for replacement parts and return shipping.

BARSKA® Optics shall not be liable for any consequential, incidental and/or contingent damages whatsoever. We will not pay shipping, insurance or transportation charges from you to us, or any import fees, duties and or taxes. This warranty supersedes all previous BARSKA® Optics warranties.