


# VPR Cap

## Cartridge Seal Replacement Instructions



The VPR cap contains a seal on the bottom that seals the cap to CO2 cartridges. Over time, this seal may need to be replaced under normal use. If your seal needs to be replaced, or is lost, please follow these instructions.

1) Use a uKeg tool, putty knife, screwdriver or key

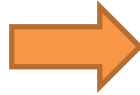

2) Unscrew bottom nut by turning counter-clockwise



3) Remove bottom nut and cartridge seal



4) Insert new cartridge seal with rim facing up



5) Tighten bottom nut by turning clockwise



6) Your VPR cap is ready to use

