


Rim[®]


NÁVOD K POUŽITÍ
BEDIENUNGSANLEITUNG
OPERATING INSTRUCTIONS
MODE D'EMPLOI
INSTRUKCJA UŻYTKOWANIA
HASZNÁLATI ÚTMUTATÓ

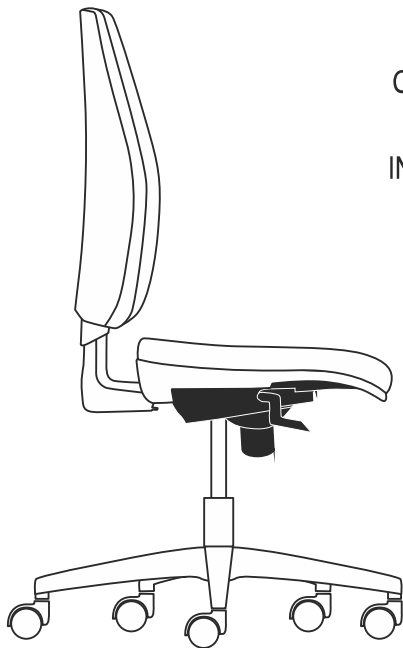


ANATOM AT 986B
EASY PRO EP 1207
EASY PRO EP 1207L
ZET ZE 916B
ZET ZE 919A

SYNCHRO ST5


1

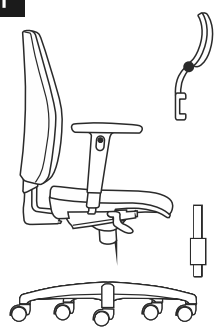


2

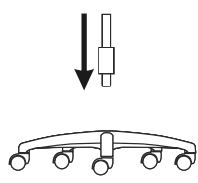




3

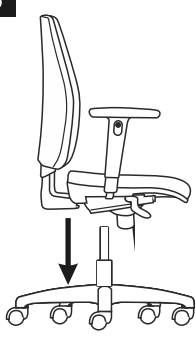




4

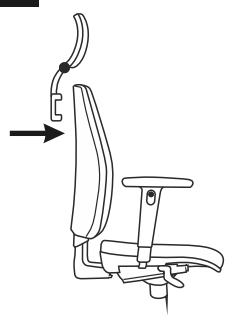

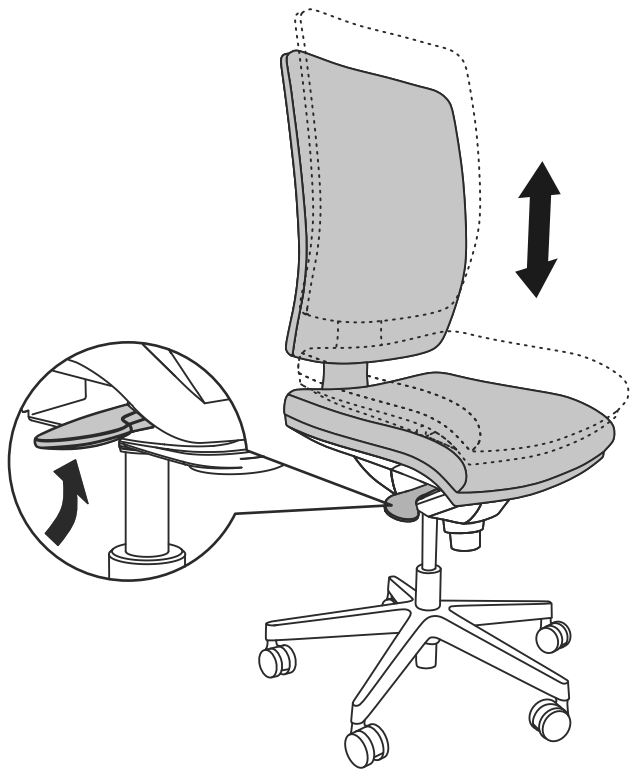


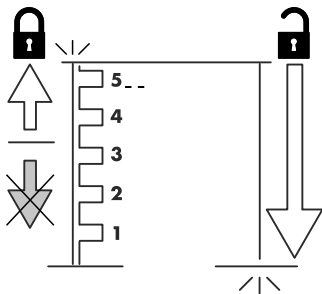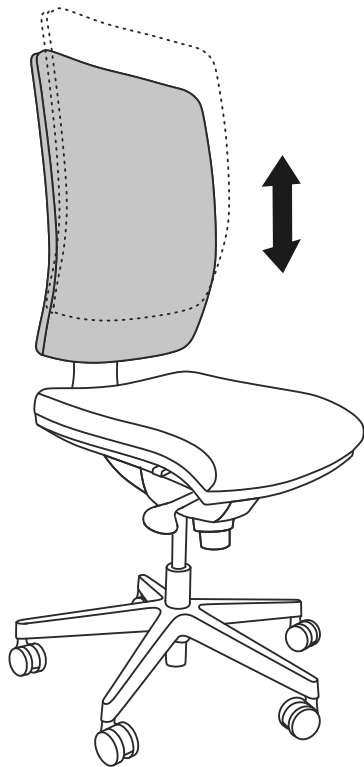


ANATOM AT 986B
ZET ZE 916B
ZET ZE 919A

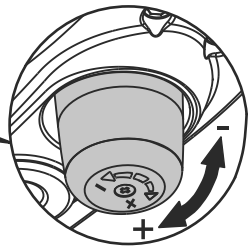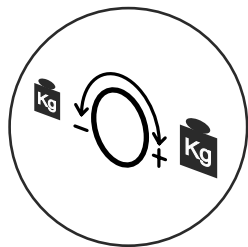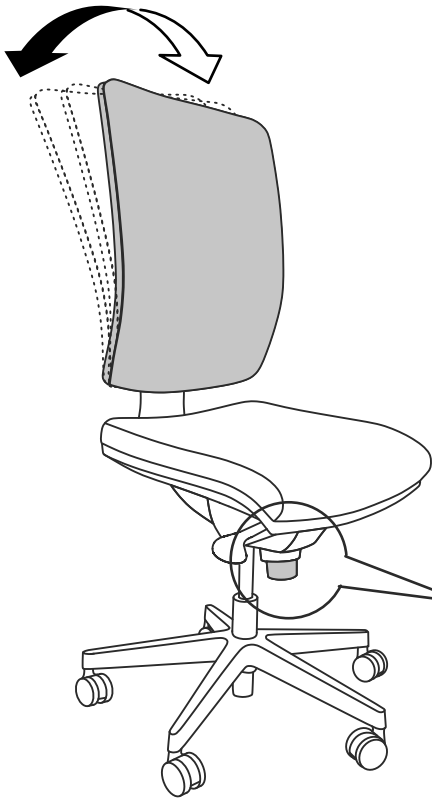


STOP!
STOP!

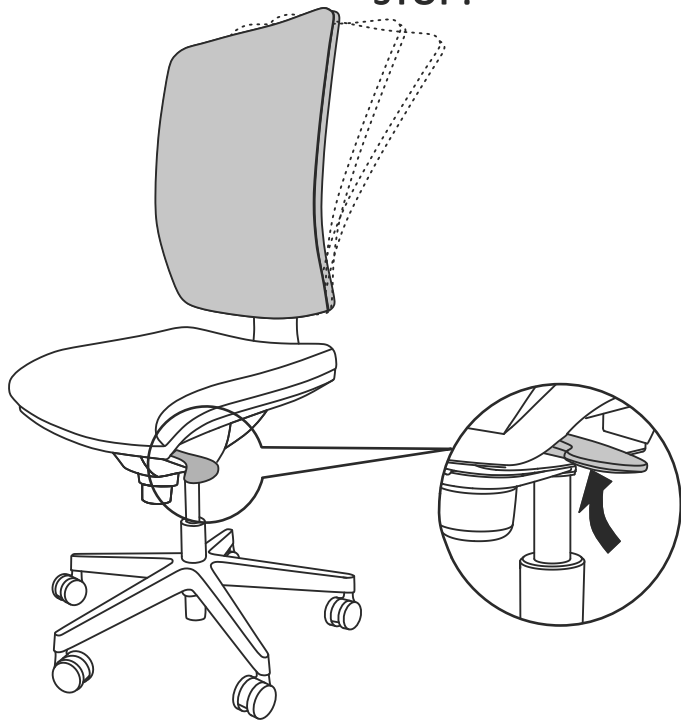


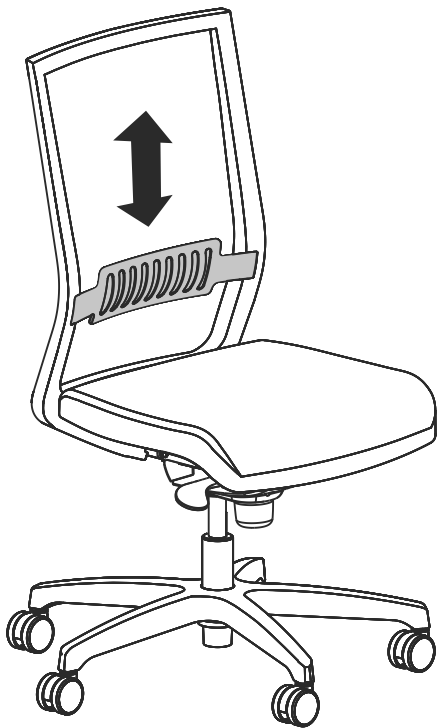

EASY PRO EP 1207
EASY PRO EP 1207L

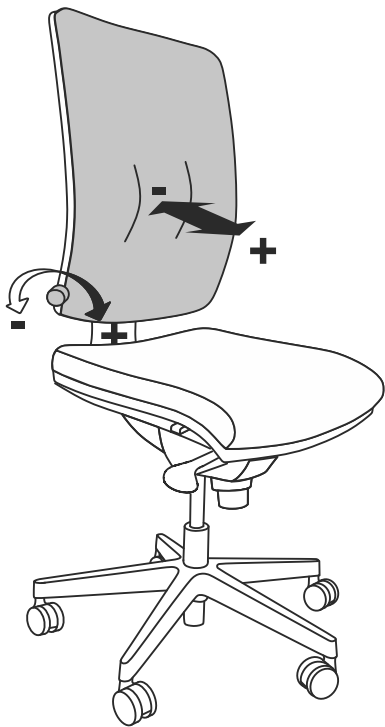


ANATOM AT 986B
ZET ZE 919A

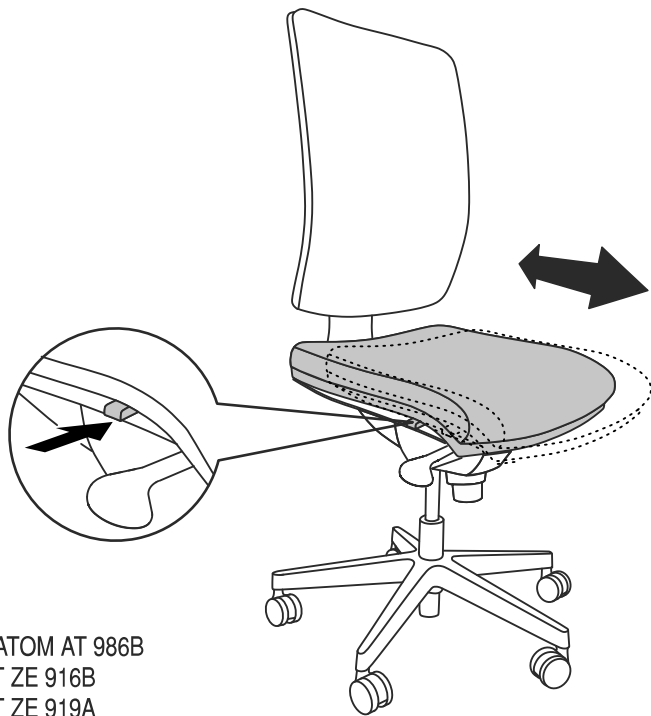




ANATOM AT 986B
ZET ZE 916B
ZET ZE 919A

ANATOM AT 986B
EASY PRO EP 1207
EASY PRO EP 1207L
ZET ZE 916B
ZET ZE 919A

082 1F




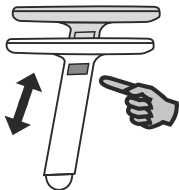


083A 3F

 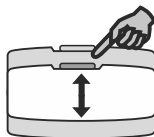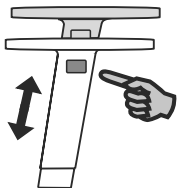

EASY PRO EP 1207
EASY PRO EP 1207L

 084 4F

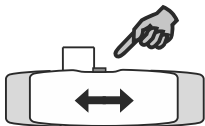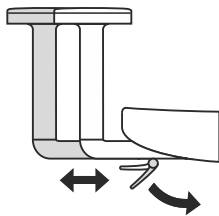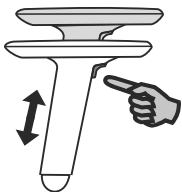

Rim[®]

RIM CZ a.s.

Dr. E. Beneše 1015

765 02 Otrokovice

CZECH REPUBLIC

Tel.: +420 577 112 641, -640

Fax: +420 577 101 015

E-mail: info@rim.cz

www.rim.cz

