



Anemometers with "D3" Rotor* (*Feb 2020) For Models with **Cateye Velo7** Display

Thank you for purchasing an Inspeed Anemometer!

The unit is shipped calibrated in mph – you do not need to do anything but connect the display!

However - if you should need to change the battery or units in the display, you will need to enter the proper wheel size "WS" for the unit to display the right wind speed.

The WS for the Classic 1.25" Body with D3 rotor is **127**.

The WS for the bottle-shape WS2 Body with D3 rotor is **121**.

The WS for the bottle-shape WS2 body & metal rotor is **109**.

For kph, select kph during the setup process.

See enclosed printed instructions for more on the bike speedometer functions or HELP on inspeed.com.

NOTE: MAX DISPLAY SPEED IS 124.9 mph (199 kph)

This anemometer is intended for casual use and should provide wind speed data within approximately 4% of reading from ~10 mph to ~50 mph or ± 1 mph. It will register speeds up to and over 100 mph, and we believe it to be accurate at those speeds, but it has not been verified at speeds above 50 mph. See inspeed.com for detailed specs.

The calibration is NOT affected by the length of the wire – use as much as you want! Any wire will work!

IMPORTANT NOTE ABOUT AVERAGE WIND SPEED: The display will only record and average when the wind is blowing. It stops recording below approximately 1 mph. That means that if the wind blows for 2 hours at 20 mph and 2 hours at zero, the average shown will be 20, not 10 – as it should do! (This is because bicyclists do not want their average hurt by stops). Please keep this in mind. There is a work-around: reset the odometer and write down the time and date. At any point, note the odometer ("wind miles"), and divide by the actual number of hours since reset. This will produce actual average wind speed since the last reset.

Replacement batteries are available in stores or from Inspeed (model number CR2032).

To remove the display from the bracket: simply push down on the little detent below the display and slide it up and off. See the Cateye instructions for details.

The display will turn on automatically and stay on as long as the rotor is turning. To conserve the battery, remove the display from the bracket or disconnect the wind sensor; this will cause the display to go to "sleep". Removal from the bracket does not affect calibration. Do not remove the battery to conserve power; if you do so, you will need to reset the WS every time the battery is re-installed.

SETTING THE WHEEL SIZE ("WS")

This needs to be done after replacing the battery:

...Remove the display from the backing by snapping it out of the bracket (this will require a hard push from the bottom of the display upward out of the bracket)

...There are two small soft grey buttons on the back: one is "SET" the other "AC". There is one button on front, the "MODE" button

...Press the "AC" button once. The display should flash "KM/H"

...Press the "MODE" button to select "KM/H" or "MPH"

...Press the "SET" button to capture that and move from "mph" to "wheel size".

...The display should flash number "26"

...Now press "MODE" three times until you get to [205].

...Press and HOLD the "MODE" button until the 5 starts to flash

...For "**127**" press MODE 2 times until the flashing 5 is 7

...Press and HOLD it again to make the 0 flash

...Press MODE twice to make this a 2

...Press and HOLD it again to make the 2 flash

...Press MODE once to make the 2 a 1. The WS should now read 127, (see above for the correct WS).

...Press SET twice on the back to capture this and voila!

(Don't forget this step or it will go back to default!)

Installation & Operation

PLEASE TEST IT BEFORE YOU INSTALL IT ☺

Connect the display and spin the rotor to make sure everything is working **FIRST THING**.

Mount it as high up as you can in order to get into clean air. Connect the display (there is no polarity for the unterminated wire models), stick the display anywhere!

Note that the display is water resistant - NOT waterproof - and should NOT be left outdoors for extended periods of time. The rest is simply a matter of displaying the information you want to see on the display: current speed, max speed, average speed, etc. For detailed instructions on how to use the display, refer to the instruction booklet enclosed.

Maintenance

In the very rare instance that you believe you need to clean it (not turning smoothly), it is not hard to do:

- Remove the two screws that hold the plate under the Vortex body
- Carefully remove (pry off) the circlip on the bottom of the shaft (good luck finding it if you drop it!)
- Remove the shaft and rotor assembly and clean thoroughly – do not oil – graphite (dry) lube only.
- Reassemble in reverse order.

Thank you and enjoy!