


## How to Use The Edge Guide

The Edge Guide is designed to fit our Precision Router Base and it is used for routing a channel around the outside of a guitar, into which you glue the binding of your choice.

The guide is supplied with 2 mounting bolts and two Allen keys for fitting and adjusting.

1. Attach the edge guide using the two Allen mounting bolts supplied the underside of the precision router base plate, with the knurled micro adjuster to the rear of the plate.

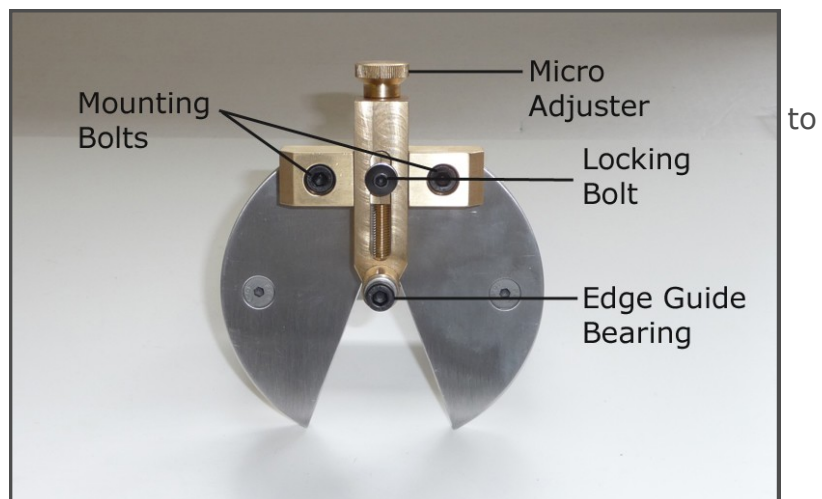

2. Slacken off the locking bolt with the Allen key provided.
3. Fit the Dremel with it's router cutter installed into the base plate and adjust the position of the edge bearing by turning the micro adjuster, until you have the rebate width of cut required.
4. Tighten the locking nut to lock the edge guide in place.
5. Adjust the depth of cut of the cutter using the precision base adjusters (see the accompanying guide).
6. Position the base plate on the work, switch on the Dremel and , keeping the bearing arm at right angles to the work, press the base into the work so the cutter takes it's first cut.
7. With the edge bearing pressed against the work, move the router and base around the contour of the work keeping the bearing arm at right-angles to the work.