
## How To Series

## How to use the Circle Cutting Guide

The circle cutting guide will gut a circle between 3'' and 7'' in diameter enabling you to accurately cut sound-holes and rosette / Purfling channels. The guide rotates around a 1/4'' locating pin.

To set the guide up:

- 1. Attach the circle cutting guide to the base of the precision router base using the two countersunk bolts provided and tighten with the Allen key included with the guide.
- 2. Loosen the locking nut by turning it anticlockwise.
- 3. Using the micro adjuster, adjust the distance between the centre of the locating pin and the edge of your router bit to match the radius of your circle.

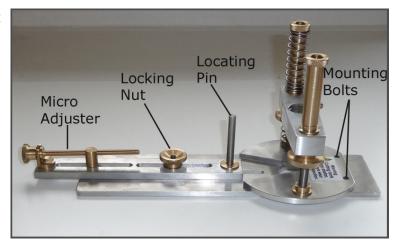

- 4. Tighten the locking nut.
- 5. Set the cutter depth and drill a 1/4" hole in the centre of the circle on your work-piece.
- 6. Insert the locating pin through the brass bushing and into the hole drilled in your work-piece.
- 7. Switch on your Dremel and lower the cutter to begin cutting the circle
- 8. Slowly revolve the base unit around the central locating pin, scribing your circle.
- 9. Repeat the process, adjusting the depth of cut, and /or the radius to complete your circle cutting.
- 10. Practice on scrap timber to ensure your settings are accurate.