

<b>FUNCTIONS</b>	SL4	SL6	SL8	KV8	KV12	KV16
Injector Channels	4	6	8	8	12	16
Injector Peak & Hold	No	No	No	Yes	Yes	Yes
Ignition Channels	4	6	8	8	12	12
Auxiliary Channels Total	10	10	10	16	16	16
Auxiliary Channels (High Side)	4	4	4	8	12	12
Auxiliary Channels (Half Bridge) 2	2	2	2	4	8	8
DBW Channels	1	1	1	2	4	4
Dedicated EFI Relay Control	Yes	Yes	Yes	Yes	Yes	Yes
Analog Input Channels	10	10	10	16	16	16
Digital Input Channels	8	6/8	6/8	14	14	14
Analog Output Channels	0	0	0	1	1	1
Knock Channels	1	2	2	2	2	2
DI Arming Threshold Ctrl <sup>3</sup>	DI 1-4	DI 1-4	DI 1-4	DI 1-8	DI 1-8	DI 1-8
5.0V Sensor Supply Channels	1	1	1	2	2	2
Lambda Internal (LSU4.9)	No	No	No	Yes	Yes	Yes
3-Axis Internal G-Force	Yes	Yes	Yes	Yes	Yes	Yes
Oscilloscope Channels 4	2	2	2	6	10	10
Ethernet Communications	Yes	Yes	Yes	Yes	Yes	Yes
CAN Channels	2	2	2	2	2	2
Dual 100Mhz Processors	Yes	Yes	Yes	Yes	Yes	Yes

<b>ECU DATA LOGGING</b>	SL4	SL6	SL8	KV8	KV12	KV16
Data Logging Size	16MB	16MB	16MB	32MB	32MB	32MB
Data Logging Max Rate	250Hz	250Hz	250Hz	500Hz	500Hz	500Hz
Number of Parameters	600	600	600	600	600	600



## 1 Auxiliary Channels with High Side Option

SL4/6/8 - High Side Drivers on Auxiliary Channels 5 - 8 KV8+ - High Side Drivers on Auxiliary Channels 1 - 8

## 2 Auxiliary Channels Configured as Half Bridge

SL4/6/8 - Auxiliary Channels 9, 10 Half Bridge

KV8 - Auxiliary Channels 9 - 12 Half Bridge, Auxiliary Channels 13 - 16 Lowe or High Side

KV12/16 - Auxiliary Channels 9 - 16 Half Bridge

## 3 Digital Inputs Frequency Arming Thresholds

SL4/6/8 - DI 5 - 8 have a fixed frequency arming thresholds. Arming at 1.6 V and disarming at 1.4 V **NOTE:** This **ONLY** applies to frequency based signals. Switched inputs still retain ON/OFF thresholds

## **4** Oscilloscope Function

SL4/6/8 - x2 Channels: Crank and Cam Sensors
KV8 - x6 Channels: Crank, Cam and DI 1 - 4
KV12/16 - x10 Channels: Crank, Cam and DI 1 - 8