



SHORTCUT KEYS

Navigation

V	Toggle view between Tuning and Config
ESC	Toggle focus on menu bar
Alt + F	Open file tab
F3	Open/Close Ecu run times
H	Toggle table description
[Scroll between views LEFT
]	Scroll between views RIGHT

Table Direct Entry

Enter OR =	Open direct entry box
Pg Up	Increase value by 0.1
Pg Down	Decrease value by 0.1
Shift Pg Up	Increase value by 1.0
Shift Pg Down	Decrease value by 1.0

File Management

F2	Open direct entry box
Ctrl + F2	Save as
Ctrl + Z	Undo last change
Shift + Ctrl + Z	Redo last change

PC Logging

F7	Open logging file
F8	Start/Stop logging
F9	Pause logging

Table Tools

Ctrl + Alt + C	Save table
Ctrl + Alt + V	Load table
Ctrl + Alt + I	Import Table
Ctrl + Space Bar	Active Cell Tracking
Shift + Ctrl + V	Past table
Ctrl + V	Paste selection
Ctrl + Alt + I	Import Table
Ctrl + Space Bar	Active Cell Tracking
Ctrl + C	Copy selection
Shift + Ctrl + C	Copy table
Ctrl + A	Select all
S	Smoothing
H	View table description
D	Display differences from ECU last stored value
;	Table colour gradient
M	Manual lambda correction
L	Auto lambda correction
Z	Restore last stored cell values
Q	Copy live runtimes into active cell
I	Interpolate
G	Toggle Graph
A	Axis setup
O	Toggles yellow box for crosshair feature into tuning view
F6	Open lambda table
F5	Toggle fuel and ignition main Table