



### LOOKING INTO ECU

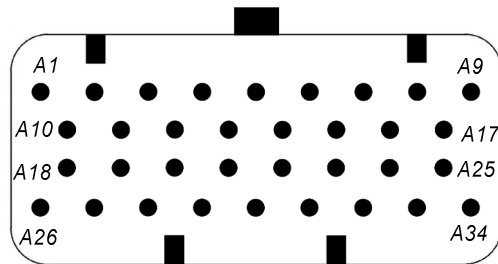

CONNECTOR A

### LOOKING INTO ECU

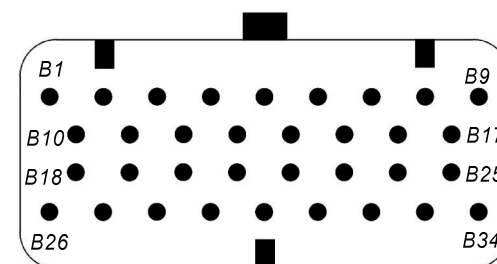

CONNECTOR B

**NOTE:** The **Sensor 0V Ref** pin is a specialised ground output for all analog sensors. Connect direct to the sensor 0V pin, **DO NOT** connect to the Engine Block or ECU Ground.