



BYTECH®

- for -



9" PRO ELECTRIC SCOOTER MANUAL



A Work of Art
Created and Engineered
to Deliver a New Wave of Mobility
in a **TRANSIT REVOLUTION**





One look at the unique aerodynamic design and high end appearance of the Bugatti electric scooter can tell you that this is not just your average basic scooter.

Fabricated with the everyday consumer in mind, it has a sleek yet functional folding design and is available in 4 colors: Agile Bleu, Yellow, Silver and Black.

Lightweight at only 35lbs, the scooter is constructed with a magnesium alloy frame which allows for easy transport if you live in a high rise or to be taken into a home or office for storage and safekeeping.

Users can also benefit from its large LED visible screen which displays trip mileage, speed, mode, battery life, dual turn signals and headlights.

It has a weight capacity of up to 242lbs and rides at a maximum velocity of 20 MPH.

The Bugatti electric scooter surely will not disappoint. Like all its products, Bugatti prioritizes high quality and front-line technology as the leading attributes of its peerless creations.

BYTECH®

- for -



9" PRO ELECTRIC SCOOTER

WARNING

- Whenever you ride an electric vehicle, there is a risk of death or serious injury from loss of control, loss of braking power, collisions and falls.
- Wear an approved safety helmet and other protective gear to minimize any possible injury
- To ride safely, you must read and follow all warnings and instructions.
- Maximum payload must not exceed 242 lbs / 110 kg
- The manufacturer prohibits anyone under the age of 18 from using this device.
- Please always follow local traffic rules and road regulations.

BYTECH[®]
- for -



9" PRO ELECTRIC SCOOTER

AGILE BLEU





BYTECH®
- for -



9" PRO ELECTRIC SCOOTER

SILVER





BYTECH[®]
- for -



9" PRO ELECTRIC SCOOTER

BLACK





BYTECH[®]
- for -



9" PRO ELECTRIC SCOOTER

YELLOW









TABLE OF CONTENTS

- 1. FUNCTIONS**
- 3. DASHBOARD FUNCTIONS**
- 5. FEATURES**
- 7. ASSEMBLING THE DEVICE**
- 9. OPERATING THE DEVICE**
- 11. CHARGING THE DEVICE**
- 13. FOLDING MECHANISM**
- 15. TRANSPORT THE DEVICE**
- 17. SAFETY**
- 19. OPERATE SAFELY**
- 21. MAINTENANCE**
- 25. PRE-RIDE CHECKLIST**
- 26. SAFETY PRECAUTIONS**
- 27. WARNING**
- 29. SPECIFICATIONS**
- 31. DECLARATION**
- 33. HIGHLIGHTS**
- 35. WARRANTY**

THANK YOU FOR YOUR PURCHASE

**PLEASE READ ALL INSTRUCTIONS CAREFULLY
BEFORE USING AND RETAIN THIS MANUAL *
FOR FUTURE USE AND REFERENCE.**

*THE MANUFACTURER RESERVES THE RIGHT TO MAKE CHANGES
TO THE PRODUCT, AND UPDATE THIS MANUAL AT ANY TIME.

VISIT US AT BUGATTISCOOTERSNA.COM

FUNCTIONS

1. ERGONOMIC HAND GRIPS
2. THUMB POWER THROTTLE
3. DIGITAL DASHBOARD
4. FRONT HEADLIGHT
5. FRONT REFLECTOR
6. LEFT BRAKE LEVER
7. FOLDING STEM
8. FOLDING SAFETY LOCK
9. FOLDING SAFETY LEVER
10. ALUMINUM BUGATTI MACARON
11. FRONT MUD GUARD
12. FRONT WHEEL
13. DRUM BRAKE
14. KICK STAND
15. FOOT PAD
16. HOOK BUCKLE
17. TAILLIGHT
18. REAR MUD GUARD
19. SIDE REFLECTOR
20. MOTOR WHEEL
21. DUAL TURN SIGNAL GRIP LIGHTS
22. LEFT & RIGHT TURN SIGNAL MECHANISM
23. SIDE ILLUMINATION



DASHBOARD FUNCTIONS

1. SPEED DISPLAY
2. SPEED UNIT DISPLAY: KM/H OR MPH.(MPH IN DEFAULT SETTING)
3. MILEAGE DISPLAY/TOTAL: KM OR MILES.(MILES IN DEFAULT SETTINGS)
4. GEAR DISPLAY: ADJUST 1ST, 2ND AND 3RD GEAR.
5. FRONT LIGHT DISPLAY
6. SCOOTER ERROR DISPLAY
7. SINGLE TRIP MILEAGE OR TOTAL MILEAGE SWITCH.
8. BATTERY POWER BAR DISPLAY
9. GEAR SWITCH/ MILEAGE SWITCH BUTTON
10. POWER BUTTON
11. CRUISE CONTROL

POWER BUTTON FUNCTIONS

LONG-PRESS OF THE POWER BUTTON: TURNS THE SCOOTER ON/OFF.

SINGLE-PRESS OF THE POWER BUTTON: TURNS THE HEADLIGHT ON/OFF.

QUICK DUAL-PRESS OF THE POWER BUTTON: TURNS THE SIDE ILLUMINATION LIGHT, HOLOGRAM LIGHT AND REAR LIGHT ON/OFF.

SWITCHING BETWEEN MPH AND KMH

HOLD THE LEFT BREAK LEVER, LONG PRESS THE "M" BUTTON SIMULTANEOUSLY.

FLASHING WORDS "ODO" OR "TRIP WILL APPEAR ON THE SCREEN.

A FEW SECONDS LATER, WHEN THE SCREEN SHOWS ERROR "21E" PLEASE RELEASE THE BRAKE LEVER AND M BUTTON HOLDS.

IF THE SCREEN SHOWS "U" THAT INDICATES THAT YOUR SWITCH HAS BEEN SUCCESSFUL.

M BUTTON FUNCTIONS

LONG-PRESS OF THE M BUTTON: SWITCHES THE TOTAL MILEAGE AND SINGLE TRIP MILEAGE.

SINGLE-PRESS OF THE M BUTTON: ADJUSTS 1ST, 2ND AND 3RD SPEED GEAR.

1: SPEED LIMIT MODE(12MPH)

2: STANDARD MODE (15MPH)

3: SPORT MODE(20MPH)

CRUISE CONTROL FUNCTION

LONG-PRESS OF THE POWER THROTTLE FOR 10 SECONDS: AUTOMATICALLY ACTIVATES CRUISE CONTROL.



FEATURES



LEFT & RIGHT TURN SIGNAL MECHANISM



ERGONOMIC HANDLE GRIPS



SAFETY BELL



ERGONOMIC RUBBER DECK



DUAL TURN SIGNAL LIGHT CAPS



FRONT LIGHT & SAFETY REFLECTOR

FEATURES



BUGATTI EB LOGO: REAR MUD GUARD



BUGATTI MACARON LOGO



BUGATTI EB LOGO: WHEEL CAP



BUGATTI EB LOGO: DASHBOARD



BRAKE LIGHT



REAR "EB" MONOGRAM PROJECTION
LOGO

ASSEMBLING THE DEVICE

ACCESSORIES

- 1 USER MANUAL
- 5 MOUNTING SCREWS
- 1 ALLEN WRENCH
- 1 ELECTRIC SCOOTER BATTERY CHARGER CABLE
- 1 AUTHENTICITY CERTIFICATE CARD
- 1 THANK YOU CARD

ASSEMBLING THE SCOOTER

AFTER REMOVING THE SCOOTER FROM THE PACKAGING BOX, PLACE IT FLAT ON THE GROUND.

1. OPEN KICK STAND AND STABILIZE ELECTRIC SCOOTER.
2. CONNECT THE WATERPROOF CABLES FROM THE TOP HANDLE BARS AND THE FOLDING STEM. CONNECT CABLE "A" TO CABLE "B".
3. CONNECT THE TOP HANDLE BARS INTO THE FOLDING STEM.
4. LOCK THE STEM IN UPRIGHT POSITION. A 'CLICK' SOUND INDICATES THE STEM IS LOCKED IN PLACE. SECURE USING THE FOLDING SAFETY LOCK.
5. SECURE THE TOP HANDLE BARS INTO THE FOLDING STEM BY USING THE MOUNTING SCREWS AND ALLEN WRENCH PROVIDED. ALIGN THE 4 SCREWS IN PLACE BEFORE FASTENING.

PERFORM TESTING AFTER INSTALLATION

1. POWER ON INSPECTION
2. GEAR SHIFT INSPECTION
3. FRONT HEADLIGHT INSPECTION
4. BRAKING FORCE INSPECTION



OPERATING THE DEVICE

CAUTION

NOTE: BEGINNERS LEARNING TO RIDE AN ELECTRIC SCOOTERS ARE AT RISK OF FALLING AND GETTING INJURED.

PLEASE WEAR A SAFETY HELMET AND PROTECTIVE GEAR AT ALL TIMES.

START THE ELECTRIC SCOOTER

1. THE SCOOTER REQUIRES A KICK OFF TO START.
2. WHEN THE POWER IS ON, KEEP ONE FOOT STATIONARY ON THE DECK WHILE THE OTHER FOOT KICKS BACK ON THE GROUND. (FIGURE 1)
3. AS THE SCOOTER BEGINS TO MOVE IN MOTION, PLACE THE OTHER FOOT BACK ON THE DECK.
4. WHEN THE SCOOTER IS STABLE, PUSH THE RIGHT POWER THROTTLE. (FIGURE 2)
5. HOLD LEFT HAND ON THE BRAKE LEVER TIGHTLY WHEN BRAKING. FRONT WHEEL DRUM BRAKE AND REAR ELECTRONIC BRAKE IS IN EFFECT SIMULTANEOUSLY. (FIGURE 3)



Figure 1. Kickstart



Figure 2. Right Power Throttle



Figure 3. Left Brake Lever

CHARGING THE DEVICE

CAUTION

DEVICE DOES NOT POWER ON WHILE CHARGING

ONLY USE CHARGING ADAPTER SUPPLIED IN THIS PACKAGE TO CHARGE THIS DEVICE. (FIGURE 1)

NOTE: WHEN THE BATTERY POWER IS OUT, CHARGE IT IN TIME TO AVOID DAMAGE TO THE BATTERY. PLEASE UNPLUG THE CHARGING CABLE FROM THE CHARGING PORT WHEN CHARGING IS COMPLETE.

DO NOT OVER CHARGE THE BATTERY.
DO NOT LEAVE UNATTENDED WHILE CHARGING.

CHARGING THE ELECTRIC SCOOTER

1. THE CHARGING PORT CAP IS LOCATED ON THE FRONT RIGHT OF THE SCOOTER. (FIGURE 2)
2. OPEN THE DUST-PROOF CAP AND INSERT CHARGING CABLE INTO THE CHARGING PORT. (FIGURE 3)
3. A RED LIGHT INDICATES THE CHARGE IS IN PROGRESS.
4. A GREEN LIGHT INDICATES THE CHARGING IS COMPLETE.
5. UNPLUG THE CHARGING PORT AND SECURE THE DUST-PROOF CAP.



100% CHARGED **75%** CHARGED **50%** CHARGED **25%** CHARGED **<25%** NEEDS CHARGE

Figure 1. Charging Adapter with LED Indicator Lights



Figure 2. Charging Port Cap



Figure 3. Charging Port Cap

FOLDING MECHANISM

CAUTION

NOTE: SET THE KICKSTAND TO STABILIZE THE ELECTRIC SCOOTER BEFORE FOLDING. LOWER THE WEIGHTED FOLDING STEM WITH CARE.

POWER OFF TO FOLD ELECTRIC SCOOTER

1. LIFT UP THE SAFETY LOCK. (FIGURE 1)
2. OPEN THE SAFETY LEVER. (FIGURE 2)
3. FOLD THE STEM TO THE REAR PART OF THE SCOOTER.
4. LIFT THE HOOK BUCKLE ON THE REAR MUD GUARD TO FOLD.
5. SECURE THE HOOK AND BUCKLE TOGETHER.(FIGURE 3)
6. FOLDING IS COMPLETE. (FIGURE 4)



Figure 1. Safety Lock



Figure 2. Safety Lever



Figure 3. Secure Hook and Buckle to Fold



Figure 4. Folding Complete

TRANSPORT THE DEVICE

CAUTION

NOTE: AFTER FOLDING, YOU CAN TAKE THE SCOOTER TO THE BUS, METRO OR VEHICLE CAR TRUNK.

TRANSPORT THE SCOOTER

LEAVE THE KICKSTAND AT A STABILIZED POSITION.
LIFT THE ELECTRIC SCOOTER FROM THE FOLDING STEM.
CARRY WITH CARE.

YOU CAN TRANSPORT
THE FOLDED
BUGATTI
ELECTRIC SCOOTER
WITH ONE HAND.



SAFETY

CAUTION

NOTE: PLEASE USE PROPER PRECAUTION WHEN OPERATING THE ELECTRIC SCOOTER. DO NOT HANG BACKPACKS OR OTHER OBJECTS ON THE HANDLEBARS WHEN RIDING THE SCOOTER.

- 1. WHEN THE SCOOTER IS TURNED ON AND NEEDS TO BE MOVED, PLEASE DO NOT PRESS THE THUMB POWER THROTTLE. WALK THE SCOOTER WITH CARE. (FIGURE 1)**



Do Not Operate in the Rain

DO NOT DRIVE THE SCOOTER
IN THE RAIN.



Proceed with Caution

DO NOT PRESS POWER THROTTLE TO
ACCELERATE WHEN GOING DOWNHILL.
PROCEED WITH CAUTION.



Avoid Bumpy Roads

DO NOT OPERATE AT HIGH SPEED ON
BUMPY ROADS.



Avoid High Steps

DO NOT RIDE OVER STEPS MORE THAN
0.75 INCHES AT HIGH SPEEDS.

OPERATE SAFELY

CAUTION

NOTE: PLEASE USE PROPER PRECAUTION WHEN OPERATING THE ELECTRIC SCOOTER.

- 1. HOLD BOTH HANDLESBARS WHILE OPERATING ELECTRIC SCOOTER. DO NOT DRIVE WITH ONE HAND.(FIGURE 1)**
- 2. DO NOT LIFT ONE FOOT OR DO OTHER DANGEROUS ACTIONS WHILE OPERATING ELECTRIC SCOOTER.(FIGURE 2)**
- 3. DO NOT DRIVE IN WATER WITH A DEPTH OF MORE THAN 0.75 INCHES.(FIGURE 3)**
- 4. IF OPERATING THE ELECTRIC SCOOTER AT HIGH-SPEED, DO NOT SWING THE SCOOTER BODY OR TURN THE HANDLEBARS EXCESSIVELY. KEEP SCOOTER STEADY AND OPERATE WITH CAUTION.(FIGURE 4)**
- 5. DO NOT STEP ON OR STAND ON THE REAR MUD GUARD WHILE OPERATING THE ELECTRIC SCOOTER.(FIGURE 5)**



Figure 1. Hold both Handlebars



Figure 2. Do Not Lift Feet



Figure 3. Do Not Operate in Water



Figure 4. Operate with Caution



Figure 5. Avoid Pressure on Mud Guard

MAINTENANCE

CAUTION

NOTE: ADHERE TO THE MAINTENANCE SUGGESTIONS WHEN THE SCOOTER HAS BEEN IN USE FOR A LENGTHLY TIME.

CLEANING & STORAGE MAINTENANCE

1. USE A SOFT DAMP CLOTH TO WIPE AWAY ANY STAINS.
(FIGURE 1)
2. STORE ELECTRIC SCOOTER IN A COOL DRY PLACE WHEN NOT IN USE. (FIGURE 2)
3. DO NOT LEAVE ELECTRIC SCOOTER OUT IN THE SUN, EXTREME HOT TEMPERATURES OR FREEZING TEMPERATURES AS THIS CAN CAUSE RAPID AGING OF THE OUTER BODY AND TIRES AS WELL AS REDUCE BATTERY LIFE.

BRAKE MAINTENANCE

1. IF THE BRAKE IS LOOSE, TURN THE ADJUSTING NUT ON IN A COUNTERCLOCKWISE DIRECTION. (FIGURE 3)
2. IF THE BRAKE IS TOO TIGHT, TURN THE ADJUSTING NUT IN A CLOCKWISE DIRECTION.(FIGURE 4)



Figure 1. Use Soft Damp Cloth



Figure 2. Cool Dry Storage Area



Figure 3. Fasten Counterclockwise



Figure 4. Fasten Clockwise

MAINTENANCE

CAUTION

NOTE: ADHERE TO THE MAINTENANCE SUGGESTIONS WHEN THE SCOOTER HAS BEEN IN USE FOR A LENGTHLY TIME.

TUBE MAINTENANCE

1. IF THE TUBE OF THE SCOOTER IS LOOSE, TIGHTEN THE 4 MOUNTING SCREWS IN A COUNTERCLOCKWISE DIRECTION. USE A 2.5MM HEX SOCKET TOOL TO SECURE.(FIGURE 5)
- 2 . TIGHTEN THE TWO SCREWS OF THE STEM BASE IN A COUNTERCLOCKWISE DIRECTION USING A 5MM HEXAGON SOCKET TOOL.(FIGURE 6)

FOLDING STEM MAINTENANCE

5. IF THERE IS A WIDE GAP BETWEEN THE FOLDING STEM, ADJUST THE FOLDING MECHANISM ON THE FOLDING BASE USING A 2.5MM HEX SOCKET TOOL. UNSCREW THE SET SCREW IN CLOCKWISE DIRECTION.(FIGURE 7)
6. IN A COUNTERCLOCKWISE DIRECTION, FASTEN THE FOLDING MECHANISM SCREW USING A 3MM HEX SOCKET TOOL. USE A 2.5MM HEX SOCKET TOOL TO TIGHTEN THE SET SCREW.(FIGURE 8)



Figure 5. Secure Front Tube



Figure 6. Secure Stem Base



Figure 7. Remove Screw on Folding Stem



Figure 8. Fasten Folding Mechanism Screw

PRE-RIDE CHECKLIST

CAUTION

NOTE: MAKE SURE THAT THE ELECTRIC SCOOTER IS IN GOOD CONDITION BEFORE EVERY RIDE.

IF YOU FIND ANYTHING WRONG
DO NOT RIDE BEFORE CORRECTING.

CHECKLIST

- MAKE SURE THE BATTERY IS SUFFICIENTLY CHARGED BEFORE RIDING.
- ALWAYS WEAR A HELMET BEFORE RIDING.
- WEAR COMFORTABLE CLOTHES AND FLAT CLOSED TOED SHOES BEFORE RIDING.
- READ THE ENTIRE USER MANUAL TO FAMILIARIZE YOURSELF WITH THE ELECTRIC SCOOTER.

SAFETY PRECAUTIONS

-  THE KEY TO SAFE RIDING IS COMMON SENSE.
-  OBEY ALL TRAFFIC LAWS.
-  RIDE DEFENSIVELY, EXPECT THE UNEXPECTED.
-  GIVE PEDESTRIANS THE RIGHT OF WAY.
-  SLOW DOWN AT INTERSECTIONS AND LOOK TO THE LEFT AND RIGHT BEFORE CROSSING.
-  DO NOT RIDE TOO FAST
-  DO NOT OPERATE WHILE INTOXICATED OR OVERLY TIRED.
-  KEEP YOUR FEET ON THE DECK AT ALL TIMES.
-  DO NOT RIDE OFF ROAD OR ON ROUGH SURFACES. AVOID CURBS.
-  BEND YOUR KNEES WHILE RIDING ON BUMPY OR UNEVEN PAVEMENT TO ABSORB SHOCK AND VIBRATION AND MAINTAIN BALANCE.

WARNING



WARNING

- DO NOT USE ALCOHOL, GASOLINE, KEROSENE, ABRASIVE CLEANING SOLVENTS OR VOLATILE CHEMICAL SOLVENTS TO CLEAN THE ELECTRIC SCOOTER. THIS CAN SERIOUSLY DAMAGE THE ELECTRIC SCOOTER AND CIRCUITRY.
- DO NOT WASH ELECTRIC ELECTRIC SCOOTER WITH WATER.
- IN ADDITION, AFTER CHARGING THE ELECTRIC SCOOTER, NO MOISTURE OR DEBRIS CAN ENTER INSIDE AND DAMAGE THE ELECTRIC SCOOTER.



BATTERY WARNING

- DO NOT OPEN OR DISASSEMBLE THE BATTERY TO PREVENT ELECTRIC SHOCK.
- VOID CONTACT WITH METAL OBJECTS TO PREVENT SHORT CIRCUITS.
- USE ONLY THE CHARGER THAT CAME WITH YOUR ELECTRIC SCOOTER
- AFTER EACH USE, CHARGE THE BATTERY TO PROLONG ITS SERVICELIFE.
- IF NOT USED REGULARLY, CHARGE THE ELECTRIC SCOOTER EVERY 2 MONTHS TO MAINTAIN THE LIFE OF THE RECHARGEABLE BATTERY.

WARNING CONTINUED...

- FOR YOUR PERSONAL SAFETY, ALWAYS WEAR A HELMET AND BODY PROTECTION.
- COLLISIONS, FALLS AND LOSS OF CONTROL CAN HARM PEOPLE AND OBJECTS AROUND YOU.
- TO RIDE SAFELY, YOU MUST READ AND FOLLOW ALL THE INSTRUCTIONS IN THE USER MANUAL.
- THIS SCOOTER IS NOT A TOY.
- NOT SUITABLE FOR CHILDREN UNDER 4 FEET TALL, UNDER THE AGE OF 16 AND/OR UNDER 66 POUNDS.
- ADULT SUPERVISION IS REQUIRED FOR RIDERS UNDER THE AGE OF 16.
- THE MAXIMUM WEIGHT CAPACITY IS 242 POUNDS.
- PREGNANT WOMEN ARE PROHIBITED FROM RIDING WHICH MAY CAUSE SERIOUS INJURY OR DEATH.
- THIS PRODUCT IS DESIGNED FOR SINGLE PERSONAL USE AND CANNOT TRANSPORT MORE THAN ONE PERSON AT A TIME.
- THIS PRODUCT SHOULD ONLY BE USED IN PRIVATE AREAS AND NOT ON PUBLIC ROADS, PARKS OR FOOTPATHS.
- DO NOT OPERATE IN WET/ICY SURFACES OR INCLEMENT WEATHER CONDITIONS. I.E.- RAIN, SNOW, MUD AND PUDDLES.
- DO NOT OPERATE THIS VEHICLE AFTER CONSUMPTION OF ALCOHOL OR DRUGS, RECREATIONAL OR OTHERWISE.
- DO NOT RIDE WITHOUT PROPER TRAINING, AT HIGH SPEEDS, ON UNEVEN TERRAIN OR ON SLOPES.
- DO NOT USE IN OR NEAR OTHER VEHICLES.
- AVOID USING AT NIGHT OR IN TIMES OF REDUCED LIGHT OR VISIBILITY.
- OWNERS MUST ABIDE BY ALL LOCAL LAWS APPLICABLE TO SCOTER USAGE.
- STORE INDOORS WHEN NOT IN USE.

SPECIFICATIONS

BG-ES-09-700 SERIES

SIZE & WEIGHT

UNFOLDED	42.75 X 19 X 47.16 INCHES
FOLD	42.75 X 19.01 X 19.09 INCHES
NET WEIGHT	APPROXIMATELY 35 LBS(16KG)

RIDING REQUIREMENTS

MAXIMUM LOAD	APPROXIMATELY 242 LBS(110KG)
REQUIRED HEIGHT	47.24-78.74 INCHES

MAIN PARAMETERS

BATTERY CAPACITY	36V, 10.4AH
MAXIMUM SPEED	20 MPH (32.18 KM/H)
TYPICAL RANGE	APPROXIMATELY 20-25 MILES (ACCORDING TO RIDER WEIGHT AND DIFFERENT ROAD CONDITION)
WHEEL SIZE	9 INCH (FRONT & REAR)
MAXIMUM ANGLE OF CLIMB	16°
OPERATING TEMPERATURE	-10-40°C
STORAGE TEMPERATURE	-20-50°C
IP RATING	IP54

SCOOTER MATERIAL

FRAME	MAGNESIUM ALLOY
POLE	ALUMINIUM ALLOY
PLASTIC PARTS	PC ABS (ANTIFLAMING)
TIRES(FRONT&REAR)	9" FLAT-FREE TIRES(PU FOAMED INNERTUBE)

BRAKE

FRONT	MECHANICAL DRUM BRAKE
REAR	E-ABS ELECTRONIC BRAKE
BRAKE HANDLING	LEFT MECHANICAL BRAKE LEVER

MOTOR

TYPE	BRUSHLESS DC MOTOR (REAR DRIVE)
RATED POWER	350W
MAX. POWER	700W

BATTERY

TYPE	18650 LITHIUM BATTERY CELLS
NOMINAL VOLTAGE	36 VDC
CHARGING VOLTAGE	42 VDC
NOMINAL CAPACITY	360WH(36V, 10.4AH)
MAX. CONTINUOUS DISCHARGE CURRENT	15A
CHARGING HOURS	APPROXIMATELY 4 HOURS
CHARGING TEMPERATURE	0-40°C
BMS (BATTERY MANAGEMENT SYSTEM)	OVER-HEATING, SHORT CIRCUIT, OVER-CURRENT AND OVER-CHARGE PROTECTION

CHARGER

OUTPUT VOLTAGE	DC 42V 2A
INPUT VOLTAGE	AC 100-240V~ 50/60HZ
OUTPUT CURRENT	2A

LIGHT

FRONT LIGHT	LED LIGHT 12V
TAIL LIGHT	LED LIGHT 12V
DUAL TURNING SIGNALS	ON HANDLE GRIP AND REAR FENDER
AMBIENT LIGHT	LEFT AND RIGHT SIDE
LOGO PROJECTION LIGHT	ON REAR FENDER

OTHER FEATURES

BELL	LEFT THUMB MECHANICAL BELL
RIDING MODE	1: SPEED LIMIT MODE(12 MPH) 2: STANDARD MODE (15 MPH) 3: SPORT MODE(20 MPH)
CRUISE CONTROL	LONG-PRESS OF THE POWER THROTTLE FOR MORE THAN 6 SECONDS
LED DISPLAY	DISPLAYS SPEED, MODE, BATTERY POWER, CRUISE CONTROL AND HEADLIGHT.

CERTIFICATIONS

UL 2272/CE/FCC/IP54

DECLARATION

1:AN ELECTRIC SCOOTER IS A SPORT AND ENTERTAINMENT TOOL, NOT A TRANSPORTATION VEHICLE. HOWEVER ONCE YOU DRIVE IT INTO A PUBLIC AREA, IT WILL ALSO HAVE THE PROPERTY OF A TRANSPORTATION VEHICLE, AND YOU NEED TO LEARN TO MASTER RIDING SKILLS. WE SHALL NOT BE LIABLE FOR ANY CASUALTIES OR LOSSES CAUSED BY DRIVERS' INEXPERIENCE OR FAILURE TO FOLLOW THE INSTRUCTIONS IN THIS USER MANUAL.

2:PLEASE ACKNOWLEDGE A PEDESTRIAN'S RIGHT OF WAY WHEN OPERATING THE SCOOTER. SLOW DOWN WHEN PASSING BEHIND PEDESTRIANS, STAY ALERT DURING DRIVING, DRIVE AT LOW AND MEDIUM SPEEDS ON UNCONVENTIONAL COMPLEX ROADS SUCH AS POTHOLES AND SMOOTH SURFACES, AND MAINTAIN A REASONABLE AND SAFE DISTANCE FROM OTHERS AND VEHICLES.

3:WHEN DRIVING IN COUNTRIES AND REGIONS WHERE THERE ARE NO RELEVANT NATIONAL STANDARDS AND REGULATIONS FOR ELECTRIC SCOOTERS, YOU MUST STRICTLY ABIDE BY THE SAFETY REQUIREMENTS OF THIS MANUAL FOR RIDERS. THE MANUFACTURER IS NOT RESPONSIBLE FOR DIRECT AND JOINT LIABILITIES FOR ALL FINANCIAL, PERSONAL LOSSES, ACCIDENTS, LEGAL DISPUTES, AND ALL OTHER UNFAVORABLE EVENTS THAT CAUSE CONFLICTS OF INTEREST CAUSED BY THE USE BEHAVIORS THAT VIOLATE THE INSTRUCTIONS IN THIS MANUAL.

4:REFRAIN FROM ALLOWING THE USE OF THE ELECTRIC SCOOTER TO ANYONE WHO IS NOT EXPERIENCED WITH OPERATING IT. PLEASE WEAR SAFETY PROTECTIVE GEAR BEFORE USE.

5:PLEASE PERFORM A BASIC INSPECTION OF THE ELECTRIC SCOOTER BEFORE EACH DRIVING TRIP. IF YOU FIND ANY ABNORMALITIES SUCH AS OBVIOUS LOOSE PARTS, SIGNIFICANTLY REDUCED BATTERY LIFE, SLOW TIRE LEAKS OR EXCESSIVE WEAR, ABNORMAL STEERING NOISE OR MALFUNCTION, PLEASE STOP USING IT IMMEDIATELY AND POWER OFF. DO NOT DRIVE FORCIBLY. AND PLEASE CONTACT THE AFTER-SALES SERVICE PHONE TO OBTAIN PROFESSIONAL GUIDANCE OR REPAIR AND MAINTENANCE SERVICES.

6:DO NOT USE ALCOHOL, GASOLINE, KEROSENE OR OTHER CORROSIVE CHEMICAL SOLVENTS TO CLEAN THE ELECTRIC SCOOTER, AND IT IS FORBIDDEN TO USE A PRESSURE GUN TO SPRAY AND WASH, OTHERWISE IT MAY GET AN ELECTRIC SHOCK OR CAUSE SERIOUS FAILURE DUE TO INTERNAL WATER.

7:DO NOT USE OTHER TYPES OR BRANDS OF BATTERY PACKS, DO NOT TOUCH THE BATTERY CONTACTS, AND DO NOT DISASSEMBLE OR PUNCTURE THE SHELL. AVOID METAL OBJECTS CONTACTING THE BATTERY CONTACTS AND CAUSING SHORT CIRCUITS. OTHERWISE, IT MAY RESULT IN BATTERY DAMAGE OR PERSONAL INJURY.ONLY USE THE ORIGINAL CHARGER TO CHARGE, OTHERWISE THERE IS A DANGER OF DAMAGE OR FIRE.

8:DO NOT PLACE THE ELECTRIC SCOOTER OR ITS BATTERY PACK IN A CAR EXPOSED TO EXCESSIVE HEAT FROM HIGH TEMPERATURES. IT IS FORBIDDEN TO PUT THE BATTERY PACK INTO A FIRE, OTHERWISE IT MAY CAUSE THE BATTERY TO FAIL, OVERHEAT, AND EVEN CAUSE A RISK OF FIRE. WHEN DON'T USE SCOOTER FOR MORE THAN 30 DAYS, PLEASE FULLY CHARGE IT FIRST, STORE IN A COOL AND DRY PLACE, AND FULLY CHARGE IT EVERY 60 DAYS, OTHERWISE THE BATTERY MAY BE DAMAGED AND THIS DAMAGE IS NOT COVERED BY THE WARRANTY.

9:ONLY USE THE PARTS AND ACCESSORIES APPROVED BY US,PLEASE DO NOT MODIFY YOUR ELECTRIC SCOOTER WITHOUT AUTHORIZATION. DAMAGE TO THE ELECTRIC SCOOTER CAUSED BY UNAUTHORIZED MODIFICATION IS NOT COVERED BY THE WARRANTY. WEWILL NOT BEAR ANY RESPONSIBILITY FOR PROPERTY LOSSES, PERSONAL INJURIES, ACCIDENTS, ETC. CAUSED BY UNAUTHORIZED MODIFICATION.

HIGHLIGHTS



700W MAX POWER
MOTOR SPEED



THREE SPEED
MODES



36V/10.4 AH
LITHIUM ION



BATTERY RANGE
20-25 MILES



SAFETY
BELL



UL-2272 CERTIFIED
OVERCHARGE PROTECTION

HIGHLIGHTS



ELECTRONIC
CRUISE CONTROL



MAGNESIUM ALLOY
STRUCTURE



MAXIMUM
SPEED



FRONT & REAR
TURN SIGNAL



242 LB MAXIMUM
WEIGHT CAPACITY



9" WHEEL
DIAMETER

WARRANTY



FOR WARRANTY INFORMATION, PLEASE VISIT US AT
BUGATTISCOOTERSNA.COM

90 DAY LIMITED WARRANTY

FCC STATEMENT

NOTE: THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION.

THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION.

IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.







BYTECH®

- for -



BYTECH®
THE ART OF TECHNOLOGY

2585 WEST 13TH ST
BROOKLYN, NY 11223
BYTECHINTL.COM
©2023 BYTECH NY INC

BUGATTISCOOTERSNA.COM

MANUFACTURED BY BYTECH NY INC.
THE BUGATTI LOGO AND BUGATTI WORDMARK
ARE TRADEMARKS OF BUGATTI INTERNATIONAL S.A.
AND ARE USED UNDER LICENSE.

PATENTS PENDING: USD 29/836,810, AND
ADDITIONAL PATENTS/PATENT APPLICATIONS
LISTED ON WWW.BYTECHINTL.COM/PATENTS