

IWS Dripper

Instructions

All Dripper Systems

Components	Detail	
Control Unit	1 per System	
Straight Connectors	6 per control unit	
Stands	Small or Large	
*4 Way Manifold	2	
*Elbow	1	
*Tee	1	
*Тар	1	
*Black - Pressure Compensation Dripper	8 for soil or coco	
*Blue - Free Running Dripper	8 for pebbles	
*Dripper line	8 (1 metre long)	

^{*}Number of items in a Dripper kit bag, each kit bag is for 4 pots. To increase the size of your system, request a '4-Pot Dripper Kit' from your local retailer.

Standard System

Components		Detail		
*STD Glands		7, one per fitting		
*STD Tees		3		
*STD Elbows		4		
IWS Standard Pipe	4-8 Pots 12-28 Pots	15m 30m	32-36 Pots 40-48 Pots	45m 60m
IWS Pro Pipe	4-8 Pots 12-20 Pots	5m 10m	24-32 Pots 36-48 Pots	15m 30m

Pro System

Components		Detail			
*PRO Tees		3			
*PRO Elbows	*PRO Elbows		4		
*PRO Washers		14			
*PRO Locknut		7			
IWS Pro Pipe	4 - Pots 8 - Pots 12 - Pots 16-20 Pots	10m 15m 30m 35m	24-28 Pots 32-40 Pots 44 - Pots 48 - Pots	40m 45m 50m 60m	

^{*}Number of items in a kit bag, each kit bag is for 4 pots. To increase the size of your system, request a Pro or Standard '4 Pot Autodrain/Dripper Add-on Kit' from your local retailer.

Setting Up Your System:

 Lay out your stands in the position you want them to be in, remember to take into account the space required between stands for your plants to mature comfortably.

It is essential that your growing area is on even ground and the stands are level with one another and the control unit.

For Standard Systems go to step **2**. for Pro Systems go to step **3**. (then continue to step **4**).

2. Standard System:

Removing the locknut and one of the washers from the gland, push the thread of the gland through from the outside of the stand.

Replace the washer and locknut on the inside of the stand and tighten. This can be nipped tight with a spanner to ensure a watertight seal. Loosen the gland nut, then insert the fitting (elbow or tee) into the gland and tighten the nut.

Use an even number of lanes on the control unit. This will enable you to seal any unused lanes by attaching a small length of IWS Standard (STD) Pipe from one lane to another.












IWS Dripper Instructions

3. Pro System:


Place one washer over the threaded end of the fitting (tee or elbow). Push the threaded end of the fitting through the stand from the outside. Place another washer over the threads of the fitting inside the stand and fix with the locknut. This can be nipped tight with a spanner to ensure a watertight seal.

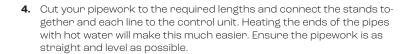

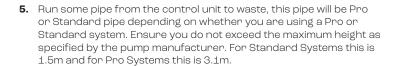

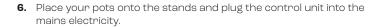

Note: IWS do not supply pots as standard with Dripper systems. Small stands are suitable for pots up to 20l, and large stands are suitable for pots up to 39l.

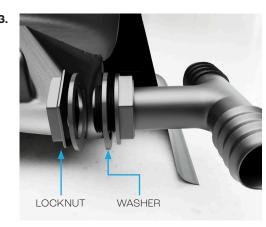







6.



IWS Dripper Instructions

Setting Up The Drippers:

1. Set up your FlexiTank using the supplied instructions.




1.

IWS DRIPPER PIPE


2. Connect the IWS Pro pipe to the FlexiTank. Use hot water to warm the pipe to make the process easier. Depending on the number of pots and the location, cut the pipe to your desired length. If you are using more than one run you should aim to make the runs equal in length and supply the same number of pots. The maximum number of pots should not exceed 48.



3. Fit a manifold to the pipe located between a pair of pots. Cut the pipe and connect each end to the manifold, use hot water to warm the pipe to make the process easier.

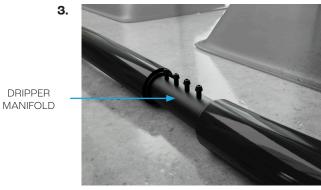


4. Connect the dripper line to the manifold, use hot water to warm the line to make the process easier. Then connect the other end of the dripper line to the drippers.

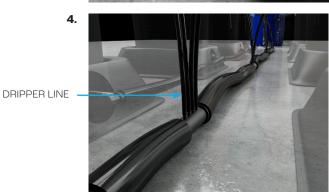



IWS Dripper Instructions


5. Then push the drippers into your pot media use two drippers per

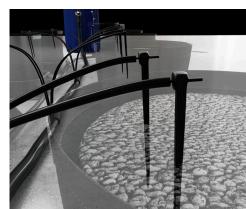

5.

7.

6. Terminate the run of pipe with the tap. Use hot water to warm the pipe to make the process easier.

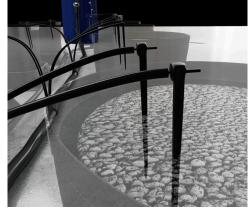

7. Fill the FlexiTank with nutrient solution and plug in the pump. Check for leaks and make sure each dripper is working.

