

How To Adjust The Grinder Settings



Step 1

Put your spice of choice in the designated opening.

Step 2

Choose your setting. For a fine result, tighten the adjustable turnplate. For a coarse result, loosen the adjustable turnplate.

Step 3

Reset the Peppermill by rotating the handle (in the direction towards you).

Step 4

Rotate the handle forward after resetting to start grinding your spices.

*Please make sure this part is not loose. Push the cap down to prevent the cap from falling off.

