

CHILD INFORMATION
(KEEP WITH CAR SEAT AT ALL TIMES IN CASE OF EMERGENCY)

NAME:

.....

DATE OF BIRTH (DD/MM/YYYY):

.....

ADDRESS:

.....

.....

.....

ALLERGIES/MEDICAL CONDITIONS:

.....

.....

EMERGENCY CONTACT 1:

NAME:

.....

PHONE NUMBER:

.....

EMERGENCY CONTACT 2:

NAME:

.....

PHONE NUMBER:

.....

● 76cm-150cm



EVEREST i-Size

EST - 22



Instruction Manual

Instruction Manual

We are delighted to provide you with our child car seat, which will ensure your child's safety throughout this new stage of their life.

To ensure your child is protected correctly, it is imperative that this child car seat is always used and installed in accordance with the instructions provided herein. If you have any further inquiries about the usage of this child car seat, please reach out to the retailer or manufacturer.

BABY CAR SEAT

  i-Size universal ISOFIX
76cm-105cm/≤18kg
i-Size Booster seat
100cm-150cm



Contents



Safety instruction	03-04
Applicability	05
Seat adjustment	06
Installed inside the car	07-11
Child seat maintenance	12-13

WARNINGS

- Ensure that any straps securing the restraint to the vehicle are tightly fastened. The support leg should be in contact with the vehicle floor. Adjust any straps or impact shields restraining the child to fit their body properly. Additionally, make sure that the straps are not twisted.
- To guarantee proper usage, it is crucial to wear any lap strap in a low position. Additionally, it is essential to replace the ECRS (Enhanced Child Restraint System) if it has experienced severe stress during an accident.
- Making any modifications or additions to the device without the approval of the Type Approval Authority is dangerous. Similarly, not closely following the installation instructions provided by the child restraint manufacturer poses a risk.
- Please ensure that children are never left unattended in their Enhanced Child Restraint Systems (ECRS).
- Ensure that any luggage or objects that could potentially cause injury in the event of a collision are securely fastened.
- Do not use the Enhanced Child Restraint System without the cover
- It is essential to use the Enhanced Child Restraint System with the cover in place.
- Ensure that you do not replace the ECRS cover with any other cover that is not recommended by the manufacturer. The cover is an integral part of the restraint's performance and should not be substituted.
- Please consult the vehicle manufacturer's handbook for instructions on using an "i-Size ECRS" (Enhanced Child Restraint System).
- When the child restraint is used for children with a height above 135 cm, please note that it may not fit in all approved vehicles.




Use in car

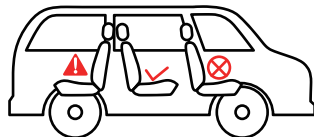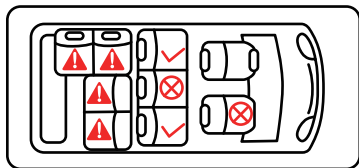

You can refer to the provided pictures to correctly use your child car seat.

⚠ WARNING


The use of the 2-point belt system is prohibited. Please ensure that you utilize the 3-point belt system for installation. European Union ECE 16 or the same standard using this child seat. Ensure that the car belt conforms to the European Union ECE 16 standard or an equivalent standard.

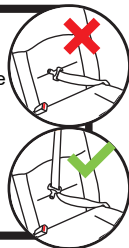


✓ : Suggested vehicle seat ✗ : Do not suggest vehicle seat

⚠ : forbidden vehicle seat

Head adjustment and range of use

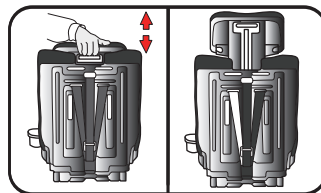


Adjust the Headrest by pulling the handle ⑦ up or down to the desired position based on the child's height: For heights between 100-150cm or 76-105cm.

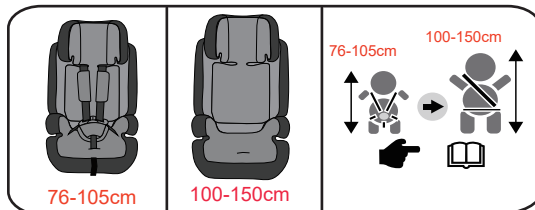


To adjust the headrest, continuously press the headrest adjust handle while simultaneously pulling it up or pushing it down. Ensure that the shoulder strap is positioned at the same level as, or slightly higher than, the child's shoulder.

ISOFIX and Top tether

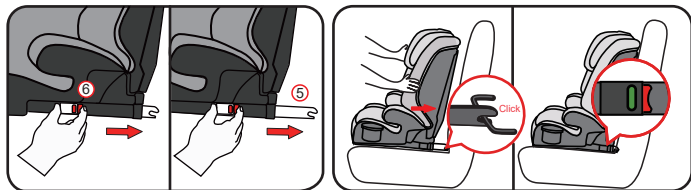


Please press the ISOFIX release button and extend the ISOFIX to its maximum length.

Gently push the seat back until you hear a clicking sound, while simultaneously observing the indicator turning green.

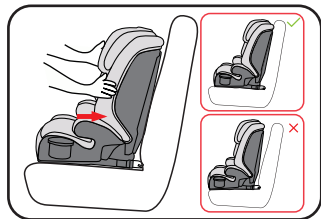

To ensure a secure connection between the seat and the vehicle's seat back, exert pressure and give the seat a gentle shake. Confirm that the indicator remains green once the installation is complete.

ISOFIX and Top tether

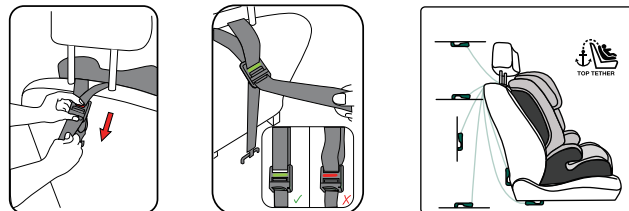

Pull out the child car seat's top tether to the longest

Extend the child car seat's top tether to its maximum length. Attach the top tether hook to the anchor point specified in your vehicle's instruction manual.

CAUTION! Ensure that you are not utilizing luggage hooks in place of the designated top-tether anchor points.

Please locate the symbol indicated in your vehicle. Proceed to tighten the top tether until the belt tension indicator turns green and the top tether is securely tightened.

Installed inside the car

For size range: 75 – 105 cm, installation method A: ISOFIX +
Top tether + Harness system




To release the harness system, use one hand to continuously press the harness adjusting device while using the other hand to pull out the shoulder belt completely.

Attention! Avoid pulling the shoulder pad. To open the buckle, press the red button on the buckle. Separate the shoulder belts and position them on both sides of the child seat.

Position the shoulder belt on both shoulders of the child. Close the left and right buckle clips and insert them into the buckle slots. Once you hear a "click" sound, tighten the belts as much as possible while ensuring the child's comfort.

Installed inside the car

Seat belt system concealment

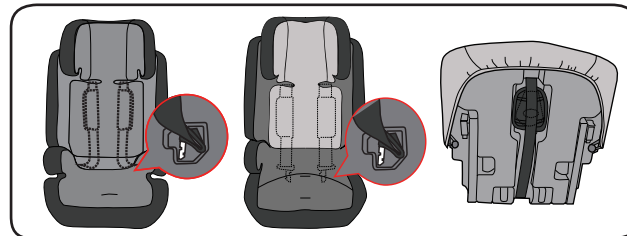

Unfasten the harness system and insert the shoulder belt of the harness system into the back cover on the back of the child seat. Next, place the child seat buckle into the groove located beneath the child seat base.

Installed inside the car

For Height range: 100 – 150 cm, installation method B1:
ISOFIX + 3-point safety belt



1. Follow the ISOFIX operation to securely attach the ISOFIX.
2. Position your child in the child seat and adjust the headrest to align with the child's shoulders. Pull the 3-point safety belt around the child, ensuring that the shoulder belt passes through the shoulder belt guide. Lead the lap belt above the child's hips and attach it to the appropriate position on the lap belt hook.
3. Finally, fasten the vehicle safety belt. When you hear a click, it indicates that the vehicle safety belt is correctly fastened. Also, ensure that the shoulder belt passes through the shoulder belt guide.


For Height range: 100 – 150 cm, installation method B2:
3-point safety belt



Place your child in the child seat and adjust the headrest to align with their shoulders. Pull the 3-point safety belt around the child, ensuring that the shoulder belt passes through the shoulder belt guide. Lead the lap belt above the child's hips and attach it to the appropriate position on the lap belt hook. Fasten the vehicle safety belt and listen for a click, indicating that it is securely fastened. Additionally, double-check that the shoulder belt passes through the shoulder belt guide.

Child seat maintenance

Remove the cover

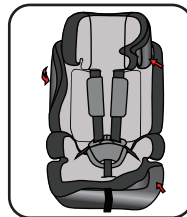

To remove the cover from the child seat, start by releasing the elasticated edges of the cover from the seat. This will allow you to easily remove the cover.

Cleaning

Cleaning the seat

You can clean the plastic parts by gently wiping them with mild detergent and warm water. However, avoid using chemical cleaners or bleach on the harness straps. After cleaning, make sure to dry the components thoroughly before using them again.



It is crucial to use the original fabric cover as it plays a vital role in the proper operation of the system. You have the option to contact the retailer, agent, or manufacturer for assistance in obtaining new fabric covers. They can provide further guidance and support regarding the replacement process.

Child seat maintenance

The fabric cover can be safely washed in a washing machine using mild detergent at a temperature of approximately 30 degrees. Please make sure to carefully read the washing label on the fabric cover. If the water temperature exceeds 30 degrees, there is a possibility that the fabric color may fade. Avoid drying the fabric cover by squeezing or using a washing machine, as it may cause disassembly of the sponge within the fabric. The plastic components of the child seat can be cleaned with soap. It is important to refrain from using strong cleaners such as solvents to wash them.

Warranty

The warranty is valid for a period of 24 months starting from the date of purchase. Please note that this warranty is applicable only to the original buyer and is non-transferable. It is specifically meant for products that do not already have an existing warranty. In the event of any defects in the product, the consumer should return it to the retailer along with a comprehensive and detailed description of the problem, as well as a valid proof of purchase. The retailer will then send the product back to the manufacturer. Please be aware that the product cannot be replaced or returned after it has undergone maintenance. Furthermore, the warranty does not get extended as a result of maintenance. The manufacturer will only take responsibility for damaged products if the issue is related to the product's quality.

Below situations can not warranty

Please refrain from providing the manufacturer with an incomplete or invalid purchasing receipt.

To avoid any product defects, it is crucial to strictly follow the instructions provided in the manual and operate or maintain the product correctly

The label containing the product series number has been damaged or erased.

The product undergoes normal wear and tear during daily use.

The warranty requirements and requested criteria were not fulfilled.