

CHILD INFORMATION
(KEEP WITH CAR SEAT AT ALL TIMES IN CASE OF EMERGENCY)

NAME:

.....

DATE OF BIRTH (DD/MM/YYYY):

.....

ADDRESS:

.....

.....

ALLERGIES/MEDICAL CONDITIONS:

.....

.....

EMERGENCY CONTACT 1:

NAME:

.....

PHONE NUMBER:

.....

EMERGENCY CONTACT 2:

NAME:

.....

PHONE NUMBER:

.....



Tristan i-Size

EST - 542
Instruction Manual

Contents

1. Important notice	01
2. Features	03
3. Using the car seat in the vehicle	04
4. Installation - children who's stature is	06
4-1 76cm-105cm(≤18kg)	06
4-2 100cm-150cm	07
4-3 100cm-150cm	09
5. Adjusting and using the child car seat	10
5-1 Recline position adjustment	10
5-2 Harness adjustment	10
5-3 Headrest adjustment	11
5-4 Fitting and removing the 5-point harness system	12
5-5 ISOFIX installation and removal	14
5-6 Top Tether installation and removal	16
6. Child car seat cover removal and refitting	18
6-1 Cover Removal	18
6-2 Cover Refitting	19
7. Cleaning and maintenance	20
8. Notice	20
9. Steps to take after an accident	21
10. Warranty	21

1. Important Notice



1. This child car seat is suitable for child's who's stature is 76cm-105cm/≤18kg i-Size-universal ISOFIX, 100cm-135cm i-Size booster seat, 135cm-150cm Specific Vehicle booster seat.
2. Locate the instruction manual from the net bag inside the back cover of the child seat and read carefully.
3. Please read the instruction manual carefully before installation. Serious injury may occur if installed incorrectly. The manufacturer will not take responsibility for any risks in this case.
4. Never use the child car seat without the cover. Never use any cover which is not recommended by manufacturer to replace an old cover, because the cover constitutes an integral part of the child car seat performance.
5. When the child car seat is not provided with a textile cover, the chair should be kept away from direct sunlight, otherwise it may be too hot for child's skin.
6. The customer is advised not to use the child car seat in seating positions where there is an active frontal airbag installed.
7. The child car seat should be replaced when it has been subject to violent stresses in an accident.
8. Please ensure all passengers in the vehicle use safety belts, goods in the vehicle must be fixed down, otherwise the passengers and goods may injure the child in the event of an emergency.
9. The buckle should not be in a semi-locked status. Always confirm the child car seat buckle is locked before using. So that in an emergency the child can be taken out quickly.
10. Don't make any changes to the harness system in the child car seat, this could seriously affect the security and functionality.
11. It is dangerous to make any alterations or additions the child car seat without the approval of the Type Approval Authority. It's also dangerous to not closely follow the installation instructions provided by the child car seat manufacturer.
12. Ensure that children are not left in their car seat unattended.
13. Keep the child seat away from any corrosive substances.

14. Always keep the child car seat secured in the vehicle even when it is unoccupied and ensure that children are not left in their child car seat unattended.
15. DO NOT use a second hand child car seat.
16. It is important to ensure that any lap strap is worn low down so that the pelvis is firmly engaged.
17. Any straps holding the child car seat to the vehicle should be tight, and any straps restraining the child should be adjusted to be suitable to the child's body. Ensure that the straps are not twisted.
18. Do not use any load bearing contact points other than those described in the instructions and marked in the child car seat.
19. Do not use the child car seat in a forward-facing position when the child's stature is less than 76cm.
20. The instructions can be retained on the child car seat for it's life time, ensure to take good care of the manual.
21. The rigid items and plastic parts of the child car seat must be located and installed so that they are not liable, during everyday use of the vehicle, to become trapped by a movable seat or in the door of a vehicle.
22. The child car seat should only be used in a forward facing position when in use.
23. Any luggage or other objects liable to cause injuries in the event of a collision should be properly secured.
24. If you have any questions about the use and installation of the child car seat, please contact the manufacturer or retailer.
25. The child car seat should not be used without the cover.
26. Prior to installing the child car seat the user should refer to the vehicle manufacturer's handbook.

"IMPORTANT - DO NOT USE BEFORE THE CHILD'S AGE EXCEEDS 15 months.

2. Features


- 1 Headrest
- 2 Shoulder Belt Guide Hook
- 3 Shoulder Pads
- 4 Instruction Manual Pocket
- 5 Inner Cushion (Stature less than 87cm)
- 6 Harness Adjusting Button
- 7 Harness Adjustment Strap
- 8 Recline Adjustment Handle
- 9 Headrest Adjustment Handle
- 10 Headrest Adjustment Handle Cover
- 11 Shoulder Strap
- 12 Buckle
- 13 Buckle Pad
- 14 2nd Lock Button
- 15 Lower Belt Guide Slot
- 16 Top Tether Pocket
- 17 Seat Back Pocket
- 18 Top Tether Strap
- 19 Top Tether Hook
- 20 ISOFIX
- 21 ISOFIX Adjustment strap
- 22 ISOFIX Insert Guides
- 23 ISOFIX 2nd Lock Button
- 24 ISOFIX Release Button

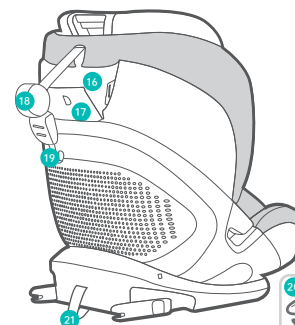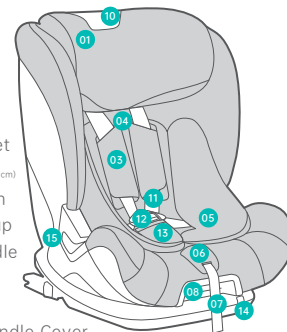

3. Using the car seat in the vehicle

⚠ Danger! DO NOT use on a passenger seat with an active airbag. If hit by the airbag, death or serious injury may occur.

In order to properly protect your child, please read the instruction manual carefully.

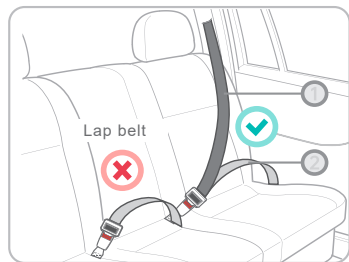


✔ Correct / suitable

✘ Wrong / not suitable

① Car seat belt–shoulder belt


② Car seat belt –lap belt

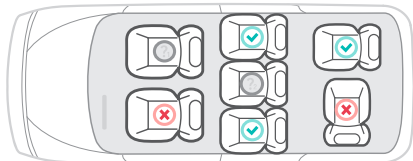

- ① The child car seat should not be used in the front passenger seat with an airbag.
- ② Child car seat can only be used here with the shoulder belt and lap belt both equipped.

Vehicle seat ISOFIX anchor fitting

Before using the ISOFIX and Top Tether, make sure the vehicle is equipped with ISOFIX and top tether anchor points. Only when the anchor points are located and match can the child car seat be installed.

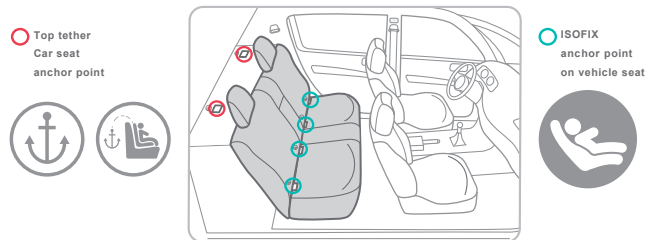

Read the vehicle user manual to check whether the vehicle seats are equipped with ISOFIX anchors and whether the recommended ISOFIX type match the car seat ISOFIX size.

4. Installation

4-1 76cm-105cm(≤18kg)


ISOFIX + top tether + harness system




1. Take the top tether strap 18 and top tether hook 19 from the Seat Back Pocket 17, and then close it.
2. Pull the ISOFIX adjustment strap 21 to pull the ISOFIX 20 out, until you hear a "Click".

! Notice


The end of the ISOFIX strap should be pulled when adjusting the ISOFIX.

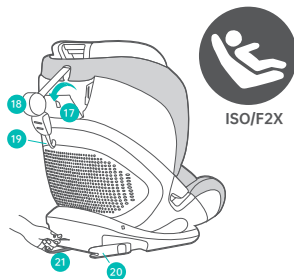

3. Fit ISOFIX 20 onto the anchor point of vehicle seat (see 5-5), make sure it is locked. Press the 2nd lock button 14 and push towards the vehicle seat, to ensure that the back of the child seat is closely positioned against the vehicle seat back.

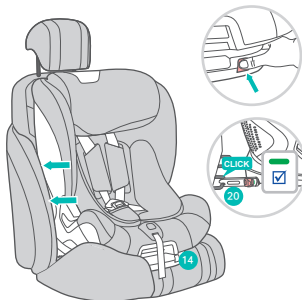

4. Fit the Top Tether Hook 19 onto the vehicle anchor point according to the vehicle manual, make sure the straps are tightened. (see details 5-6)
5. Fit the child in the car seat with 5 point harness system. (see details 5-4)

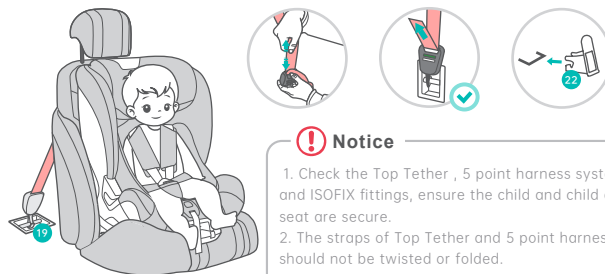

! Notice

1. Check the Top Tether , 5 point harness system and ISOFIX fittings, ensure the child and child car seat are secure.
2. The straps of Top Tether and 5 point harness should not be twisted or folded.
3. The inner cushion is required if the child's height less than 87cm.
4. Use ISOFIX insert guides 22 for an easier installation.

4-2 100cm-150cm

ISOFIX+Vehicle 3 Point seat belt




Hide the 5-point harness system when using the child car seat to fit the child in this height range. (see 5-4)

1. Pull the ISOFIX adjustment strap 21 to pull the ISOFIX 20 out, until the you hear a "CLICK".




! Notice





The end of the ISOFIX strap should be pulled when adjusting the ISOFIX.

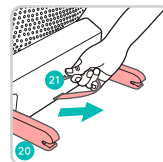

2. Fit the ISOFIX 20 onto the anchor points on the vehicle seat (see 5-5), ensure that the back of the child seat is closely positioned against the vehicle seat back.

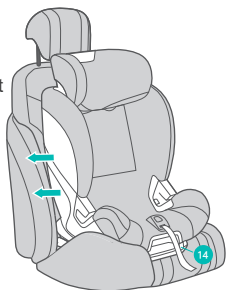

3. Feed the vehicle shoulder belt S through the shoulder belt guide hook 02 and across the child's shoulder.
4. Feed the vehicle lap belt T through the lower belt guide.
5. Feed both the shoulder and lap belt through the lower belt guide Slot 15 on the other side on seat base, and insert the tongue into the buckle.

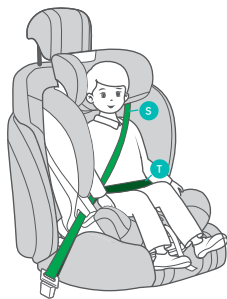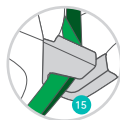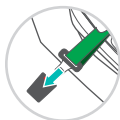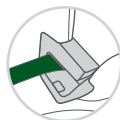

! Notice


1. The vehicle belt must not be twisted or folded.
2. Ensure the vehicle lap belt goes across the child's pelvis. This must restrain child's pelvis properly.
3. Check the ISOFIX and vehicle seat belt fitting, ensure that the child and child car seat are secure.
4. Use the ISOFIX guides 22 for easier installation.

4-3 100cm-150cm




Vehicle 3 Point Seat Belt



1. Push the car seat to ensure that the back of the child seat is positioned against the vehicle seat's back.

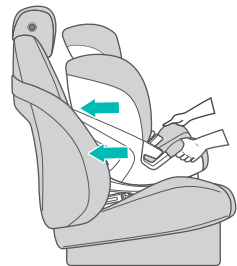

2. Feed the vehicle shoulder belt S through the shoulder belt guide hook 02 and across the child's shoulder.
3. Feed the vehicle lap belt T through the lower belt guide.
4. Feed both the shoulder and lap belt through the lower belt guide Slot 15 on the other side on seat base, and insert the tongue into the buckle.

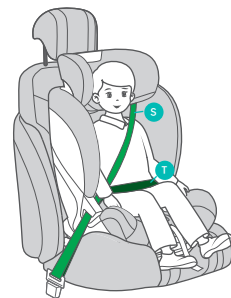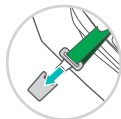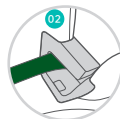


! Notice

1. The vehicle belt must not be twisted and folded.
2. Ensure the vehicle lap belt goes across child's pelvis. This must restrain the child's pelvis properly.
3. Check the vehicle seat belt fitting, ensure that the child and child car seat are secure.

5. Adjusting and using the child car seat

5-1 Recline position adjustment

Hold the seat base with one hand and adjust the recline position with recline adjustment handle 08 with your other hand. There are 3 positions in total, find the most suitable position for your child using the recline adjustment handle 08.

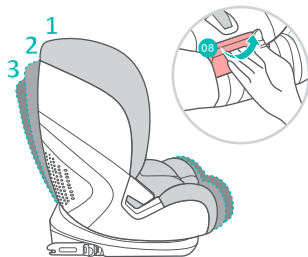


! Notice

Warning. Watch your fingers don't get pinched when adjust the position!

The child restraint may not fit in all approved vehicles when used in one of these positions.

5-2 Harness adjustment

Loosen: Press down the harness adjuster button 06 on the seat base with one hand and with the other hand grasp the two shoulder straps 11 (please don't pull the shoulder pads 03) and pull them away from the seat.

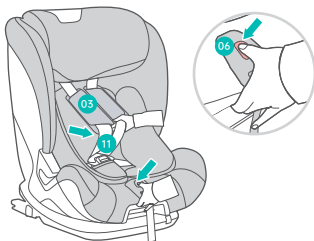

! Notice

Please operate the adjusting button 06 according to the picture.

Tighten: Grasp the adjustment strap 07 and pull forward.

! Notice

The height of the shoulder belt should be at the same level or a little higher than your child's shoulder.



5-3 Headrest adjustment

Pull up: Grasp and lift the headrest adjustment handle 09 on the top of the headrest.


Push down: Pull the headrest adjustment handle 09 at the top of the head rest and push down.

! Notice

1. Please loosen the shoulder strap 11 before fitting the child in the 5-point harness system. (See details in 5-2)
2. When using the 3-point vehicle belt, adjust the headrest height to fit your child.

! Notice

Headrest should be adjusted to the same level or a little higher than your child's shoulders.

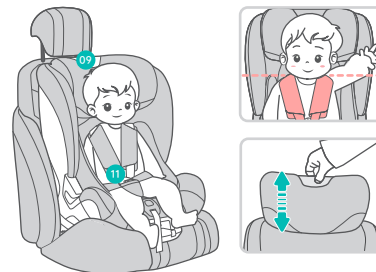

5-4 Fitting and removing the 5-point harness system

5-4-1 Fitting the child


1. Place the child in the child car seat, the shoulder strap 11 and the shoulder pad 03 goes above the child's shoulder, put the child's legs either side of the Buckle pad 13.

! Notice

If there is no shoulder pad 03 or Buckle pad 13, then the baby child car seat should not be used.



2. Put the right and left tongues B of the buckle together, and insert into the buckle 12, it is locked when a "CLICK" sound is heard. Pull the adjuster strap to tighten the shoulder belts. Adjust the shoulder strap 11 to a suitable length (please refer 5-2 to check how to adjust the shoulder belts).

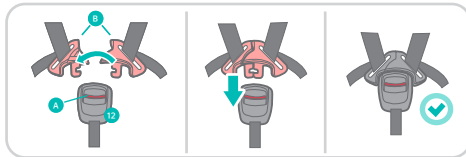

! Notice


Do not cross or twist the shoulder straps.

! Tips

Press the red button to release the buckle.




! Notice

Grasp the adjustment strap 07 and pull forward slowly. When there are two adult fingers worth of space between the shoulder pads 3 and the child, release the adjustment straps. This is the most suitable tightness for the shoulder straps.


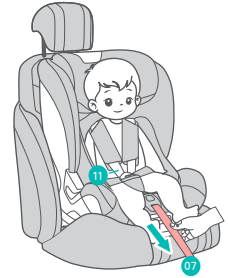


5-4-2 Hiding the 5 point harness belt

1. Loosen the shoulder straps 11 (refer to 5-2)
2. Press the red button A on buckle 12, release the buckle 12.
3. Remove the inner cushion 05 and the Buckle pad 13.
4. Remove the soft-goods from the child car seat and keep them in a secure location.

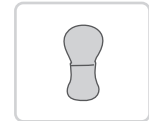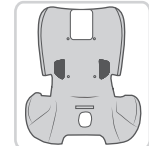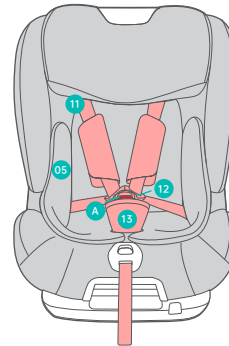


5. Move the buckle 12 through the back of the crotch pad hole, hide the buckle 12 in the buckle compartment V, and cover it.
6. Hide the shoulder pad 03, shoulder straps 11 and buckle inserts in the slots in each side of the car seat.
7. Put the covers back onto the seat once the 5 point harness is hidden.

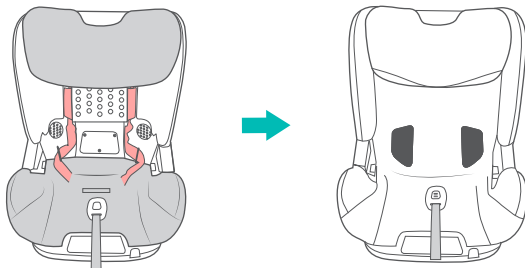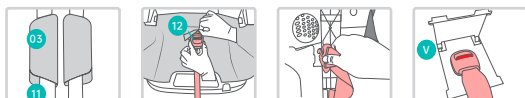

5-5 ISOFIX installation and removal

5-5-1 Fitting the ISOFIX in the car

1. If your vehicle is not equipped with the ISOFIX insert guides 22 as standard, clip the two insert guides provided with the cut-out facing upwards onto the two ISOFIX anchor points K of your vehicle.

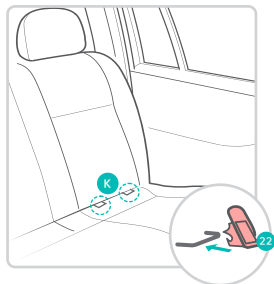


Tips

ISOFIX anchor point is between the seat and backrest.

2. Pull the ISOFIX adjustment strap 21, the ISOFIX 20 locking arm will be fully extended when you hear "CLICK".

Notice


The end of the ISOFIX strap should be pulled when adjusting the ISOFIX.

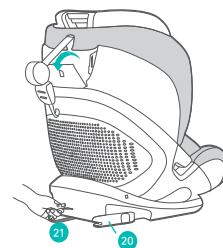


3. Push ISOFIX 20 into the insert guides, until the ISOFIX 20 locking arms engage on both sides. You should hear a "CLICK". Then use the same method for the other side.

Tips

The locking arms are only correctly engaged if both of the green safety buttons are completely green.

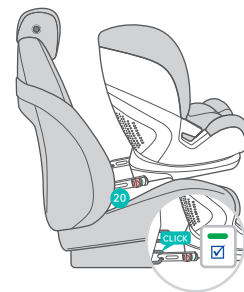


4. Press and hold the second lock button 14 and push the child seat towards the vehicle seat back.

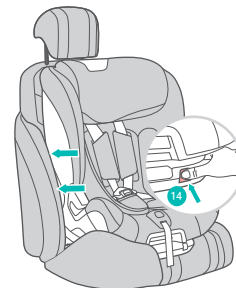

5-5-2 Release ISOFIX from vehicle


1. Press the ISOFIX second lock button 23 and ISOFIX release button 24 together, until the ISOFIX 20 separates from the vehicle seat.
2. Press the second lock button 14 (located at the front of the car seat base) and push the ISOFIX, until it retracts into car seat base.

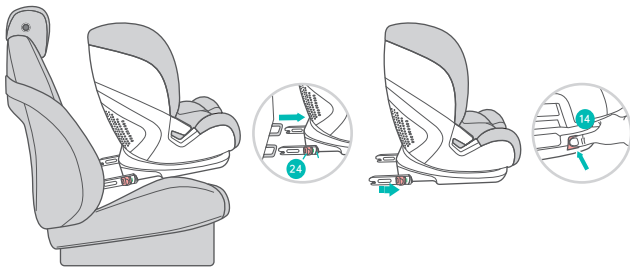


5-6 Top Tether installation and removal

5-6-1 The installation of the Top Tether

1. Open the seat back pocket 17, take out the top tether strap 18 and top tether hook 19 from the pocket.
2. Ensure the car seat is facing the driving direction.

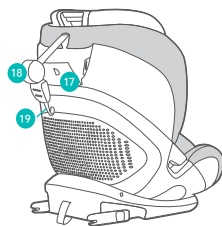

3. Press the button top tether N to adjust the top tether Strap 18.
4. The top tether strap 18 should go through the vehicle seat headrest.
Tip: Top tether strap 18 should go through the bottom of the headrest (if the headrest of the vehicle can not be adjusted, then the top tether should go over the top of the headrest)
5. Fit the Top Tether Hook 19 on the fitting anchor point according to the vehicle's manual, then tighten the top tether Strap 18. (When tightening the top tether, the indicator on the hook of the top tether will show green)

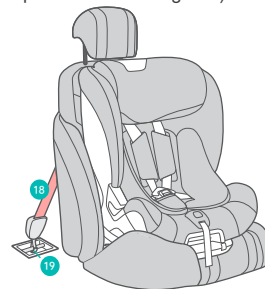

! Notice

Check the hook of the top tether is properly installed before each journey.

! Tips

Do not use the luggage hook instead of the top tether anchor point. Check the vehicle's user manual for the anchor symbol.





! Tips

When the anchor point of the top tether is on the car roof, please make sure that the top tether is not twisted after installation.




5-6-2 The removal of the Top Tether

1. Press the Top Tether Hook 19 and remove from the vehicle anchor point.

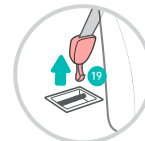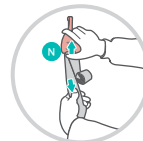


- Roll up the top tether strap 18, open the seat back pocket and store the top tether in the pocket 16 and close the seat back pocket 17.

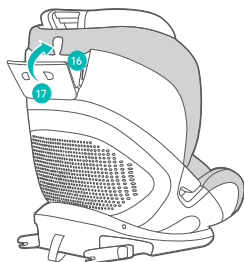

6-2 Cover Refitting

- Adjust the headrest to highest position.
- Put the headrest cover and seat cover on carefully.
- Install buckle pad 13 and inner cushion 05.

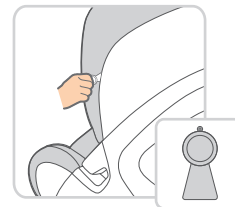


Tips

Use the cover dress tool R to make refitting easier

6. Child car seat cover removal and refitting

6-1 Cover Removal

- Loosen the shoulder straps 11 (see details 5-2)
- Press the red button A on buckle 12 to release the buckle 12.
- Remove the inner cushion 05 and the Buckle pad 13.
- Remove the headrest pad and seating pad from the shell.
- Remove the seat cover from the shell.

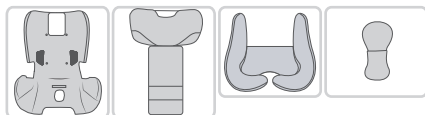

7. Cleaning and maintenance

Important notice:

The Fabric cover is an important part of child car seat for ensuring safety. Do not use the child car seat without the fabric cover and do not use a different fabric cover to replace the original one. This is dangerous for your child as the fabric covers are an integral part of the car seats functionality and security.

Washing instruction:

The fabric cover should be removed, washed in 30 degree water and line dried only. You can use soapy water and a wet dishcloth to clean the plastic parts of the seat. Do not use strong cleaners (such as solvents). Seat belts can be cleaned using soapy water.



Machine wash, cold



Do not bleach



Do not spin dry



Do not iron



Do not dry clean

8. Notice

Notice

This is an i-Size Enhanced Child Restraint System. It is approved according to UN Regulation No. 129, for use in, i-Size compatible vehicle seating positions as indicated by vehicle manufacturers in the vehicle user's manual.

If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

Notice

This is an i-Size booster seat Enhanced Child Restraint System. It is approved according to UN Regulation No.129, for use primarily in "i-Size seating positions as indicated by vehicle manufacturers in the vehicle user's manual.

If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer. Only suitable if the approved vehicles are fitted with 3 point safety-belts, approved to UNECE Regulation No. 16 or other equivalent standards.

9. Steps to take after an accident

After an impact, if the speed was greater than 10km/h, the child car seat should not be used and you should consult your insurer and retailer for further assistance.

10. Warranty

For the seat, we extend a warranty against defects in materials and workmanship for up to one year. The warranty period begins on the date of purchase.

A valid receipt is required for all claims.

The warranty covers a child car seat that has been handled properly and is returned in an orderly and clean condition.

The warranty does not cover:

- Normal wear and tear, and damage due to unreasonable use.
- Damages due to improper or inordinate usage.

Covers: All of our fabrics meet the highest standards regarding colourfastness against UV radiation. Nevertheless, all fabrics fade when exposed to UV radiation. This is not due to defective materials, but to normal wear and tear, which is not covered by the warranty.

Please contact the manufacturer immediately in the event of a warranty claim.