



Remix-CD50 Jukebox User Manual

Series 3 : // V1.0

Contents

1. Introduction	Pg 3
2. Important safety instructions	Pg 4
3. Taking delivery / Transit mode	Pg 7
4. Powering On/Off the jukebox	Pg 10
5. Raising/removing the title rack	Pg 10
6. Label magic	Pg 13
7. Inserting title cards	Pg 14
8. Loading compact discs	Pg 16
9. Playing the Jukebox	Pg 18
10. Connecting external audio devices	Pg 23
11. Adding additional speakers	Pg 24
12. Adjusting amplifier settings	Pg 26
13. Jukebox lighting adjustment	Pg 29
14. Bluetooth	Pg 30
15. Troubleshooting and error codes	Pg 32

Please note that this manual uses images from the traditional bar and throwback graphics. Although these graphics are interchangeable the components in the jukebox are exactly the same.



Introduction

Thank you for purchasing a Classic Jukebox from Sound Leisure, the world's premier Jukebox manufacturer. This product has been designed and built to give you many years of enjoyment and trouble free use.

This owner's guide provides all the information you will need to install and operate the Jukebox safely.

About Sound Leisure

Sound Leisure have been manufacturing Jukeboxes in Leeds, UK since 1978. The family owned and run business was originally formed by Alan Black and three generations of the family now work alongside a team of skilled craftsmen and women, all dedicated to manufacturing the finest Jukeboxes in the world.

Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has 2 blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only the cart, stand, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as if a power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.

Additionally

- This Jukebox contains high voltage & high temperature parts. Do not attempt to carry out any work that is not specifically instructed in this manual. If the Jukebox fails to operate correctly, switch off the machine and contact Sound Leisure.
- This Jukebox is heavy. DO NOT attempt to lift the unit.
- DO NOT attempt to move the Jukebox with the front glass/door open. The Jukebox is top heavy and may tip forward if moved with the front glass/door open.
- This appliance must be connected to a mains socket with a protective earth connection.
- The mains plug is the designated 'disconnection device' and as such should be readily operable.
- 'WARNING' To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- Fuses should be replaced like for like at all times.



High voltage

- Terminals marked with the symbol above are considered hazardous live and external wiring connected to these terminals requires installation by an instructed person or the use of ready-made contact leads.
- Jukebox contains transmitter module FCC ID : T9J-RN52
- Refer to Bluetooth section for more information.
- This Jukebox is approved for operation :
below 2000m elevation
between 0°C and 40°C


**FIG 1 :
Lock locations**



Main cabinet locks.

Coin insert and reject mechanism*

Cabinet Door Open with title rack in down position.

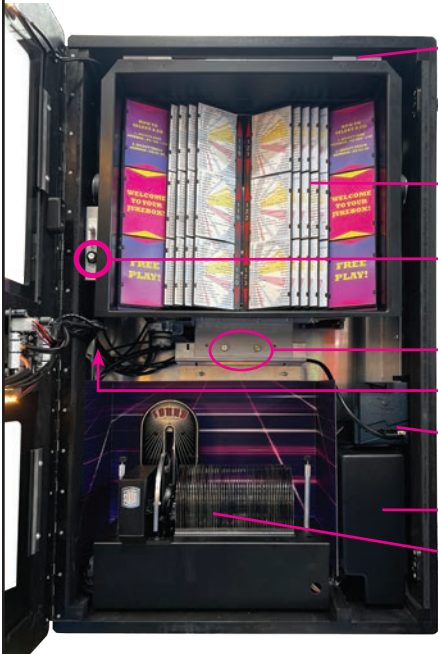

Title rack hinges

Title rack

RESET button

Title rack retaining thumb screws

Title rack control cable (release clip)

Coin mechanism *

Cash box *

CD Mechanism

* These items may or may not be fitted depending on home or commercial version

Taking Delivery / Transit Mode

Once the Jukebox has been positioned in its designated space the following instructions will allow you to prepare it for use. The keys to open the Jukebox will be found in the coin reject cup. The keys will open the side locks and the rear cabinet lock. See opposite page FIG 1.


Transit Mode

Upon delivery the Jukebox CD player mechanism will be locked in "Transit Mode." The following pages explain how to remove the transit fixings and prepare the Jukebox for use. Please work through this guide in order.

To reduce the risk of accidental damage to the Jukebox when removing transit bars, it is recommended to carry out this procedure with the Jukebox powered OFF.

FIG2 : Retaining transit bar locations

Transit bar thumb screw (L) Vertical retaining transit bolt Horizontal retaining transit bar Transit bar thumb screw (R)

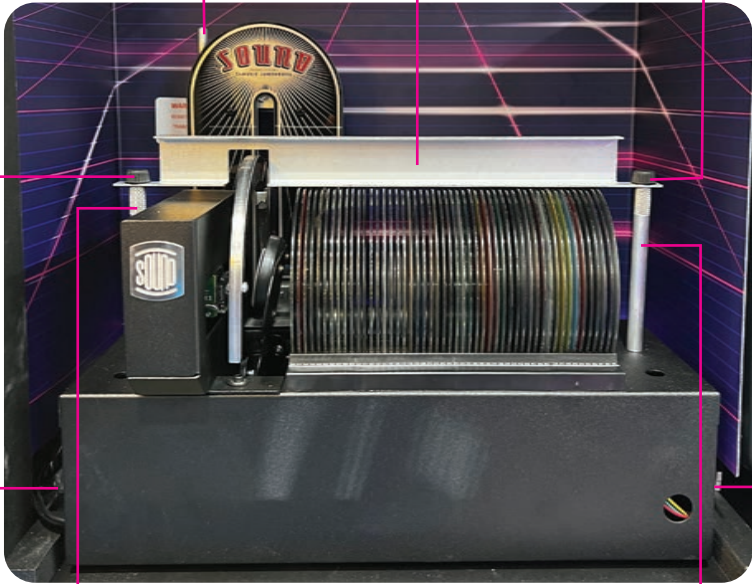

Transit bar post (L)

Transit bar post (R)

CD Mechanism retaining clips



Left



Right

How to remove the transit bars on the CD mechanism.

Please refer to the images opposite for the location of components.

- Ensure the Jukebox is powered OFF.
- Unlock and open the front door of the jukebox.
- Carefully remove the 'horizontal retaining transit bar' by loosening and removing the left and right 'transit bar thumb screws'.
- Remove the left and right 'transit bar posts' by turning anti-clockwise.
- Unscrew and remove the 'vertical retaining transit bolt'.

Retain and store safely the removed transit components for future use.

- Locate the CD mechanism retaining clamps on both lower sides of the mechanism as shown in FIG2.
- Loosen the screws on the clamps and slide the clamps out from the slots of the mechanism.
- The clamps do not need to be fully removed. Once free from the mechanism slots, re-tighten the screws to secure them.
- Power on the Jukebox. (see page 10)
- On the front door of the jukebox, the display will show "TRANSIT"
- Locate and press the "RESET" button once. The location of this button is shown in FIG1 - A small round, white button on the left hand side of the title rack below the door switch.



The Jukebox mechanism will move to the end of the CD rack then centre itself. The display will no longer show "TRANSIT"

The Jukebox is now ready for operation.

Powering On/Off the Jukebox

Accessing the power switch.

For safety in commercial environments the internal power socket and On/Off switch is located on the inside of the jukebox behind the title rack. When powering on or off the jukebox you will need to raise up or remove the title rack to gain access. The location of the power switch is shown in FIG 3.

Raising or removing the title rack

To gain access to the power switch, amplifier, bluetooth unit or speaker matching pad you will need to raise up or remove the title rack. If you only need access to these elements briefly then the title rack can simply be loosened, raised up on its hinges and then lowered back down. If you need to gain access for more involved procedures such as connecting additional speakers or amplifier settings then we would recommend removing the title rack from its hinges. The hinges are a slide fitting so removing the title rack is quite simple.

- Open the front door of the Jukebox.
- Unclip the title rack control cable using the quick release clip.
- Locate the title rack retaining thumbscrews on the underside of the title rack. (FIG1)
- Carefully loosen the thumb screws.
- Once removed, raise the title rack upwards on its hinges.
- To remove the title rack completely, slide the title rack to the right and it will slide off its hinges completely allowing it to be removed. Please note the title rack weighs approx 3KG so please ensure you are capable and ready to receive its weight.
- To replace the title rack back into the jukebox simply follow these steps in reverse.




Location of title rack retaining thumbscrews



sliding hinges

FIG3 : Inside of Jukebox : Title Rack Removed

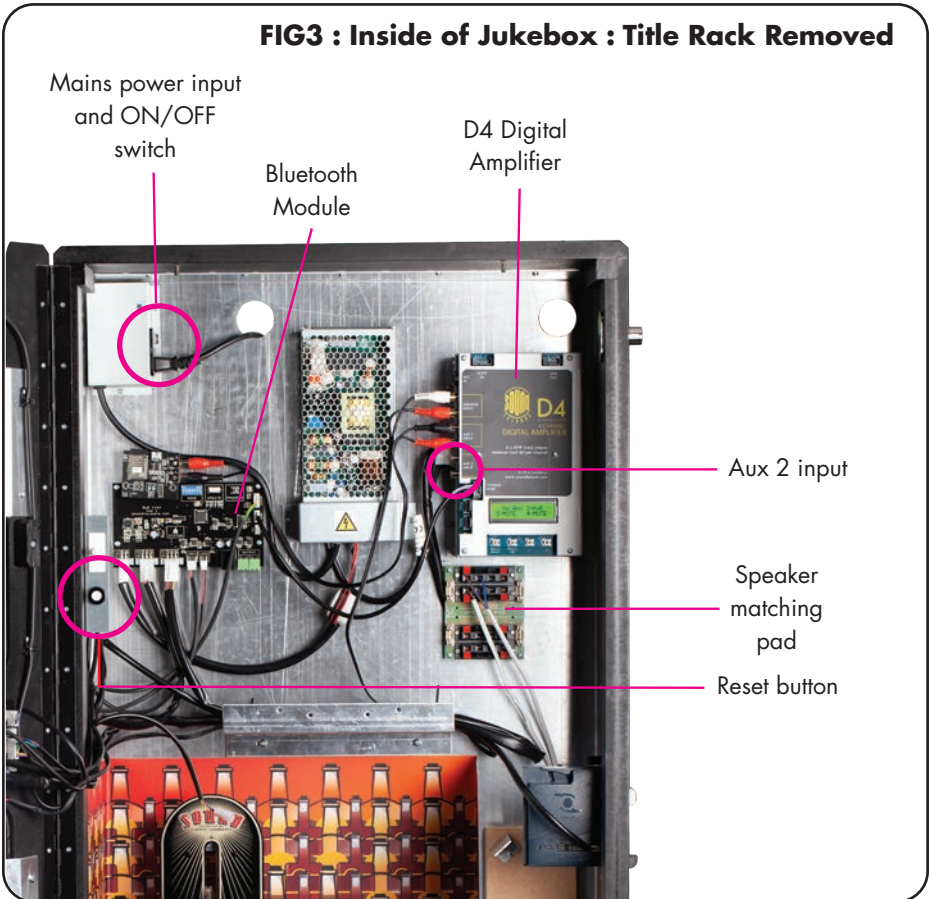

Mains power input and ON/OFF switch

Bluetooth Module

D4 Digital Amplifier

Aux 2 input

Speaker matching pad

Reset button

How to place the Jukebox into transit mode.

If the Jukebox is to be moved any distance, where the mechanism or CD's are in danger of moving, it is recommended that the Jukebox be placed into Transit Mode. You will require the transit retaining bars that were delivered with your Jukebox. The location of the following items listed is shown in FIG 3

- With no discs playing, press and hold the "RESET" button on the left of the title rack for 5 seconds. The location of this button is shown in FIG1 .

The CD mechanism will park in the transit position and the display will show "TRANSIT."

- Power OFF the Jukebox.
- Open the front door of the jukebox
- Replace the left and right transit bar posts by turning clockwise.
- Carefully replace the horizontal retaining transit bar, holding it in place by the transit bar thumb screws.
- Replace the vertical retaining transit bolt by turning clockwise.
- Close and lock the front door of the Jukebox.

The Jukebox can now be safely moved.

Label Magic

Sound Leisure has developed the Label Magic title card printing software to facilitate the easy design and printing of title cards for your Sound Leisure Jukebox.

Included in the welcome pack supplied with your Jukebox is a FREE 12 month subscription to Sound Leisure's Label Magic title card printing software.

To get started creating your cards, download your free copy of Label Magic from:

www.label-magic.com/sl

Once you have installed Label magic, use the code printed on the postcard included in your welcome pack to activate your free 12 month subscription.

Once you have printed your title cards follow the steps overleaf for how to insert these in the Jukebox.



Inserting Title Cards

Title Cards

Perforated blank title cards and Sound Leisure's Label Magic printing software are included in your Jukebox welcome pack. For further details on installing your software and your FREE 12 month subscription code please see the postcard included in the welcome pack or visit :

soundleisure.com/classic-Jukeboxes/accessories/label-magic-title-card-software

This will assist you in designing and printing title cards. Additional cards are available to purchase through our website.

<https://soundleisure.com/classic-jukeboxes/accessories/title-cards-1-part>

The title cards start at selection no. 100 and finish at 149.

Once the title cards have been printed and separated they need to be inserted into the holders so that the small plastic tabs hold them in place.


Starting from the left (card 100) - Insert the left edge of the title card under the plastic tabs.

Gently bend the title card to insert the right hand edge into the tabs.

To move to the next card use the Left and right buttons on the button bank located on the front door of the jukebox. The pages can also be flipped by using buttons F3 and F4 on the remote control (See FIG 4).

WARNING : DO NOT FLIP THE TITLE RACK PAGES BY HAND AS THIS CAN DAMAGE THE MOTOR OR SNAP THE PAGE ASSEMBLY! ONLY TURN THE PAGES USING THE BUTTONS SITUATED ON THE FAR RIGHT HAND SIDE OF THE FRONT DOOR OR THE REMOTE CONTROL F3/F4 BUTTONS.

**FIG4 : Title cards inserted into title rack
Door open.**

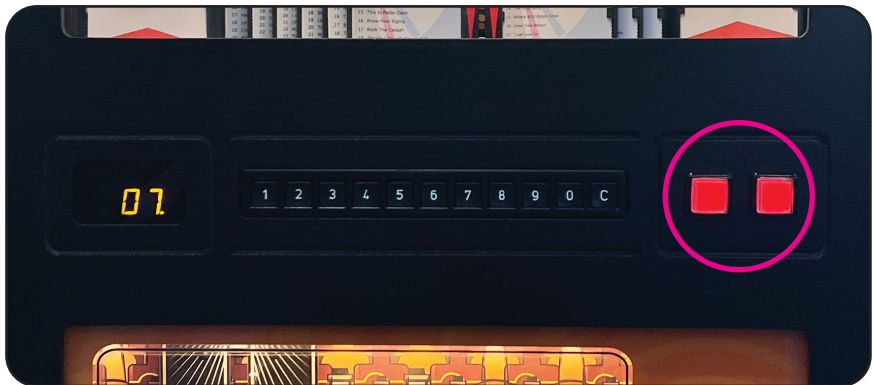

**Left and Right (title rack flip) buttons as seen on
the Jukebox button bank**

Loading Compact Discs


The mechanism rack that holds the CDs is numbered to correspond with the title selection cards.

Slot 00 = title card 100

Slot 01 = title card 101

Slot 02 = title card 102 etc.

Insert the CDs with the CD label facing TO THE RIGHT, (see fig 4).

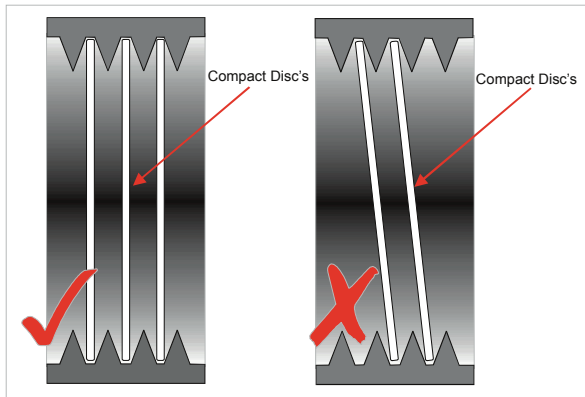

PLEASE ENSURE THAT THE CDs ARE INSERTED ABSOLUTELY STRAIGHT

Failure to do so can result in the mechanism mishandling the CD's which can cause damage to the CD's or the mechanism.

If the jukebox is moved for any reason, please check again that all the CDs are aligned correctly, and none have been displaced. If moving the Jukebox over an uneven surface or any significant distance please replace the transit bars as specified in the section on page 10.



FIG4 : CDs inserted into the mechanism
Note the printed side is facing towards the right

Playing the Jukebox

Making Selections

- When the discs and labels are installed, selections can be made using the keyboard at the front of the Jukebox or via the remote control.
- To “flip” the title rack pages press the buttons located on the far right hand side of the front door. (FIG4) or by using ‘F3’ or ‘F4’ on the remote control. (FIG5)
- When making selections the Jukebox will require a disc number (which is the 3 digit number specified on the title card) and a 2 digit track number
- If you make a mistake while entering a selection press ‘C’ on either the remote or Jukebox button bank to re-start the selection process.

Playing a single track

- To play a track, select the 3 digit number for the disc, and then the 2 digit number of the individual track. These numbers will show up on the display as they are entered.
- This process can then be repeated to build up the “playlist” on the Jukebox.

Playing an entire CD album (remote only)

- To play an entire CD disc, select the 3 digit disc number then enter the 2 digit track number as ‘00’ on the remote control.
- When playing the whole of an album, the ‘SKIP’ buttons |<< / >>| can be used to select the next or previous track on that disc.
- When playing individual tracks from multiple albums the buttons can be used to reject the track or skip back to the beginning of the track playing.
- Multiple discs or tracks can be selected to build a “playlist” on the Jukebox.
- Playlists can be cleared by pressing the “F1” button on the remote control.

Ejecting a track or disc


- To eject an entire disc press ‘REJECT DISC’ on the remote.
- To reject a single track press ‘REJECT TRACK’ on the remote.

Display

- When the Jukebox is playing, the display will switch off. Pressing the “C” button will show which disc/track is currently playing.

FIG5 : remote control

Selections and additional functionality of the Jukebox can be controlled via the remote control supplied with your Jukebox.

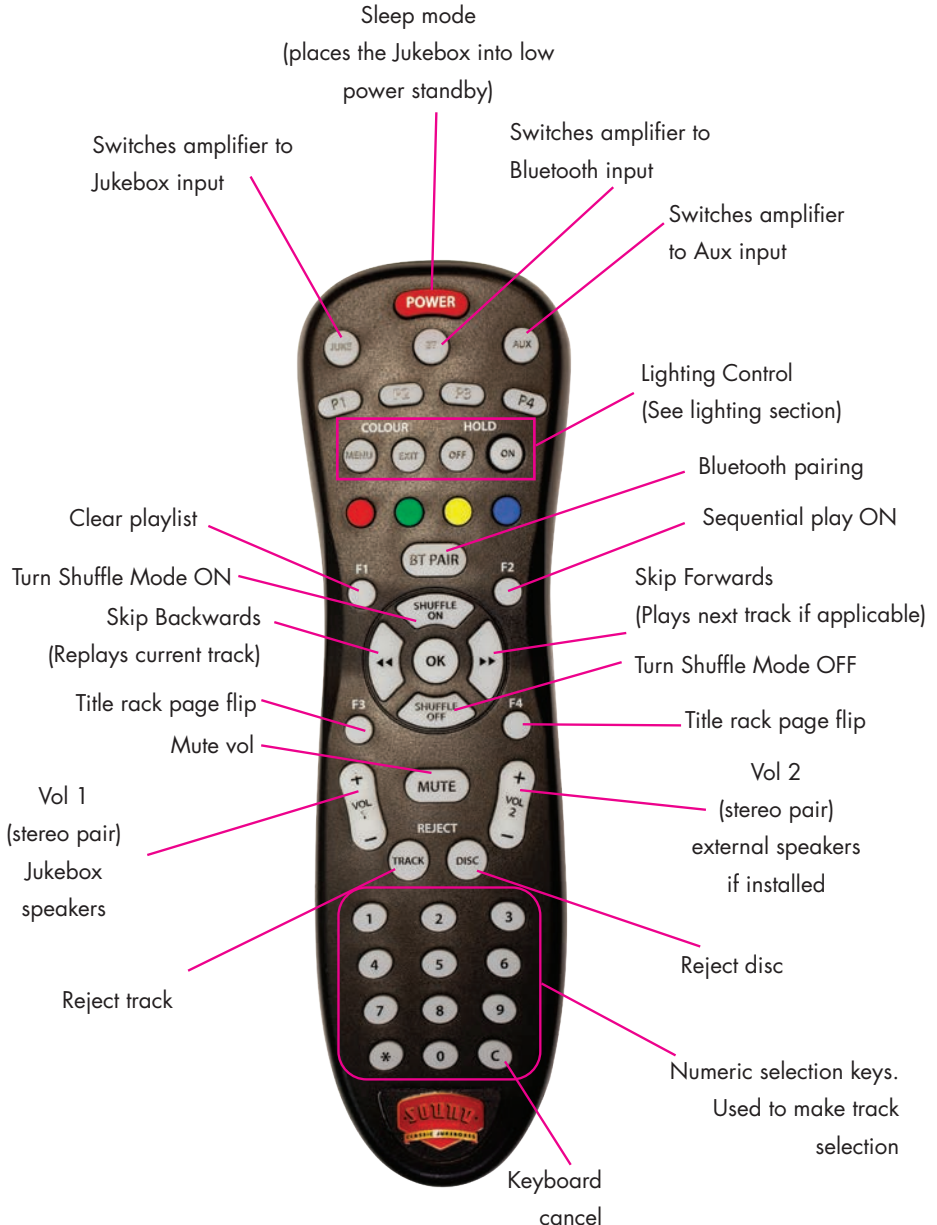

Adjusting Volume

As a precaution against overloading the speakers when switching the Jukebox on, the volume is preset to a low level.

- To raise the volume to the preferred level, select a track, wait until the CD is playing, then adjust the volume using the 'VOL 1' volume keys on the remote control.
- The display will briefly show the volume level as 'L -'. The number will vary dependant on the volume level with 0 for off and 50 for full volume.
- The 'VOL 2' volume keys (on the remote) are used to adjust the volume of the spare amplifier channels, please refer to page 22 "Adding additional speakers".
- Pressing the 'MUTE' key on the remote, will instantly mute the amplifier and the display will show 'L —', to return the volume to the previous level press any of the volume keys.

Powering Off the Jukebox : Sleep Mode

It is recommended that the Jukebox is powered off using the standby procedure and then to "full off" at the mains switch if required. This ensures that CDs are ejected and the mechanism is in a safe position. Failure to power the Jukebox down in this way could damage the jukebox mechanism.

To power off the Jukebox

- Press the "POWER" button on the remote control. (FIG 5) If a CD is playing it will be returned to its position in the mechanism stack. The mechanism will then return to its home position at the left hand side. "Sleep" will show on the Jukebox display.

NOTE : Sleep mode is useful if you are going to be using your Jukebox within a day or so. This will conserve power but still "wake" the Jukebox quickly should you wish to use it.

If you are not going to use the Jukebox for a few days then it is recommended to use sleep mode followed by a full power off using the power switch on the inside of the jukebox behind the title rack.

Shuffle Mode

The Jukebox features a random shuffle mode. This feature allows continuous play until the function is disabled. If a manual selection is made when shuffle mode is enabled then the currently playing track will play out before the chosen selection is played. Once the manual selection has been played shuffle mode will continue.

Shuffle mode has two settings : shuffle disc and shuffle track.

Shuffle disc

- This mode will play the entirety of a CD before randomly selecting another CD and playing. This is to listen to complete albums. This setting will continue to play random CD albums until the mode is disabled.

Shuffle track

- Shuffle track mode will play a random track from a random CD until the mode is disabled.

How to enable or disable Shuffle modes

- The shuffle modes are enabled by pressing the "shuffle on" button on the remote control.
- Pressing the "shuffle on" button ONCE enables the Shuffle DISC mode. When enabled the Jukebox display will show : "DISC" and a small dot will appear in the lower section of the display.
- Pressing the "shuffle on" button TWICE enables the shuffle TRACK mode. When enabled the Jukebox display will show : TRAC and a small dot will show in the bottom half of the display.
- To disable shuffle mode press the "Shuffle Off" button on the remote control. The small dot will no longer show to indicate that shuffle mode is not enabled.



Sequential Play

This feature plays the disks in ascending order e.g: 100 - 101 - 102. The mechanism will start from its current position and then play sequentially until the feature is turned off.

- To activate sequential mode press "F2" on the remote control (FIG5).
- "ORDER" will show on the display and a decimal point will denote that a shuffle mode is enabled.
- Sequential mode can be turned off by pressing "F2" again or "SHUFFLE OFF"
- Normal shuffle modes will over ride sequential mode and sequential mode cannot be activated when other shuffle modes are in operation.

Connecting external audio devices

Connecting an audio source to the Jukebox input

Audio sources, such as DAB radios or streaming devices can be connected to Aux 2 input on the D4 amplifier. (FIG6) The Jukebox automatically switches inputs.

- The player mechanism is the default device and will always take priority over any other audio sources.
- If the player mechanism is idle (no disc playing), the Bluetooth will take priority.
- If the player and Bluetooth are not playing then the Aux 2 input will take priority.

Please note: It is recommended that the audio output level of the connected device is kept at between 3/4 and full and the volume is adjusted using the volume control of the Jukebox.

Adding additional speakers

The D4 Digital Amplifier has 4 independent outputs, configured as 2 stereo pairs. Channels 1 and 2 are used to drive the Jukebox's main outputs. Channels 3 and 4 (left and right) can be used to connect additional external speakers to create a different "zone".

To connect additional external speakers

Please Note : The additional speakers should not present a load lower than 4 Ohms to each amplifier channel, please contact Sound Leisure if you are unsure which speakers are suitable or would like a different speaker set-up to the one described below.

- Locate the speaker matching pad inside the Jukebox cabinet. (FIG3)
Please note that you will need to lift or remove the title rack to gain access.
- Connect the left speaker cables to CH3 as denoted in FIG7.
- Connect the right speaker cables to CH4 as denoted in FIG7.

The volume for these speakers is controlled using the VOL 2 keys on the remote control.


FIG6 : View of Sound Leisure D4 Digital Amplifier

Microphone Input
6.35mm Jack
Jukebox input

Auxiliary input 1:
connected to
Bluetooth module


Auxiliary input 2 :
for connection to
external
audio devices

Digital Amp menu
selection buttons.
Menu down, Menu
up, - minus, + plus

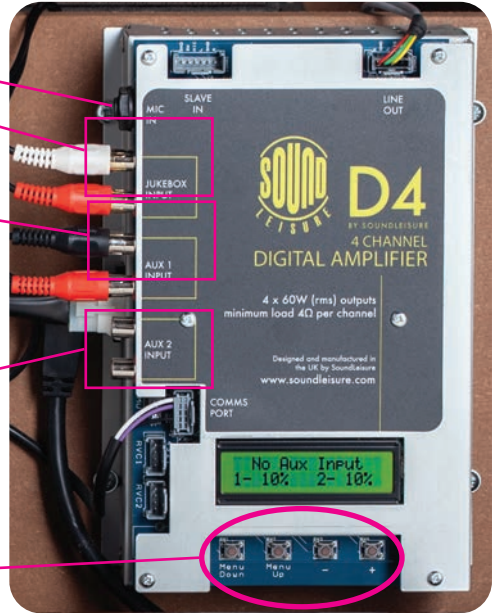

**FIG7 : Speaker matching pad
Shown with default speakers connected**

Connect to
left external
speaker

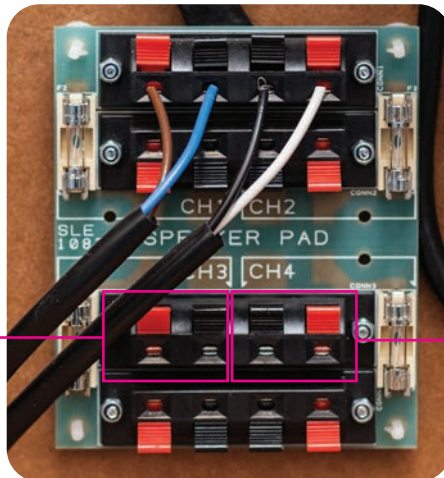

Connect to
right external
speaker

Adjusting amplifier settings

It is possible to adjust the audio equalisation of the amplifier to suit a specific environment or taste. There are separate settings for the internal Jukebox speakers (Channel 1/2) and any additional speakers that may be connected (Channel 3/4).

Pressing the 'MENU UP' or 'MENU DOWN' buttons on the D4 amplifier will cycle through the available menus. Pressing the '+' or '-' buttons will increment or decrement the value of the current menu. Any changes will be automatically saved. (The location of these buttons is shown in Fig 6 on page 25) If no buttons are pressed for 1 minute, the amplifier will revert back to its default display mode.

Below is a description of the available menus:

- **Channel 1 Stereo / Mono Switch**
This menu is used to set the amplifier in Stereo or 2 channel Mono. This should be left as 'Stereo'.
- **Channel 1 Master**
This menu sets the maximum volume level that can be achieved with the remote and should be used to set a maximum level for the Jukebox speakers.
- **Channel 1 Bass**
This menu sets the bass level of the Jukebox speakers. It can provide a cut or boost of 15dB.
- **Channel 1 Middle**
This menu sets the middle level of the Jukebox speakers. It can provide a cut or boost of 15dB.
- **Channel 1 Treble**
This menu sets the treble level of the Jukebox speakers. It can provide a cut or boost of 15dB.
- **Channel 1 Microphone Volume**
If you wish to use a microphone we recommend a wired low impedance mic. If you wish to use a wireless microphone please contact Sound Leisure.

- **Aux Input 1**
This Menu sets the master volume level for Auxiliary Input 1. This allows the volume of the Auxiliary input to be balanced against the volume of the CD mechanism.
- **Aux Input 2**
This Menu sets the master volume level for Auxiliary Input 2. See Aux Input 1 for description.
- **Aux Input Auto/Manual**
Changes from auto input selection to manual input selection.
- **Aux Input Time**
This menu sets the time that an auxiliary input must be present before the amplifier will make it active and is defaulted to 2 seconds. The value can be set between 2 and 60 seconds.
- **Microphone Voiceover / Karaoke**
If karaoke is selected the music and microphone will be heard together. If voiceover is selected whenever the microphone is used the music will be muted, the music will un-mute when the microphone is no longer being used.
- **Microphone Bass**
This menu sets the Bass level of the microphone input. It can provide a cut or boost of 15dB.
- **Microphone Middle**
This menu sets the Middle level of the microphone input. It can provide a cut or boost of 15dB.
- **Microphone Treble**
This menu sets the Treble level of the microphone input. It can provide a cut or boost of 15dB.
- **Line Out Master**
This menu sets the volume level of the Audio Out.
- **Line Out Microphone Volume**
This menu sets the volume of the microphone sent to the Audio Out.
- **Line Out Voiceover / Karaoke**
If karaoke is selected the Audio Out music and microphone will be heard together. If voiceover is selected, whenever the microphone is used the Audio Out music will be muted, the music will un-mute when the microphone is no longer being used.

- **Loudness**

When switched on the loudness control will provide a dynamic boost to the bass and treble when the Jukebox is used at low volume, the lower the volume the higher the boost. This is a subtle effect that adds clarity to music at low volumes.

- **Default Volume**

This menu sets the default volume of the Jukebox after power on. Each channel of the amplifier can be assigned its own level.

- **Fade In**

This sets a 2 second fade in at the start of a record or CD. It is recommended to enable this on a vinyl playing Jukebox.

Jukebox Lighting Adjustment

It is possible to adjust the lighting of the Jukebox.

Please note that whilst the Jukebox is in "colour selection mode" and "C" is showing in the display, no other features including disc selection are possible. The colour election mode must be exited before disc selection is possible.

Adjusting Lighting

It is possible to control the brightness of the top interior light (title rack) and the lower interior light (mechanism).

To adjust the brightness of the top interior light:

- Press the 'COLOUR MENU' button ONCE on the remote control. The LED display will show : COL 1.
- The brightness is set by pressing the button keys 0-9 on the remote. 0 is the lowest setting, 9 is the brightest setting.
- Once the desired brightness is achieved press the 'COLOUR EXIT' button to exit the brightness mode. : COL 1 will no longer be shown on the LED display.

To adjust the brightness of the lower light:

- Press the 'COLOUR MENU' button TWICE on the remote control. The LED display will show: COL 2.
- The brightness is set by pressing the button keys 0-9 on the remote. 0 is the lowest setting, 9 is the brightest setting.
- Once the desired brightness is achieved press the 'COLOUR EXIT' button to exit the brightness mode. : COL 2 will no longer be shown on the LED display.

Bluetooth

The Jukebox allows audio streaming via Bluetooth. Connection to the Jukebox is limited for commercial venue purposes so is initiated via the remote control and pairing access only lasts for 60 secs.

To pair an audio device to the Jukebox.

- Press the 'BT PAIR' button on the Jukebox remote control.
- "BT ON" will show on the Jukebox display.
- Turn on the Bluetooth connection on your audio device and begin searching for devices (refer to your audio device manual for instruction on how to search and pair to a device).
- The Jukebox will show as the name "SoundleisureJB"
- The pairing procedure is only required on the first connection. Once your device is paired, it is possible to reconnect by selecting "SoundleisureJB" from your devices paired list. It is not necessary to press the 'BT PAIR' button again.
- The Jukebox can remember up to 8 paired devices. (Although only one can be playing at a time)

Important Bluetooth Information

Jukebox contains transmitter module FCC ID : T9J-RN52

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a mains outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Troubleshooting and error codes

Great care has been taken to ensure your discs are protected whilst in the Jukebox. The mechanism carries out numerous checks to ensure it is running correctly. In the unlikely event of an error the mechanism will freeze position and one of the following error codes will be displayed on the LED.

General errors are as follows :

- 1.00 : PSU module not detected
- 2.00 : Display module not detected
- 3.00 : Amp module not detected
- 4.00 : Mech module not detected
- 5.00 : Lighting module not detected

Mechanism error codes as follows :

- 4.01 : Low Voltage
- 4.02 : Memory Error
- 4.03 : Lift Motor
- 4.04 : Scan Motor
- 4.05 : Clamp Motor
- 4.06 : CD Player
- 4.07 : 5V Fault
- 4.08 : Transit Bar still fitted
- 4.09 : 3V3 Fault
- 4.10 : Clamp Fault
- 4.11 : Bow Position Error
- 4.12 : Vertical Position Error
- 4.13 : Horizontal Position Error

How to clear an Error Code.

- Open the front of the Jukebox.
- Remove any jammed CDs or any CDs on the CD player.
- Close the front glass of the Jukebox
- The mechanism will then re-synchronise and resume normal operation.

General Troubleshooting

- **Unable to make selections?**

Ensure that the Jukebox is not in colour selection mode. If it is then "C" will be displayed. Press 'COLOUR EXIT' on the remote control.

IF YOU ARE UNSURE HOW TO PROCEED PLEASE CONTACT
SOUND LEISURE :

Email : CDTech@soundleisure.com

Tel : +44 (0) 113 232 1700

CE Declaration of Conformity

We, Sound Leisure Ltd, UK, declare under our sole responsibility that the following products

Silverage Jukebox Range: CD, 45, LP

To which this declaration relates is in compliance with the essential requirements of:

Radio Equipment Directive 2014/53/EU
Standards EN300 328 V2.1.1

EMC Directive 2014/30/EU
Standards EN 55022 & EN 55024

Low Voltage Directive 2014/35/EU
Standards EN 62368-1:2018

RoHS Directive 2015/863/EU

When installed in accordance with the manufacturers specifications

Sound Leisure Ltd
Sandleas Way
Leeds
West Yorkshire
England
LS15 8AR

Signed on behalf of Sound Leisure Ltd



Chris Black
Managing Director

Date of issue: 19th August 2020

For any further information or technical support please call Sound Leisure :

Sound Leisure Limited
Sandreas Way
Leeds
LS15 8AR

T: +44 (0) 113 232 1700
F: +44 (0) 113 232 1701
E: sales@classicjukeboxes.co.uk
www.classicjukeboxes.co.uk
www.soundleisure.com

Twitter : @classicjukebox
Facebook.com/classicjukeboxes
Instagram : @soundleisurejukeboxes

