



User Manual

Contents

1.WARNING	2
2.NOTICE	2
3.Product Introduction	2
4.Operating Instructions	3
5.TROUBLE SHOOTING	7
6.12 Months Warranty	7

-1-

1.WARNING

Shooting Hazard

- Blacksmith recommends that you should not put inside a gun that has been loaded.

Tip Over Hazard

 
- A child or adult can tip the safe and be killed or seriously injured.
- Serious injury may occur to children and adults if not secured before installation.
- Children should not play with or around the safe at any time.

2.NOTICE


- To reduce the risk, the gun safe must be installed on the wall or floor to ensure safety.
- Please keep the emergency key and external power box out of gun safe carefully. Do not leave the key in the gun safe, otherwise the emergency key will not be able to open the safe after the battery runs out.
- Please do not spill liquid on the control panel, otherwise it will damage the internal electronic components and make it work wrong.
- Please do not disassemble the product by yourself. Unprofessional disassembly and installation may damage the circuit and affect its performance.

3.Product Introduction

SCHEMATIC DIAGRAM

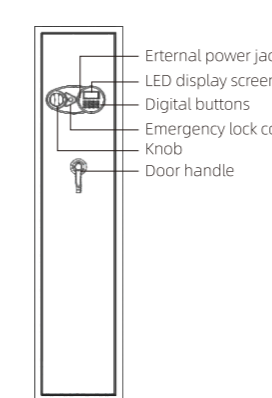

PARTS LIST

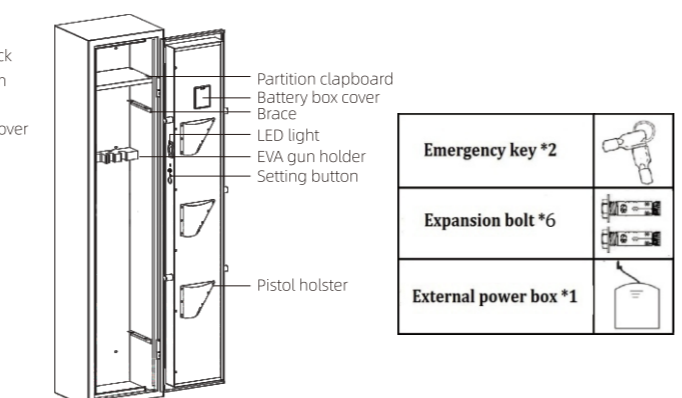 

-2-

	Product Name	SKUJ29874-1380
	Product size	1380*320*280mm
	Net weight	24kg

Features:

- Full coverage flannelette provide better protection for guns and gun safe
- Adjustable Support Frame for 4 guns
- 3 Separate Pistol Pouches on the door
- LED Light inside

4.Operating Instructions

4.1 GETTING STARTED

- Remove the emergency lock cover and the emergency key hole is exposed.
- Insert the emergency key into the keyhole and turn it 65° counterclockwise.
- Rotate the handle beside the keyhole clockwise and turn handle clockwise to open the safe.

 


NOTICE: Use the emergency key when opening the door for the first time. After installing the battery, set the password in time.

-3-

4.2 INSTALL BATTERIES

- Open the battery box cover plate.
- Insert 4 NEW AA batteries and close battery cover. (Caution: Do not use Lithium Battery or different brand of recharging batteries.)

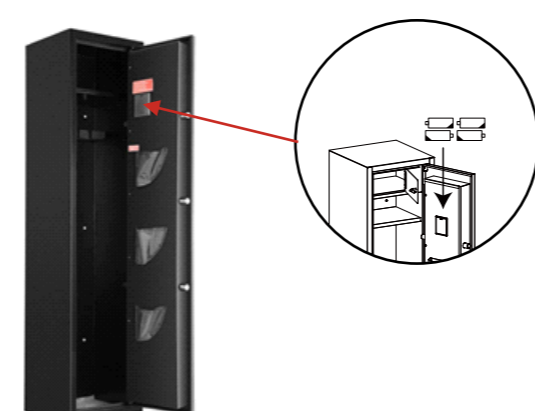

4.3 PASSWORD SETTING

PASSWORD SETTING

- Enter the initial key "159" In the state of opening the door, press the setting button inside the door, the buzzer will ring twice to set or change the personal password.
- Enter your 3-8 digit personal password and press "#" to confirm. If the buzzer makes along call and the green light is on, the password is set or changed successfully.
- Before you close the door, try new code to make sure it works.

Tip: Setting errors are accompanied by 3 short whistles and 3 red lights flashing.

SET THE MAIN CODE

- If you forget the user code, use the main code to enter your safe. The operation is as follows: the door open, press "0" twice, then press the Reset button.
 - Input the new code (3-8 digits), then press # to confirm. The light turns on and your new master code is set.
- Tip: If the light doesn't on, your new code isn't set successfully. Repeat these steps.

-4-



4.4 OPEN THE SAFE

- Press "*" key to confirm after entering the correct personal password. The buzzer "drops" twice, the electromagnet closes for six seconds, and the green indicator light is on to open the door.
- If the password is not entered correctly, press the "x" key to confirm the buzzer "drop" three times. The red light flashed three times.

4.5 ALARM FUNCTION

- If the password is entered incorrectly for three consecutive times, the password is locked for 20 seconds.
- The password is locked for 20 seconds if entered incorrectly for three consecutive times, and is locked for five minutes if entered incorrectly for six consecutive times. During this time, the red light will be on for 1 second each time you press the button.

4.6 MUTE FUNCTION

- The number "1" is the mute switch button. Method: In standby state, hold down "1" button for 3 seconds, and the green indicator blinks twice.
- Power off the device and then power on the device again. The sound is normal.

4.7 RESTORE FACTORY SETTINGS

- In the standby state, long press the setting button for 3 seconds, hear a long "drip" sound. At this point, the system returns to the initial state (password returned to 159).

-5-



4.8 POWER SHORTAGE PROMPT

UNDERVOLTAGE INDICATION

- If the yellow and green indicators on the panel are on at the same time, it indicates that the battery is undervoltage. Replace the battery in time.
- Use External Power Box when the batteries run out with connector. Note: it is recommended to use ordinary batteries, avoid lithium batteries or different brand of recharging batteries.

4.9 TECHNICAL PARAMETERS

- Working power: 4 x AA Batteries
- Working undervoltage point: 4.6V plus or minus 0.20V
- Working voltage range: 4V-7V

4.10 MOUNTING INSTRUCTIONS

- The safe could be mounted to a wall or floor.
- Drill the appropriate size holes for the anchors you are using.
- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely Floor Mounting.
- Use proper drill tools depending on the type of floor you are mounting the safe (wood, tile, or concrete).

4.12 MOUNTING HOLES

- Choose a suitable location for your quick opening and closing the gun safe. Place the safe box in a proper place and mark the hole to be drilled on the surface
- Move the safe when you drill the marked hole on the surface of the safe.
- Drill holes in the surface using the appropriate hardware type and the

-6-

5.TROUBLE SHOOTING

Problem: When I unlock the gun cabinet with my password, it won't open.

- Please make sure your password is correct.
- It may be in self-locking mode due to multiple input errors. Wait for 5 minutes and try again
- Open the door with the emergency key and replace the battery or restore the factory settings and re-register.

Problem: The door can not be closed.

- Check if there is an obstacle blocking the door inside the gun cabinet.
 - Check if the lock bolt on the door is sticking out, if so, unlock it in the right way to make the bolt retract to close the door.
- Problem: The indicator lights come on at the same time.
- The system prompts to replace the battery, which is in a weak state.

12 Months Warranty

This product is warranted by the original purchaser for 12 Months from the date of purchase. If the product is within 12 Months since you bought it, any part of the product or the whole product is damaged due to production process or materials, BlackSmith will, at its sole discretion, repair or replace the product or part for the original purchaser. This warranty applies only to the damage which is caused by materials or workmanship, and does not include damage caused by misuse and conversion. This warranty also does not include fire (except fire protection products), water logging (except waterproof products) or theft as well as vandalism. The sole responsibility of the Company shall be limited to the repair or replacement (in its sole discretion) of any component of the BlackSmith safe which fails to conform to this warranty at no cost to the purchaser for the period of the warranty.

-7-

尺寸: 148x210mm
 材质: 157g铜版纸
 字体: 阿里巴巴普惠体M/R
 颜色: ■K80 ■ PANTONE 7626C