



User Manual

RFID Pistol Safe


CONTENT

- Safety Instruction1
- Product Components2
- Type-C Charging3
- Device's Power Switch3
- Master Code Programming.....3
- Passcode Programming3
- RFID Key Fob Prohramming3
- Deleting Key Fobs and Resetting Passcode3
- Mute Function4
- Error Alarm Function.....4
- Low Battery Warning4
- Battery Charging Indicator4
- Interior LED Light4
- Mounting5
- Using The Security Cable5
- Warranty Period5

Safety Instruction


Read the instructions carefully and retain them for future use. The instructions must be included when the product given to others. Follow the basic safety precautions to reduce the risk of fire, electric shock and/or injury to person when using electrical appliances as followings:

- Battery Warning**
 - Keep away from fire and high temperature.
 - Do not charge continuously for more than 20 hours.
- Please pay attention to these instructions before using for the first time**
 - Check for transport damages.
 - Clean the product before first use.
- DANGER Risk of suffocation!Keep any packaging materials away from children-these materials are a potential source of danger,e. g. suffocation.**
 - Please use Type-C cable to charge the Safety Device full, and then press and hold the number 4 key (for 3 second) to turn on the device before the first use.
 - Opening the safety device with the factory passcode-1234 for first time.

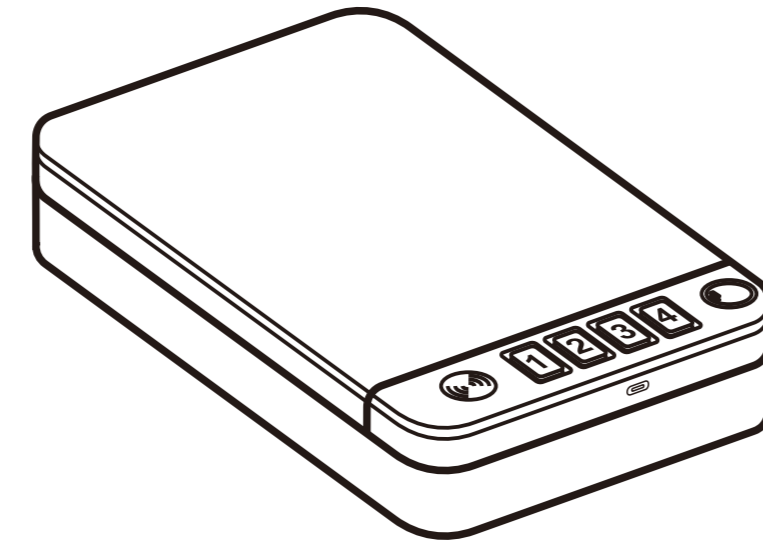


1

Product Components

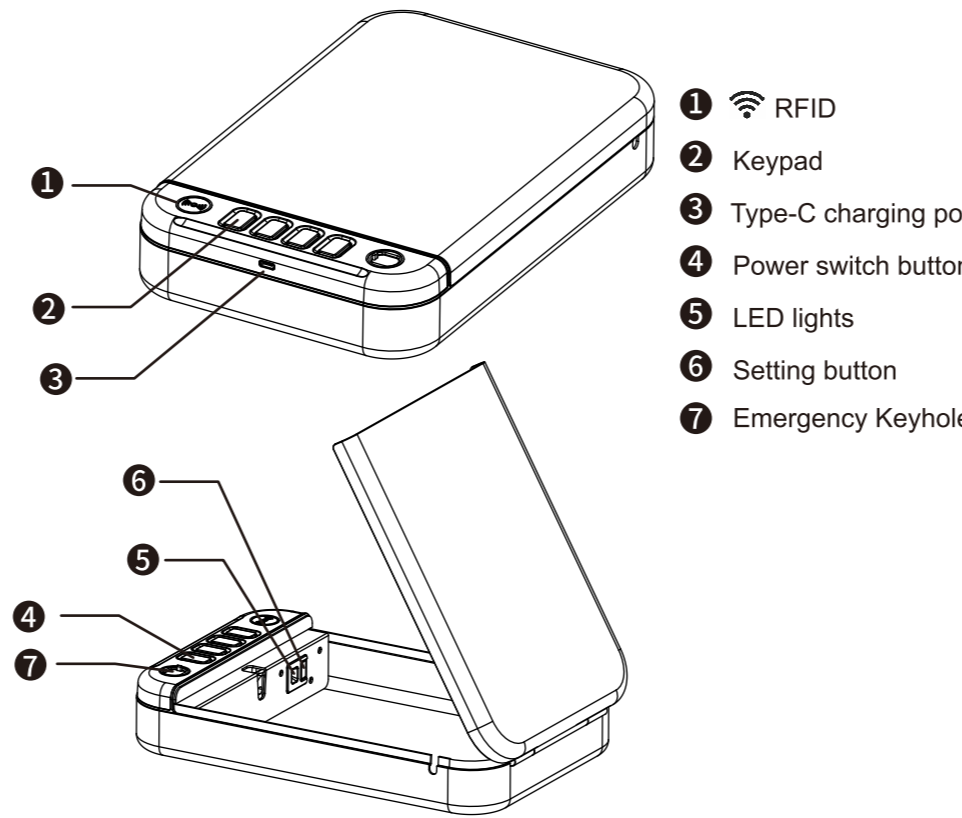

SPECIFICATION

Item	Size	Weight	Capacity
SE 0301	L284*W180*H50	1.7KG	One Pistol

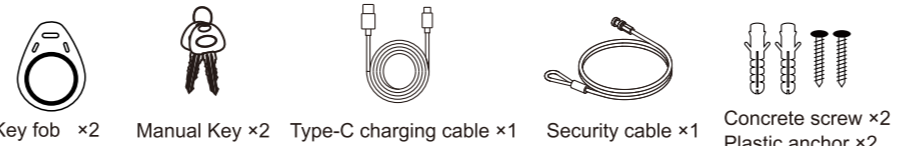

2

Type-C Charging

There is an USB charging port(Type-C) on the front of the safe for the charging by the portablepower bank or Power supply

Device's Power Switch

- Please turn on the device before the first use
- Press and hold the number 4key(for 3 second).The blue light flash one time with a beeping buzzer. The device starts and can be used.
 - Press and hold the number 4key again(for 3 seconds). The blue light flashes, and the buzzer makes a long beeping sound to indicate that the device is turned off.(Note:number 4key is the power switch button)

Master Code Programming

The blue indicator light indicates that the device is in setting mode, the door is open, or its charging. The red light indicates an error or low battery. The green light indicates that the device is ready to use.(The factory passcode is 1234. The passcode can be programmed to 4-6 digits)

Passcode Programming

Press the setting button once. The blue light flashes with a beeping buzzer. Please enter a newpasscode and press the setting button again. The buzzer will make a long beeping sound, indicating that the passcode has been programmed successfully.

RFID Key Fob Programming(IC Card)(Maximum number of key fobs:15)

- Press the setting button once. The blue light flashes with a beeping buzzer.
- Please swipe the first key fob that needs to be programmed. The blue light continues to flash. The buzzer continues to beep.
- Please swipe the second key fob that needs to be programmed. Theblue light continues to flash. The buzzer continues to beep.
- Please continue to program the rest of the key fobs following theprevious steps.
- Please press the setting button again after all key fobs have beenprogrammed. The buzzer will make a long beeping sound, indicating that all the key fobs have been programmed successfully.

Deleting Key Fobs and Resetting Passcode

Press and hold the setting button for 3-5 seconds. The blue light flashes. The buzzer makes a long beeping sound, indicating that the key fobs are deleted. and the passcode is reset to 1234

3

Mute Function

- Press and hold the number 1key(for 3 second). The blue lightflashes to indicate that mute is turned on successfully.
- Press and hold the number 1key again(for 3 seconds). The blue light flashes, and the buzzer makes a long beeping sound to indicate that the mute is turned off. (Note:number 1key is the mute switch button)

Error Alarm Function

- When the wrong passcode or key fob is detected, the red light will flash twice with a beeping buzzer.
- The device will be locked for 100 seconds after 5 consecutive wrong passcodes or key fobs.(The keypadsand key fobs become invalid during the error warning. They will return to normal after the warning)

Low Battery Warning

When the battery is less than 30%. The red indicator light flashes 6 times after the door is open.The buzzer will beep 6 times at the same time to indicate that the battery is low and needs to be charged.

Battery Charging Indicator

- Battery indicator is 4 blue led lights.(The lights on top of the keypads)
- When the battery is charging less than 25%, the first light flashes.
 - When the battery is charging 25%-50%, the first light keeps on, and the second light flashes.
 - When the battery is charging 50%-75%, the first 2 lights keep on, and the third light flashes.
 - When the battery is charging 75%-95%, the first 3 lights keep on, and the fourth light flashes.
 - When the battery is more than 95%, all 4 lights keep on.


Interior LED Light

The interior LED light will light up for Fifteen seconds when you open the safety device.

4


Mounting

Turn the expansion bolts clockwise to fix your safe on wooden surface.

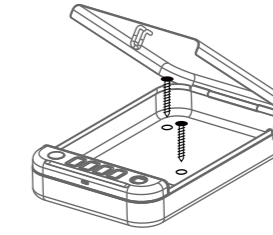

Using The Security Cable

- Open your safe and keep it in the open position.
- Loop the small end of the cable around the fixed object and then throughThe large end of the cable.
- Place the small end of the cable into the notch of the open safemake sure the metal stud on the cable is inside the safe.)
- Close and lock the safe.

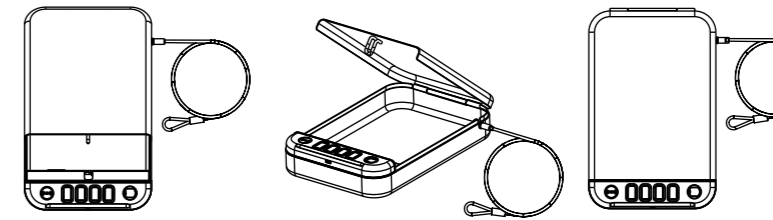

Warranty Period

12months

5

