

## INSTRUCTIONS FOR DETACHING AND ATTACHING THE BREATHING REGULATOR

### DETACHING

Remove the adjusting ring from the breathing regulator by taking a firm grip on the breathing regulator and the adjusting ring and pull them apart in a straight direction. **PLEASE NOTE! Twisting movements can break the lock clip of the adjustment ring.**

### ATTACHING

When putting the adjusting ring back onto the breathing regulator, place the parts together in a straight position. Please note that the adjusting ring is facing the right way. The “arrowhead” of the breathing regulator and the two white lines of the adjusting ring should be on the same side.

**PLEASE NOTE! Twisting movements and/or incorrect positioning of the adjusting ring may break the lock clip of the adjusting ring.**

