

Multix User Manual

Fn + 複合功能鍵 Windows下

Fn + F1 = 螢幕亮度-	Fn + F10 = 靜音	Fn + ScrLk = Layer 1	Fn + R = 當前層恢復出廠設置
Fn + F2 = 螢幕亮度+	Fn + F11 = 音量-	Fn + Pause = Layer 2	Alt_L + Alt_R = 鍵盤恢復出廠設置
Fn + F7 = 上一首	Fn + F12 = 音量+	Fn + Ins = Windows O.S	
Fn + F8 = 播放/暫停	Fn + Z = APP	Fn + Del = Mac O.S	
Fn + F9 = 下一首	Fn + PrtSc = Default	Fn + Windows = Windows lock	

Fn + 複合功能鍵 Mac下

Fn + F1 = F1	Fn + F6 = F6	Fn + F11 = F11	Fn + Ins = Windows O.S
Fn + F2 = F2	Fn + F7 = F7	Fn + F12 = F12	Fn + Del = Mac O.S
Fn + F3 = F3	Fn + F8 = F8	Fn + PrtSc = Default	Fn + ~ = 調整LED指示燈亮度 五階亮度 (第三階為默認亮度)
Fn + F4 = F4	Fn + F9 = F9	Fn + ScrLk = Layer 1	Fn + R = 當前層恢復出廠設置
Fn + F5 = F5	Fn + F10 = F10	Fn + Pause = Layer 2	Cmd_L + Cmd_R = 鍵盤恢復出廠設置

指示燈說明

1. Caps lock開啟 -> LED 1 亮藍燈
2. Scroll lock開啟 -> LED 2 亮藍燈
3. Windows lock開啟 -> LED 2 亮紅燈
4. Scroll lock + Windows lock -> LED 2 亮綠燈
5. 切換到Win O.S (默認) -> LED 1 紅燈閃2秒
6. 切換到Mac O.S -> LED 1 綠燈閃2秒
7. 切換到Default (默認層) -> LED 2 紅燈閃2秒
8. 切換到Layer 1 -> LED 2 綠燈閃2秒
9. 切換到Layer 2 -> LED 2 藍燈閃2秒
10. 恢復當前層出廠設置 -> LED 2 對應層顏色燈閃5次
11. 恢復鍵盤出廠設置 -> LED 1 與 LED 2 白燈閃5次
12. Layer 1 Macro -> LED 1 與 LED 2 綠燈閃爍或恆亮請參照Macro說明
13. Layer 2 Macro -> LED 1 與 LED 2 藍燈閃爍或恆亮請參照Macro說明
14. Fn變換位置 -> LED 1 與 LED 2 紫燈閃爍

Macro 說明

請至官網下載電子檔說明書 (<https://www.vortexkeyboard.com.tw>)

Multix User Manual

Fn + Function Description (Windows)

Fn + F1 = Screen brightness-	Fn + F10 = Mute	Fn + ScrLk = Layer 1	Fn + R = Restore the current layer
Fn + F2 = Screen brightness+	Fn + F11 = Volume -	Fn + Pause = Layer 2	Alt_L + Alt_R = Restore to the default
Fn + F7 = Previous	Fn + F12 = Volume +	Fn + Ins = Windows O.S	
Fn + F8 = Play/Pause	Fn + Z = APP	Fn + Del = Mac O.S	
Fn + F9 = Next	Fn + PrtSc = Default	Fn + Windows = Windows lock	

Fn + Function Description (Mac)

Fn + F1 = F1	Fn + F6 = F6	Fn + F11 = F11	Fn + Ins = Windows O.S
Fn + F2 = F2	Fn + F7 = F7	Fn + F12 = F12	Fn + Del = Mac O.S
Fn + F3 = F3	Fn + F8 = F8	Fn + PrtSc = Default	Fn + ~ = Adjust the brightness of the indicator (total of five levels)
Fn + F4 = F4	Fn + F9 = F9	Fn + ScrLk = Layer 1	Fn + R = Restore the current layer
Fn + F5 = F5	Fn + F10 = F10	Fn + Pause = Layer 2	Cmd_L + Cmd_R = Restore to the default

LED Manual

1. Caps lock on -> LED 1 light in Blue color
2. Scroll lock on -> LED 2 light in Blue color
3. Windows lock on -> LED 2 light in Red color
4. Scroll lock + Windows lock -> LED 2 light in Green
5. Swap to Win O.S (Default) -> LED 1 flash Red for two seconds
6. Swap to Mac O.S -> LED 1 -> LED 1 flash Green for two seconds
7. Swap to default layer -> LED 2 flash Red for two seconds
8. Swap to Layer 1 -> LED 2 flash Green for two seconds
9. Swap to Layer 2 -> LED 2 flash Blue for two seconds
10. Reset current layer -> LED 2 color of the corresponding layer flashes five times
11. Restore to default -> LED 1 and LED 2 flash white five times
12. Layer 1 Macro -> LED 1 and LED 2 flash or steady Green
13. Layer 2 Macro -> LED 1 and LED 2 flash or steady Blue
14. Swap Fn position -> LED 1 and LED 2 flash Purple

Macro Instruction

Please download the instruction from official website (<https://www.vortexkeyboard.com.tw>)