

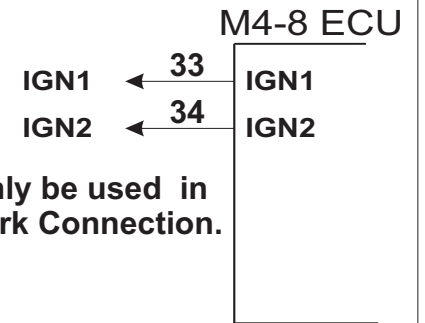



Coils in Firing Sequence

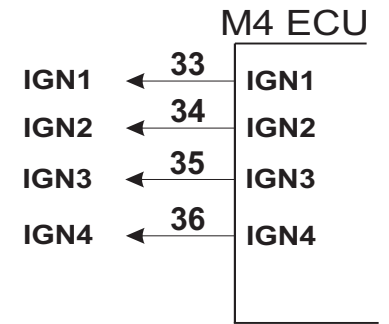

Note: M4-8 can only be used in Wasted Spark Connection.

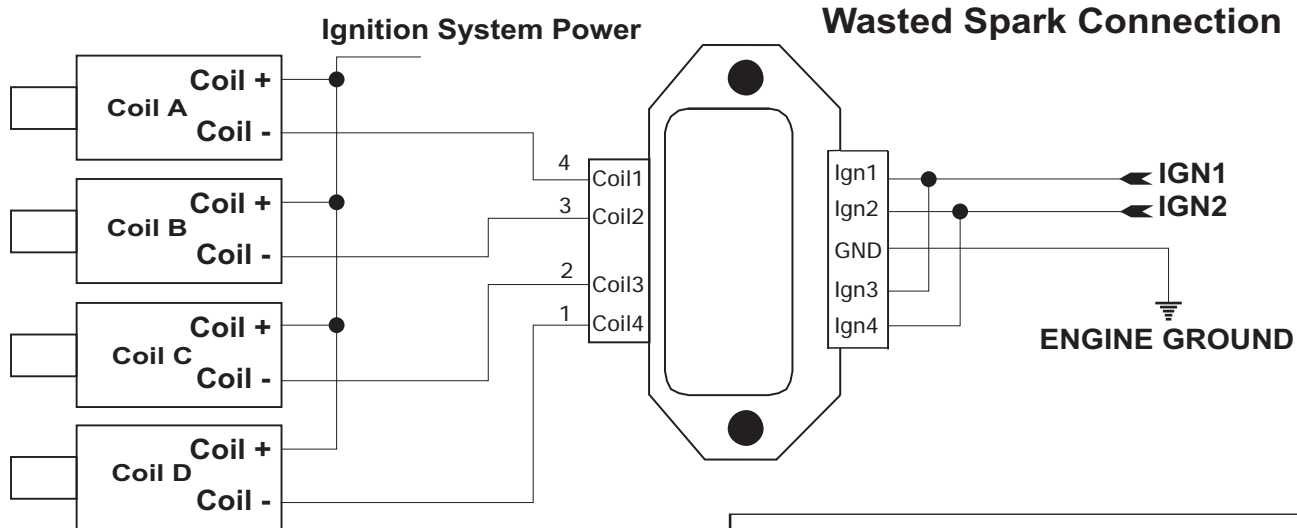

Coils in Firing Sequence

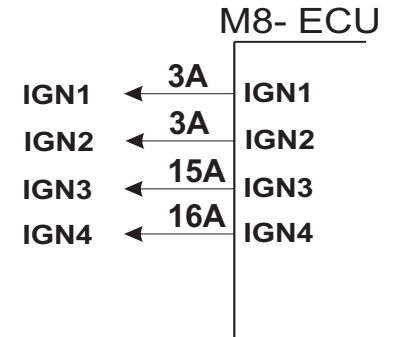

Note 1

The Setup Parameter dELL is dependant on the coil. Typically a value of 3.0 is suitable for normal coils. For small coil on plug coil use 1.8.

Important Using an incorrect value may cause overheating of the ignition module.

Setup	ign	1
	COIL	4 (normal connection) 2 (wasted spark connection)
	dELL	Note 1

MoTeC

Title **Bosch 0 227 100 211 Module**

Date 03/03/1999 Drawn ST App Products ECU

Sheet No Drawing No

1 of 1

M37