

L120 - ENCLOSED LOGGER (USB)



The L120 Enclosed Logger (USB) is a powerful control device and fully programmable data logger, all in one compact unit.

It comes standard with 120 MB internal memory plus USB Logging for additional data capacity, convenience and flexibility.

The L120 acquires data from other devices, such as an ECU, for logging and telemetry. It can be used in a wide range of applications, either as a standalone unit or integrated with other electronic devices such as displays and PDMs.

Note: An L120 Enclosed Logger without USB Logging is also available. (Part #18039)

FEATURES

- · Suitable for bikes, cars, marine and industrial applications
- USB Logging
- 120 MB internal logging memory
- GPS Lap Timing
- Supports Wideband Lambda from MoTeC PLMs or LTCs
- Easily integrates with MoTeC CAN based devices, such as ECUs and expanders.
- Full Input/Output (I/O) expansion with E888 and E816

ACCESSORIES

62206: L120 LOOM

61279: CABLE - USB A PANEL TO MINI B
 (Included, but also available as a replacement part)

• 61280: MOTEC 32 GB DATA PLUG

• 61292: KINGSTON 32 GB USB3 FLASH DRIVE

OPTIONAL UPGRADES

• 29601: L120 I/O

29621: L120 PRO ANALYSIS29624: L120 T2 TELEMETRY

SPECIFICATIONS

Logging

- 120 MB internal logging memory
- USB logging to a removable storage device
- Logging rates up to 500 samples per second
- i2 Standard data analysis software included (Pro Analysis upgrade available)

DATASHEET PART 18045

Removable USB Storage Device Options

- Kingston 32 GB USB3 Flash Drive fast, low weight and low cost, not mechanically latched or waterproof.
- MoTeC 32 GB USB3 Data Plug mechanically latched, waterproof with anodised housing, ideal for exposure to the elements and vibration.

Alternative USB storage devices may be used but are not recommended.

Inputs

• 2 x Digital and 3 x Speed inputs

Inputs - optional (requires I/O upgrade)

- 6 x Analogue voltage inputs
 - 4 x 0 to 5.46 V, 1.33 mV resolution
 - 2 x 0 to 15.0 V, 3.66 mV resolution
- 2 x Analogue temperature inputs
 - 0 to 15 V, 3.66 mV resolution

Outputs - optional (requires I/O upgrade)

- · 4 x low side outputs PWM or switched operation
- 0.5 Amp max, current limited, thermal overload protected

Expanders

The C125 is fully compatible with E816 and E888 expanders.

Internal Sensors

- 3-axis accelerometer, detection range: +/- 5G
- Dash temperature sensor
- · Sensor supply voltage
- Battery voltage

Communications

- 2 x configurable CAN buses, with individually programmable CAN bus speeds. One can be used as RS232 Receive.
- 2 x RS232 ports, one with transmit and receive, one with receive only.

Power Supply

- Operating voltage: 6 to 32 V DC
- Operating current: 0.4 A typical at 14 V (excluding sensor currents)
- Reverse battery protection
- · Battery transient protection

Sensor Supply Currents

- 5 V sensor supply: 0.25 A maximum
- 8 V sensor supply: 0.25 A maximum

Operating Temperature

- Internal: -20°C to 80°C
- Typical ambient temperature range (free air): -20°C to 65°C

Ingress Protection (IP) Rating

- IP67 dust tight, protected against water immersion (up to 30 minute submersion to depth of at least 15 cm)
- ⇒ IP rating is dependent upon the user ensuring that the connector entries are waterproof, which, as a minimum, requires all unused wire cavitites on the connector to be plugged.

Physical

- Size: 134.5 x 103.9 x 20.2 mm excluding connectors
- Weight 310 g
- 1 x 34 pin waterproof connector
- 1 x mini USB3 port (type B)

COMPATIBILITY

- MoTeC ECUs: All models (some earlier models may require an additional adaptor in conjunction with the RS232 adaptor).
- MoTeC Accessories: VIM, SVIM, E816, E888, SLM, PLM, LTC, BR2, PDM, GPS, VCS etc.
- Many non-MoTeC devices

SOFTWARE

Windows-based Manager software for device setup and management of the data logging system, providing:

- Configuration of the inputs, outputs, data logging and calculations
- Offline generation of a configuration file that can then be sent to the device.
- Channel monitoring
- · Firmware updating and extensive help screens

i2 Data Analysis software (Standard or optional Pro) provides the tools for comprehensive data analysis.


DATASHEET PART 18045

ETHERNET WIRING

Ethernet Connector		MoTeC Loom	C125	
Pin	Function	Colour	Pin	Function
1	Ethernet TX +	Orange/White	11	Ethernet RX +
2	Ethernet TX -	Orange	10	Ethernet RX -
3	Ethernet RX +	Green/White	2	Ethernet TX +
6	Ethernet RX -	Green	1	Ethernet TX -

⇒ The wiring specified is the preferred cross-over configuration. However, the wiring can also be configured as straight-through. Cat 5 Ethernet cable must be used.


Pin Numbering

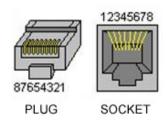

ECU WIRING

When using an M4, M48 or M8 ECU, the L180 should be connected via RS232. For some ECUs, a PCI cable may also be required.


The Display Logger should be connected via the CAN bus when using an M1 or 'Hundred Series' ECU (M400/M600/M800/M880) or M84, and any number of other CAN devices. Example:

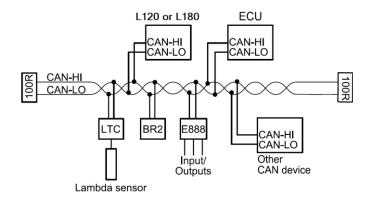

Detailed wiring information is available in the user manual at www.motec.com/downloads.

DIMENSIONS AND MOUNTING

Measurements in mm.

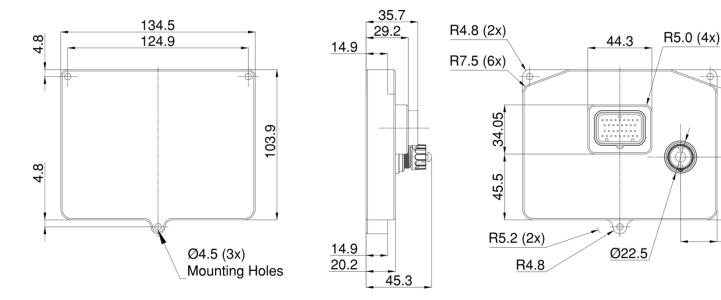

Note: Do not remove any part of the casing. The case provides electromagnetic screening to avoid interference with other equipment, and is also essential for thermal management. Thermal management may be compromised if mounted in a confined space, refer to the operating specifications.

Ensure product is not stressed when mounted.

43.45

25.25

DATASHEET PART 18045

▶ PINOUT

Mating Connector: Part number 65044

E-TX-	Pin	Name	Standard Function	Optional Function (12 I/O upgrade #29500)
3 AV1 Analogue Voltage Input 1 4 AV2 Analogue Voltage Input 2 5 AV3 Analogue Voltage Input 3 6 AV4 Analogue Voltage Input 4 7 8 V Sensor 8 V 8 5 V Sensor 5 V 9 0 V Sensor 0 V 10 E-RX- Ethernet Receive + 12 AV5 Analogue Voltage Input 5 13 AV6 Analogue Voltage Input 6 14 DIG1 Digital Input 1 15 DIG2 Digital Input 2 16 AT1 Analogue Temp Input 1 17 AT2 Analogue Temp Input 2 18 CANIL CANI High 20 RS232-1 TX RS232-1 Transmit Output 21 SPD1 Speed Input 2 23 SPD2 Speed Input 3 24 Not used Not used 25 RS232-2 RX RS232-2 Roceive Input 26 CAN2L CAN2 Liow/RS232 Ground Input <	1	E-TX-	Ethernet Transmit -	
AV2 Analogue Voltage Input 2 5 AV3 Analogue Voltage Input 3 6 AV4 Analogue Voltage Input 4 7 8 V Sensor 8 V 8 5 V Sensor 5 V 9 0 V Sensor 0 V 10 E-RX- Ethernet Receive - 11 E-RX+ Ethernet Receive + 12 AV5 Analogue Voltage Input 5 13 AV6 Analogue Voltage Input 5 14 DIG1 Digital Input 1 15 DIG2 Digital Input 1 16 AT1 Analogue Voltage Input 1 17 AT2 Analogue Temp Input 1 17 AT2 Analogue Temp Input 2 18 CAN1L CAN1 Low 19 CAN1H CAN1 High 20 RS232-1 TX RS232-1 Transmit Output 21 SPD1 Speed Input 2 22 SPD2 Speed Input 3 24 Not used Not used Not used Not used Not used Not used CAN2L CAN2L CAN2 Experies Input 26 CAN2L CAN2 CAN2 Experies Input 27 CAN2H CAN2 High/RS232 Receive Input 28 RS232-1 RX RS232-1 Receive Input 29 AUX1 Auxiliary Output 1 30 AUX2 Auxiliary Output 3 31 AUX3 Auxiliary Output 4 33 BAT+ Battery Positive	2	E-TX+	Ethernet Transmit +	
5 AV3 Analogue Voltage Input 3 6 AV4 Analogue Voltage Input 4 7 8 V Sensor 8 V 8 5 V Sensor 5 V 9 0 V Sensor 0 V 10 E-RX- Ethernet Receive - 11 E-RX+ Ethernet Receive + 12 AV5 Analogue Voltage Input 5 13 AV6 Analogue Voltage Input 6 14 DIG1 Digital Input 1 15 DIG2 Digital Input 2 16 AT1 Analogue Temp Input 1 17 AT2 Analogue Temp Input 2 18 CAN1L CAN1 Low 19 CAN1H CAN1 High 20 RS232-1TX RS232-1 Transmit Output 21 SPD1 Speed Input 2 23 SPD3 Speed Input 3 24 Not used Not used Not used Not used Not used 25 RS232-2 RX RS232-2 Receive Input 26	3	AV1		Analogue Voltage Input 1
6 AV4 Analogue Voltage Input 4 7 8 V Sensor 8 V 8 5 V Sensor 5 V 9 0 V Sensor 0 V 10 E-RX- Ethernet Receive - 11 E-RX+ Ethernet Receive + 12 AV5 Analogue Voltage Input 5 13 AV6 Analogue Voltage Input 6 14 DIG1 Digital Input 1 15 DIG2 Digital Input 2 16 AT1 Analogue Temp Input 1 17 AT2 Analogue Temp Input 2 18 CANIL CANI Low 19 CANIH CANI High 20 RS232-1TX RS232-1 Transmit Output 21 SPD1 Speed Input 1 22 SPD2 Speed Input 2 23 SPD3 Speed Input 3 24 Not used Not used 25 RS232-2 Receive Input 26 CAN2L CAN2 Low/RS232 Ground Input 27 CAN2H	4	AV2		Analogue Voltage Input 2
7 8 V Sensor 8 V 8 5 V Sensor 5 V 9 0 V Sensor 0 V 10 E-RX- Ethernet Receive - 11 E-RX+ Ethernet Receive + 12 AV5 Analogue Voltage Input 5 13 AV6 Analogue Voltage Input 6 14 DIG1 Digital Input 1 15 DIG2 Digital Input 2 16 AT1 Analogue Temp Input 1 17 AT2 Analogue Temp Input 2 18 CANIL CANI Low 19 CANIH CANI High 20 RS232-1 TX RS232-1 Transmit Output 21 SPD1 Speed Input 3 24 Not used Not used 25 RS232-2 RX RS232-2 Receive Input 26 CAN2L CAN2 Ligh/RS232 Ground Input 27 CAN2H CAN2 High/RS232 Receive Input 28 RS232-1 RX RS232-1 Receive Input 29 AUX1 Auxiliary Output 1	5	AV3		Analogue Voltage Input 3
8 5 V Sensor 0 V 9 0 V Sensor 0 V 10 E-RX- Ethernet Receive - 11 E-RX+ Ethernet Receive + 12 AV5 Analogue Voltage Input 5 13 AV6 Analogue Voltage Input 6 14 DIG1 Digital Input 1 15 DIG2 Digital Input 2 16 AT1 Analogue Temp Input 1 17 AT2 Analogue Temp Input 2 18 CANIL CANI Low 19 CANIH CANI High 20 RS232-1 TX RS232-1 Transmit Output 21 SPD1 Speed Input 1 22 SPD2 Speed Input 2 23 SPD3 Speed Input 3 24 Not used Not used 25 RS232-2 RX RS232-2 Receive Input 26 CAN2L CAN2 Low/RS232 Ground Input 27 CAN2H CAN2 High/RS232 Receive Input 29 AUX1 Auxiliary Output 1	6	AV4		Analogue Voltage Input 4
9 0 V Sensor 0 V 10 E-RX- Ethernet Receive - 11 E-RX+ Ethernet Receive + 12 AV5 Analogue Voltage Input 5 13 AV6 Analogue Voltage Input 6 14 DIG1 Digital Input 1 15 DIG2 Digital Input 2 16 AT1 Analogue Temp Input 1 17 AT2 Analogue Temp Input 2 18 CAN1L CAN1 Low 19 CAN1H CAN1 High 20 RS232-1 TX RS232-1 Transmit Output 21 SPD1 Speed Input 2 22 SPD2 Speed Input 2 23 SPD3 Speed Input 3 24 Not used Not used 25 RS232-2 RX RS232-2 Receive Input 26 CAN2L CAN2 Low/RS232 Ground Input 27 CAN2H CAN2 High/RS232 Receive Input 28 RS232-1 RX RS232-1 Receive Input 29 AUX1 Auxiliary Output 1 30 AUX2 Auxiliary Output 2 31 AUX3 Auxiliary Output 3 32 AUX4 Auxiliary Output 3 33 BAT+ Battery Positive	7	8 V	Sensor 8 V	
10 E-RX-	8	5 V	Sensor 5 V	
11	9	0 V	Sensor 0 V	
12	10	E-RX-	Ethernet Receive -	
13	11	E-RX+	Ethernet Receive +	
Digital Input 1 Digital Input 2 Digital Input 3 Digital Input 4 Digital Input 5 Digital Input 5 Digital Input 5 Digital Input 6 Digital Input 7 Digital Input 7 Digital Input 7 Digital Input 8 Digital Input 9 Digital In	12	AV5		Analogue Voltage Input 5
Digital Input 2	13	AV6		Analogue Voltage Input 6
16 AT1 Analogue Temp Input 1 17 AT2 Analogue Temp Input 2 18 CAN1L CAN1 Low 19 CAN1H CAN1 High 20 RS232-1 TX RS232-1 Transmit Output 21 SPD1 Speed Input 1 22 SPD2 Speed Input 2 23 SPD3 Speed Input 3 24 Not used Not used 25 RS232-2 RX RS232-2 Receive Input 26 CAN2L CAN2 Low/RS232 Ground Input 27 CAN2H CAN2 High/RS232 Receive Input 28 RS232-1 RX RS232-1 Receive Input 29 AUX1 Auxiliary Output 1 30 AUX2 Auxiliary Output 2 31 AUX3 Auxiliary Output 3 32 AUX4 Auxiliary Output 4 33 BAT+ Battery Positive	14	DIG1	Digital Input 1	
17 AT2 Analogue Temp Input 2 18 CAN1L CAN1 Low 19 CAN1H CAN1 High 20 RS232-1 TX RS232-1 Transmit Output 21 SPD1 Speed Input 1 22 SPD2 Speed Input 2 23 SPD3 Speed Input 3 24 Not used Not used 25 RS232-2 RX RS232-2 Receive Input 26 CAN2L CAN2 Low/RS232 Ground Input 27 CAN2H CAN2 High/RS232 Receive Input 28 RS232-1 RX RS232-1 Receive Input 29 AUX1 Auxiliary Output 1 30 AUX2 Auxiliary Output 2 31 AUX3 Auxiliary Output 3 32 AUX4 Auxiliary Output 4 33 BAT+ Battery Positive	15	DIG2	Digital Input 2	
18 CAN1L CAN1 Low 19 CAN1H CAN1 High 20 RS232-1 TX RS232-1 Transmit Output 21 SPD1 Speed Input 1 22 SPD2 Speed Input 2 23 SPD3 Speed Input 3 24 Not used Not used 25 RS232-2 RX RS232-2 Receive Input 26 CAN2L CAN2 Low/RS232 Ground Input 27 CAN2H CAN2 High/RS232 Receive Input 28 RS232-1 RX RS232-1 Receive Input 29 AUX1 Auxiliary Output 1 30 AUX2 Auxiliary Output 2 31 AUX3 Auxiliary Output 3 32 AUX4 Auxiliary Output 4 33 BAT+ Battery Positive	16	AT1		Analogue Temp Input 1
19 CAN1H CAN1 High 20 RS232-1 TX RS232-1 Transmit Output 21 SPD1 Speed Input 1 22 SPD2 Speed Input 2 23 SPD3 Speed Input 3 24 Not used Not used 25 RS232-2 RX RS232-2 Receive Input 26 CAN2L CAN2 Low/RS232 Ground Input 27 CAN2H CAN2 High/RS232 Receive Input 28 RS232-1 RX RS232-1 Receive Input 29 AUX1 Auxiliary Output 1 30 AUX2 Auxiliary Output 2 31 AUX3 Auxiliary Output 3 32 AUX4 Auxiliary Output 4 33 BAT+ Battery Positive	17	AT2		Analogue Temp Input 2
20 RS232-1 TX RS232-1 Transmit Output 21 SPD1 Speed Input 1 22 SPD2 Speed Input 2 23 SPD3 Speed Input 3 24 Not used Not used 25 RS232-2 RX RS232-2 Receive Input 26 CAN2L CAN2 Low/RS232 Ground Input 27 CAN2H CAN2 High/RS232 Receive Input 28 RS232-1 RX RS232-1 Receive Input 29 AUX1 Auxiliary Output 1 30 AUX2 Auxiliary Output 2 31 AUX3 Auxiliary Output 3 32 AUX4 Battery Positive	18	CAN1L	CAN1 Low	
21 SPD1 Speed Input 1 22 SPD2 Speed Input 2 23 SPD3 Speed Input 3 24 Not used Not used 25 RS232-2 RX RS232-2 Receive Input 26 CAN2L CAN2 Low/RS232 Ground Input 27 CAN2H CAN2 High/RS232 Receive Input 28 RS232-1 RX RS232-1 Receive Input 29 AUX1 Auxiliary Output 1 30 AUX2 Auxiliary Output 2 31 AUX3 Auxiliary Output 3 32 AUX4 Auxiliary Output 4 33 BAT+ Battery Positive	19	CAN1H	CAN1 High	
22 SPD2 Speed Input 2 23 SPD3 Speed Input 3 24 Not used Not used 25 RS232-2 RX RS232-2 Receive Input 26 CAN2L CAN2 Low/RS232 Ground Input 27 CAN2H CAN2 High/RS232 Receive Input 28 RS232-1 RX RS232-1 Receive Input 29 AUX1 Auxiliary Output 1 30 AUX2 Auxiliary Output 2 31 AUX3 Auxiliary Output 3 32 AUX4 Auxiliary Output 4 33 BAT+ Battery Positive	20	RS232-1 TX	RS232-1 Transmit Output	
23 SPD3 Speed Input 3 24 Not used Not used 25 RS232-2 RX RS232-2 Receive Input 26 CAN2L CAN2 Low/RS232 Ground Input 27 CAN2H CAN2 High/RS232 Receive Input 28 RS232-1 RX RS232-1 Receive Input 29 AUX1 Auxiliary Output 1 30 AUX2 Auxiliary Output 2 31 AUX3 Auxiliary Output 3 32 AUX4 Auxiliary Output 4 33 BAT+ Battery Positive	21	SPD1	Speed Input 1	
24 Not used Not used 25 RS232-2 RX RS232-2 Receive Input 26 CAN2L CAN2 Low/RS232 Ground Input 27 CAN2H CAN2 High/RS232 Receive Input 28 RS232-1 RX RS232-1 Receive Input 29 AUX1 Auxiliary Output 1 30 AUX2 Auxiliary Output 2 31 AUX3 Auxiliary Output 3 32 AUX4 Auxiliary Output 4 33 BAT+ Battery Positive	22	SPD2	Speed Input 2	
25 RS232-2 RX RS232-2 Receive Input 26 CAN2L CAN2 Low/RS232 Ground Input 27 CAN2H CAN2 High/RS232 Receive Input 28 RS232-1 RX RS232-1 Receive Input 29 AUX1 Auxiliary Output 1 30 AUX2 Auxiliary Output 2 31 AUX3 Auxiliary Output 3 32 AUX4 Auxiliary Output 4 33 BAT+ Battery Positive	23	SPD3	Speed Input 3	
26 CAN2L CAN2 Low/RS232 Ground Input 27 CAN2H CAN2 High/RS232 Receive Input 28 RS232-1 RX RS232-1 Receive Input 29 AUX1 Auxiliary Output 1 30 AUX2 Auxiliary Output 2 31 AUX3 Auxiliary Output 3 32 AUX4 Auxiliary Output 4 33 BAT+ Battery Positive	24	Not used	Not used	
27 CAN2H CAN2 High/RS232 Receive Input 28 RS232-1 RX RS232-1 Receive Input 29 AUX1 Auxiliary Output 1 30 AUX2 Auxiliary Output 2 31 AUX3 Auxiliary Output 3 32 AUX4 Auxiliary Output 4 33 BAT+ Battery Positive	25	RS232-2 RX	RS232-2 Receive Input	
28 RS232-1 RX RS232-1 Receive Input 29 AUX1 Auxiliary Output 1 30 AUX2 Auxiliary Output 2 31 AUX3 Auxiliary Output 3 32 AUX4 Auxiliary Output 4 33 BAT+ Battery Positive	26	CAN2L	CAN2 Low/RS232 Ground Input	
29 AUX1 Auxiliary Output 1 30 AUX2 Auxiliary Output 2 31 AUX3 Auxiliary Output 3 32 AUX4 Auxiliary Output 4 33 BAT+ Battery Positive	27	CAN2H	CAN2 High/RS232 Receive Input	
30 AUX2 Auxiliary Output 2 31 AUX3 Auxiliary Output 3 32 AUX4 Auxiliary Output 4 33 BAT+ Battery Positive	28	RS232-1 RX	RS232-1 Receive Input	
31 AUX3 Auxiliary Output 3 32 AUX4 Auxiliary Output 4 33 BAT+ Battery Positive	29	AUX1		Auxiliary Output 1
32 AUX4 Auxiliary Output 4 33 BAT+ Battery Positive	30	AUX2		Auxiliary Output 2
33 BAT+ Battery Positive	31	AUX3		Auxiliary Output 3
	32	AUX4		Auxiliary Output 4
34 BAT- Battery Negative	33	BAT+	Battery Positive	
	34	BAT-	Battery Negative	