

VINTAGE AUDIO CARE GUIDE

TAPE HEAD CLEANING

It is extremely important to regularly clean tape heads, capstan and pinch roller of tape recorder equipment. Regular cleaning will increase the life of the equipment, protect tapes and enhance the sound quality of recordings and playbacks. S-721H PROFESSIONAL TAPE HEAD CLEANING FLUID will remove residual tape oxides, tape adhesives, dirt and other harmful contaminants that can build up on the tape head and clog the tape head's








WP-1 NON-LINT WIPES





MANUAL CLEANING WITH SWABS

Apply S-721H Cleaning Fluid to a cottons swab (CS-1) and gently clean the tape head, tape guides, capstan and pinch roller of recording equipment. Do not scrub! S-721H will do the work. For sever tape oxide build-up, a second application may be necessary. For video heads, only use VS-1 CHAMOIS SWABS when cleaning. Always follow safety instructions on the bottle. **KEEP OUT OF REACH OF CHILDREN**.

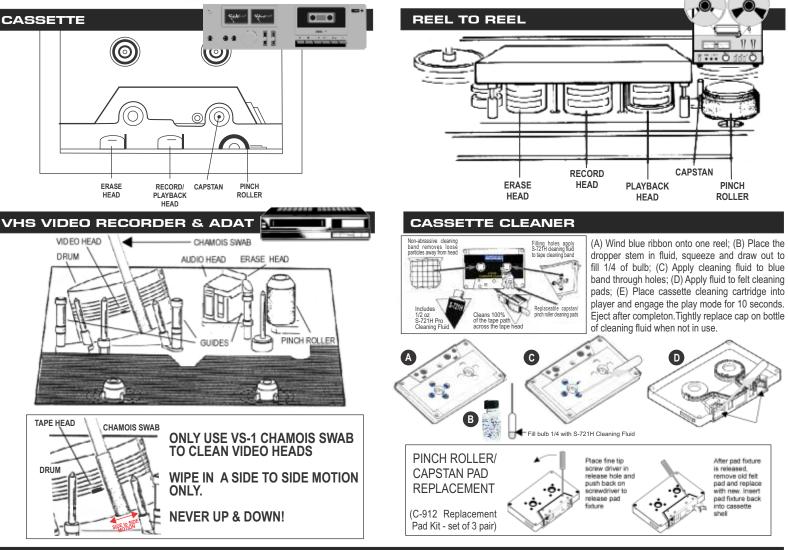


DEMAGNETIZER

Residual magnetism can build up on the tape head, causing increase signal noise and loss of fidelity. The D-512 PROFESSIONAL WAND DEMAGNETIZER generates a strong oscillating magnetic field eliminating accumulated residual magnetism, restoring optimum tape machine performance. In addition, it is also recommended to demagnetize all metal parts along the tape path including capstan and guides.

Use only as intended. Should be used by qualified individual. CAUTION: Risk of electrical shock! Do not use near water or if wet. Intended for indoor use only. Use in dry, ventilated area free of excessive dust, humidity, flammable materials, corrosive fumes and conductive contaminants. For 110-120 volt, 50-60Hz AC use only. Do not plug into any other power source. Do not operate with missing or damaged plug or electrical cord. **KEEP OUT OF REACH OF CHILDREN**.

INSTRUCTIONS

 (a) Plug the cord into the proper 110vAC power outlet; (b) Place the demagnetizer tip just next to the tape head (make sure the red protective cover is in place);



(c) Slowly rotate the demagnetizer tip in a circular motion while slowly pulling away until a distance of 12". Once complete, unplug demagnetizer from the power source.



www.American ecord com