

**DIGITAL SENSOR CLEANER KIT REFERENCE CHART**

as of JUNE 1, 2014

CAMERA	MODEL NUMBER	KIT with ORIGINAL FLUID	SENSOR CLEANING KIT with TIN OXIDE FLUID	REPLACEMENT SWAB	REPLACEMENT FLUID
CANON	5D Mark II (FL) Mark II, III	DSCK-124		SS-117	OCF-0.5 (original)
	50D (FL)	DSCK-117		SS-117	OCF-0.5 (original)
	5D		DSCK-TO-324	SS-124	OCF-TO-0.5 (tin-oxide)
	6D		DSCK-TO-324	SS-124	OCF-TO-0.5 (tin-oxide)
	350D	DSCK-117		SS-117	OCF-0.5 (original)
	10D	DSCK-117		SS-117	OCF-0.5 (original)
	1D	DSCK-120		SS-120	OCF-0.5 (original)
	1D Mark II	DSCK-120		SS-120	OCF-0.5 (original)
	1D Mark II n	DSCK-120		SS-120	OCF-0.5 (original)
	1D Mark III		DSCK-TO-320	SS-120	OCF-TO-0.5 (tin-oxide)
	1D Mark IV		DSCK-TO-320	SS-120	OCF-TO-0.5 (tin-oxide)
	1Ds, Mark IV, 1 DX	DSCK-124		SS-124	OCF-0.5 (original)
	1Ds Mark II	DSCK-124		SS-124	OCF-0.5 (original)
	1Ds Mark III, IV, 6D		DSCK-TO-324	SS-124	OCF-TO-0.5 (tin-oxide)
	20D	DSCK-117		SS-117	OCF-0.5 (original)
	300D	DSCK-117		SS-117	OCF-0.5 (original)
	350D	DSCK-117		SS-117	OCF-0.5 (original)
	30D	DSCK-117		SS-117	OCF-0.5 (original)
	40D	DSCK-117		SS-117	OCF-0.5 (original)
	7D	DSCK-117		SS-117	OCF-0.5 (original)
	D30	DSCK-117		SS-117	OCF-0.5 (original)
	D60	DSCK-117		SS-117	OCF-0.5 (original)
	REBEL (original)	DSCK-117		SS-117	OCF-0.5 (original)
	400D, 500D 600D, 650D, 700D		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	REBEL Xsi		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	40D		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	450D Xsi		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	500D, 550D. 600D	DSCK-117		SS-117	OCF-0.5 (original)
	1000, 1100, 1200 D, Xs		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	<b>CONTAX</b>				
CONTAX	N DIGITAL	DSCK-124		SS-124	OCF-0.5 (original)
<b>FUJI</b>					
FUJI	S1, S2, S3	DSCK-120		SS-120	OCF-0.5 (original)
	S5, X-A1, Pro1, E1, E2, M1, T1	DSCK-120		SS-117	OCF-0.5 (original)
	X-A1, XA1 Pro1		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	X-E1, E2, M1, T1		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
<b>KODAK</b>					
KODAK	14n	DSCK-124		SS-124	OCF-0.5 (original)
	760	DSCK-120		SS-120	OCF-0.5 (original)
	SLR/c	DSCK-124		SS-124	OCF-0.5 (original)
	SLR/n	DSCK-124		SS-124	OCF-0.5 (original)
	620	DSCK-120		SS-120	OCF-0.5 (original)
	620x	DSCK-120		SS-120	OCF-0.5 (original)
<b>KONICA MIN</b>					
KONICA MIN	5D	DSCK-117		SS-117	OCF-0.5 (original)
	7D	DSCK-117		SS-117	OCF-0.5 (original)
<b>LEICA</b>					
LEICA	M8		DSCK-TO-320	SS-120	OCF-TO-0.5 (tin-oxide)
	DMR, M9, 220, 240	DSCK-124		SS-124	OCF-0.5 (original)
<b>NIKON</b>					
NIKON	D1	DSCK-117		SS-117	OCF-0.5 (original)
	D100	DSCK-117		SS-117	OCF-0.5 (original)
	D1H	DSCK-117		SS-117	OCF-0.5 (original)
	D1X	DSCK-117		SS-117	OCF-0.5 (original)
	D200	DSCK-117		SS-117	OCF-0.5 (original)
	D2H	DSCK-117		SS-117	OCF-0.5 (original)
	D2Hs	DSCK-117		SS-117	OCF-0.5 (original)

CAMERA	MODEL NUMBER	SENSOR CLEANING KIT with ORIGINAL FLUID	SENSOR CLEANING KIT with TIN OXIDE FLUID	REPLACEMENT SWAB	REPLACEMENT FLUID
NIKON	D2X		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	DSXs		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	D3, D3X,		DSCK-TO-324	SS-124	OCF-TO-0.5 (tin-oxide)
	D300, D300s, D3000, D5000, D5200		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	D5300, D7000, D7100		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	D4		DSCK-TO-324	SS-124	OCF-TO-0.5 (tin-oxide)
	D40		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	D40x		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	D50	DSCK-117		SS-117	OCF-0.5 (original)
	D60		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	D600, 610		DSCK-TO-324	SS-124	OCF-TO-0.5 (tin-oxide)
	D70		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	D70s		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	D700		DSCK-TO-324	SS-124	OCF-TO-0.5 (tin-oxide)
	D7000		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
D80		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)	
D800, 800E, 810		DSCK-TO-324	SS-124	OCF-TO-0.5 (tin-oxide)	
D90		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)	

OLYMPUS	E3, E5, E30		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	E300	DSCK-117		SS-117	OCF-0.5 (original)
	E1	DSCK-117		SS-117	OCF-0.5 (original)
	E410, 420, 450		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	E510, 510, 520, 600, 620		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	All PEN-E & OM-D		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)

PANASONIC	All Models		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
-----------	------------	--	-------------	--------	------------------------

PENTAX	istDL	DSCK-117		SS-117	OCF-0.5 (original)
	istDS	DSCK-117		SS-117	OCF-0.5 (original)
	istD	DSCK-117		SS-117	OCF-0.5 (original)
	K100D	DSCK-117		SS-117	OCF-0.5 (original)
	K10D, K3, K-r, k-x, K-01		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	KM, K30, K50, K200D, K500, K2000		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	D200d, D20d		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
D20d		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)	

SIGMA	SD9	DSCK-120		SS-120	OCF-0.5 (original)
	SD10	DSCK-120		SS-120	OCF-0.5 (original)
	SD14	DSCK-117		SS-117	OCF-0.5 (original)

SANSUNG	ALL MODELS		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
---------	------------	--	-------------	--------	------------------------

SONY	A-100		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	A - 200, 230, 290		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	A - 300, 350, 380, 390, 450		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	A - 500, 550, 560, 580		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	A700, A6000		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	A77		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)
	A850		DSCK-TO-324	SS-124	OCF-TO-0.5 (tin-oxide)
	A99		DSCK-TO-324	SS-124	OCF-TO-0.5 (tin-oxide)
	A900		DSCK-TO-324	SS-124	OCF-TO-0.5 (tin-oxide)
	A7/R		DSCK-TO-324	SS-124	OCF-TO-0.5 (tin-oxide)
NEX Series		DSCK-TO-317	SS-117	OCF-TO-0.5 (tin-oxide)	