

1. Measure wires to be covered.



2. Using scissors, cut **SNAKESKIN** to desired length.



3. Open **SNAKESKIN** and insert wires until covered.




4. **SNAKESKIN** will self-wrap wires creating a loom



Connect cables to TV. Excess wires can be placed inside **SNAKESKIN**.

5. Use the **REGRIP** Cable Straps to secure cable loom to back side of TV mount if needed. For full motion mounts, position cable loom away from mounts moving parts as to not prohibit the mounts movements. Extend and retract mount several times to assure cable loom is free and clear and will not restrict mounts motion as illustrated in the drawing below (not all mounts are identical, your mount may vary).

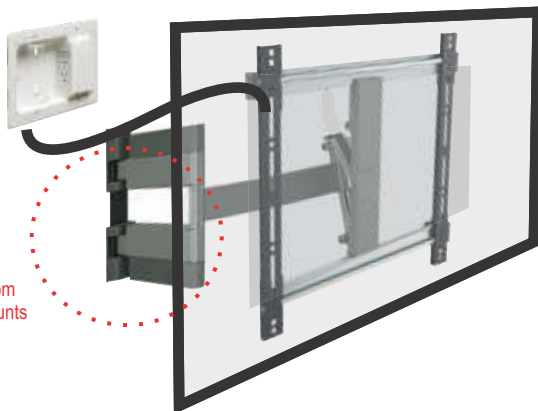

Keep cable loom away from mounts moving parts




Use **REGRIP** Mounts with the **REGRIP** Cable Straps when additional support is required. **REGRIP** Mounts must be mounted to a clean and flat surface. Use the attached adhesive pad or optional screw hole mount. Additional straps & mounts are sold separately.




### CONVERT PACKAGE to MEDIA BOX HOLDER


a) using scissors, trim off top and side flaps from box as shown by red cutting line.

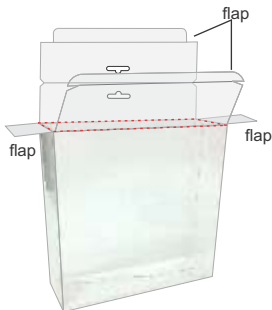

b) affix adhesive pads to the back of box. Apply pressure to assure a strong bond.

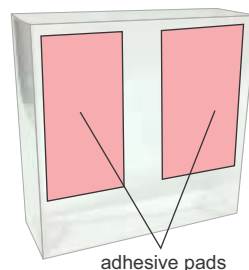

c) select a smooth and flat area on rear of TV to place media box holder and use provided wipe to clean off surface. Allow several minutes for area to dry. Peel off protective cover from large adhesive pads and affix box to TV with the box opening facing up. Insert hand into box and press firmly to back of TV. Place streaming device such as Apple TV or Roku in box with cables exiting the top.

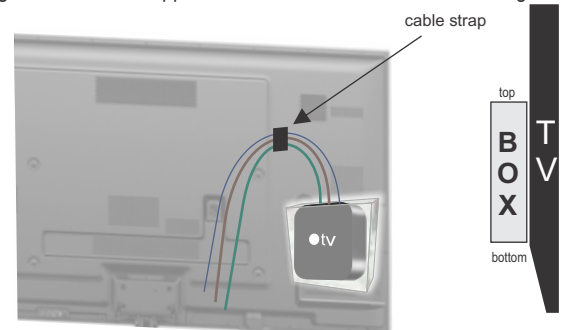

d) Use **REGRIP** CABLE STRAP to support cables exiting Media Box Holder