

Instructions: Put transmission in 3rd Gear then rotate the input shaft and count it's rotations until the output shaft rotates only 1 time - compare that number below.

Stamp	S80	Y21/S21	Y21/Y80/S80/S4C	S80/Y80	S80	Y1	YS1/S1/J1	S1/YS1
Chassis	98+ Type R	Del Sol / 99+ Si	96-97 Type R	94+ GSR	94+ LS/RS/GS	JDM SiR	92-93 GSR / XSi	90-93 LS/GS/RS
Clutch	Hydro	Hydro	Hydro	Hydro	Hyrdo	Cable	Cable	Cable
LSD	Yes	No	Yes	No	No	Optional	Optional	No
Engine Code	B18C	B16	B18C	B18C1	B18B	B16A	B17A	B18A
3rd Gear Rotation	<b>6.97</b>	<b>6.41</b>	<b>6.41</b>	<b>5.76</b>	<b>5.54</b>	<b>6.04</b>	<b>6.41</b>	<b>5.54</b>

Stamp	L3	L3	L3	L3	L3	L3
Clutch	Cable	Cable	Cable	Cable	Cable	Cable
LSD	Optional	Optional	No	No	No	No
Engine Code	ZC SOHC	ZC DOHC	D15B1 4spd	D15B2	D16A6	D15B6 HF
3rd Gear Rotation	5.35	5.23	4.01	4.9	5.35	3.04 / 3.35

To ID 92-95 Hydro Trans : Look by the fill plug. You'll see a circle cast into the housing.  
P20-A000 = DX,CX,VX trannys  
P20-B000 = Si,EX trannys.