



SEAT COVERS INSTALLATION

BUCKET SEATS INSTALLATION


1. Remove headrests for easy access. (Optional)
2. Push the Seat forward and slide the seat cover over the top of the seat until it you reach the bottom of the chair. Evenly slide the cover, pressure and compress the seat sides if necessary to allow the cover to install.
3. Fit base of cover snugly over seat.
4. If desired, you may fasten the elastic clips at the end of the seat covers with supplied "S" hooks. (Optional)
5. Place on head rest cover and re-insert the headrest into your seat.

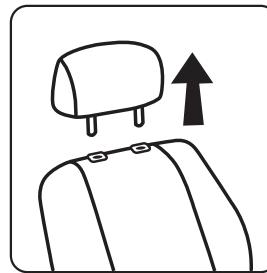



Detach headrest and slip the headrest cover

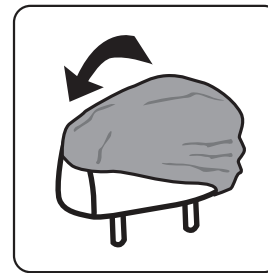

Slip the back and base covers over the seats

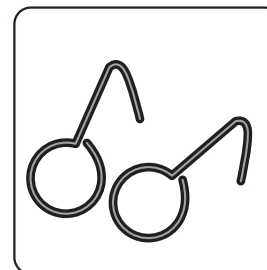

Connect elastics loops with S-hooks

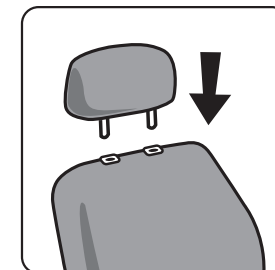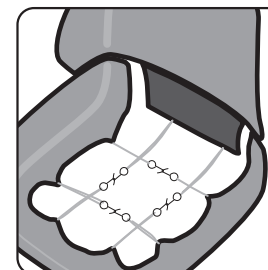


Install back the headrest




BENCH SEAT INSTALLATION


1. If possible, remove bench seat from vehicle for easier access. (Optional)
2. Remove headrests for easy access. (Optional) and push the Seat forward.
3. Slide the seat cover over the top of the seat until it you reach the bottom of the chair. (*)
4. If desired, you may fasten the elastic clips at the end of the seat covers with supplied "S" hooks. (Optional)
5. Place on head rest cover and re-insert the headrest into your seat.

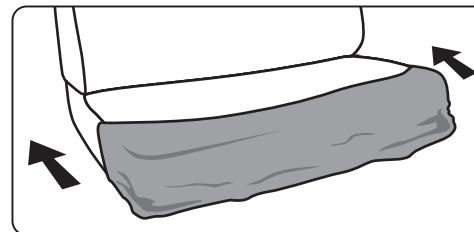


Slide the bench base seat cover

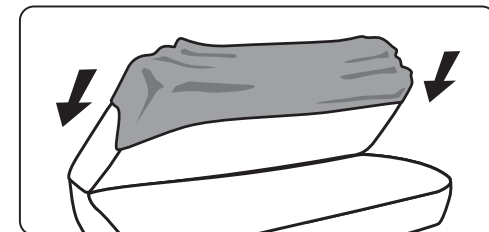

Fold the back seat and slide the back cover

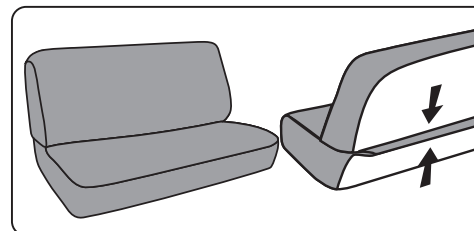

Align the covers following bench contour and pull evenly through the crevice

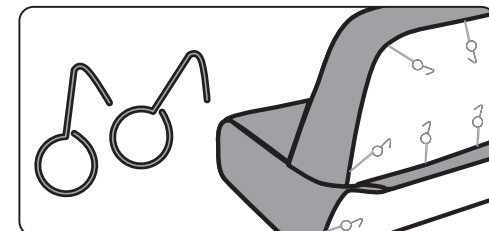

Connect elastics loops with S-hooks

(*) It rarely occurs where the bench seat belts are a part of the chair and also inhibit the usage of the seat covers. If so, you will need to temporarily detach the seat belts. Consult your vehicle manufacturer manual for further information. If you are unable to do so, call us for further assistance.

FURTHER QUESTIONS OR CONCERNS?

We're available Monday to Friday 9am to 5pm PST, Tel: **323-312-3438**, or email us anytime at support@customautocrewns.com