

# BDI Equipments BDWL-16T

INTERVALS	ITEMS
DAILY INTERVAL	Crankcase Breather Tube - Check
	Lubricating Oil Level - Check
	Fuel-Water Separator - Drain
	Fan, Cooling - Check
	Coolant Level - Check
	Air Intake Piping - Check
	Air Cleaner Restriction - Check
	Dust Ejection Valve - Check
	Drive Belts - Check
250 hours or 3 months	Lubricating Oil and Filters - Change
	Radiator Hoses - Check
	Charge-Air Cooler - Check
	Charge-Air Piping - Check
	Air Intake Piping - Check
500 hours or 6 months	Fuel-Water Separator - Change
	Fuel Filter (Cartridge Type) - Change
	Lubricating oil and Filters - Change
	Radiator Pressure Cap - Check
	Engine Coolant Antifreeze - Check
	Batteries - Check
	Battery Cables and Connection - Check
1000 hours or 1 year	Fan Hub, Belt Driven - Check
	Cooling Fan Belt Tensioner - Check
2000 hours or 2 years	Overhead Set - Adjust
	Cooling System - Flush
	Air Cleaner Element - Change