

ASSEMBLY INSTRUCTIONS

THIS TREE IS FOR INDOOR USE ONLY

CAUTION: IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW

ALL SAFTY INSTRUCTIONS

- Do not use this seasonal product outdoor.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wire of the product with staples or nails, or place on sharp hooks or nails.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire or light string.
- Never operate this product if the power cord or plug is damaged.
- Only use manufacturer specified replacement bulbs.
- Read and follow all instructions that are on the product or provided with the product.

CAUTION: This is an electrical product – not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.

USE AND CARE INSTRUCTIONS

- When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.


SAVE THESE INSTRUCTIONS

Retain carton for storage purposes

Assembly

Each carton contains 3 trunk sections (labeled as A,B,C) and a metal stand. Working your way up from the bottom (C to A).

1. Assemble the tree stand and place it on a level surface.
2. Remove the protective plastic cap from the end of section C and insert it into the assembled stand. Make sure the pole is seated properly and tighten the eye bolt.
3. Remove the protective plastic cap from the end of section B. And insert section B into the opening of section C. Same way to insert section A into section B.
4. Plug the light string cords from the top section into the end (female) connector of the bottom section. Make sure they are connected tight and firmly. (FOR PRELIT TREE ONLY)

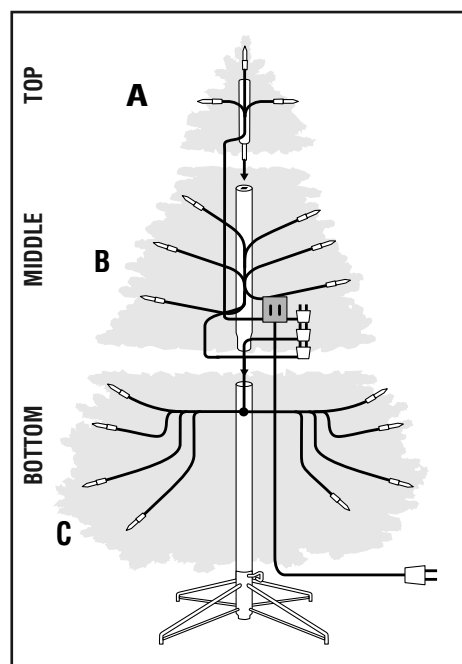


Shaping Instruction

Shaping the tree branches is the last step of assembly. The care and attention given to this final process will result in a genuinely beautiful and appealing holiday centerpiece.

- Every tree style is shipped from the factory with the tips of each branch compressed to the center .
- Each branch tip must be shaped to its proper position to give the tree a natural look. This is done by gently grasping the left and right wing tips and spreading them out away from the center branch.
- Each individual tip should then be spread out separately. Tips should then be bent slightly upward to add a more natural looking appearance.
- As you shape closer to the top, the branches will not have wing tips, but will otherwise shape in the same manner as lower sections.

Bulb Replacement *(FOR PRELIT TREE ONLY)*

1. Unplug light string from power source. Do not unplug by pulling on cord.
 2. Pull bulb and plastic holder straight out of the socket. (This product is equipped with push-in type lamps. Do not twist lamps)
 3. Insert the spare bulb provided with products. Make sure the two wires on either side of the bulb base are straight up and flush with the base (diagram at right).
- * ***TO GET RID OF OVERHEATING, PLEASE REPLACE THE BURNED OUT BULBS AS SOON AS POSSIBLE.***

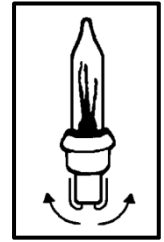

Fuse Replacement

1. Unplug light string from power source. Do not unplug by pulling on cord.
2. Fuses are located in light string plug. Slide the fuse access cover away from cord side.
3. Remove fuses from compartment and examine. Replace burnt out fuse with new one.
4. Close fuse compartment by sliding access cover back in towards cord side of plug.

Storage

Remove all holiday decorations. Gently press tips back into center branch. Raise all branches to original upright position taking care not to place undue pressure on the attached ends of the branches. When disassembling tree, a twisting motion will help to separate the sections from each other. All tree parts can be replaced in carton and should be stored in a cool, dry place.

Customer Service

Thank you for ordering our product. If you have any questions, please feel free to contact us at (562)456-0507 or email to inquiry@hykolity.com. We always find ways to improve!

Installation Video



Scan QR Code