

DURITE®
Oil Pressure Gauge
(electronic)
Part 0-523-17/67

Fitting Instructions

1. Ensure that the gauge voltage matches the vehicle or system voltage (including illumination).
2. Switch off the ignition and remove the key. Disconnect battery (earth terminal first). Note: Before disconnecting the battery make sure all system start up codes are known, i.e. coded radios etc.
3. Choose a suitable location for the gauge with adequate access to the rear of the gauge for connections and fixings.
4. Cut a 53 mm diameter hole at the chosen location for the gauge. Push the gauge into the hole and fit the "U" bracket over mounting studs at the rear of the gauge. Fit washer(s) and nut to each stud. Align gauge and tighten nuts.
5. Fit the sender unit to a suitable point in the system being monitored. Ensure that the sender unit body connects to earth.
6. Connect the terminal marked "+" to a suitable ignition controlled fused supply or positive feed and connect the terminal marked "-" to earth or negative feed. Connect the terminal marked "S" to the stud terminal on the sender unit.
6. Connect the bulb wiring, orange wire to the vehicle panel lamp supply (after the fuse) and black wire to earth.
7. Check all connections are correct and secure. Reconnect battery (earth terminal last). Start the engine and check that the gauge registers. Switch on panel lamps and check that the gauge illuminates.

DURITE®
Oil Pressure Gauge
(electronic)
Part 0-523-17/67

Fitting Instructions

1. Ensure that the gauge voltage matches the vehicle or system voltage (including illumination).
2. Switch off the ignition and remove the key. Disconnect battery (earth terminal first). Note: Before disconnecting the battery make sure all system start up codes are known, i.e. coded radios etc.
3. Choose a suitable location for the gauge with adequate access to the rear of the gauge for connections and fixings.
4. Cut a 53 mm diameter hole at the chosen location for the gauge. Push the gauge into the hole and fit the "U" bracket over mounting studs at the rear of the gauge. Fit washer(s) and nut to each stud. Align gauge and tighten nuts.
5. Fit the sender unit to a suitable point in the system being monitored. Ensure that the sender unit body connects to earth.
6. Connect the terminal marked "+" to a suitable ignition controlled fused supply or positive feed and connect the terminal marked "-" to earth or negative feed. Connect the terminal marked "S" to the stud terminal on the sender unit.
6. Connect the bulb wiring, orange wire to the vehicle panel lamp supply (after the fuse) and black wire to earth.
7. Check all connections are correct and secure. Reconnect battery (earth terminal last). Start the engine and check that the gauge registers. Switch on panel lamps and check that the gauge illuminates.