









RIDE-ON MOWERS

MODEL	SALES CODE & HP	YEAR OF	MANUFACTURE
9605 <i>G</i>	CR9600 13HP B&S		2005-2007
A10506G	CR9601 17HP B&S		2005-2007
A11607L	CR9600U 13HP B&S		2007-2008
A11707L	CR9602U 15.5HP B&S		2007-2008
A11608F	CR9600U 13HP B&S		2008-2009
A11708F	CR9602U 15.5HP B&S 32" CR9603U	38"	2008-2009
A11908F	CR9604U 16HP HONDA 38" CUT		2008-2009
A13509G	CR9600U 13.5HP B&S		2009-2010
A13510B	CR9600U 13.5HP B&S		2010
A13609G	CR9602U 15.5HPB&S 32" CR9603U 3	8"	2009-2010
A13610B	CR9602U 15.5HPB&S 32" CR9603U 3	8"	2010
	CR9607 16.5HPB&S 32"		2010
	CR9608 18.5HP B&S 32" CR9609 38"	•	2010
A13709G	CR9605U 13HP HONDA 32" CR9604U	16HP 38"	2009-2010
A13710B	CR9605U 13HP HONDA 32" CR9604U	16HP 38"	2010
A14010K	CR9607S 16.5 B&S 32"		2010-
	CR9608S 18.5HP B&S 32" CR9609S	38"	2010-
A14110K	CR9605S 13HP HONDA 32" CR9606S	16HP 32"	2010-
	CR9604S 16HP 38"		2010-

OWNER/OPERATORS MANUAL READ THIS MANUAL BEFORE OPERATING MACHINE

DEATH, PERSONAL INJURY AND/OR PROPERTY DAMAGE MAY OCCUR UNLESS INSTRUCTIONS IN THIS MANUAL ARE FOLLOWED

NOTE: Bring this Manual when Service & or Warranty work is required.

LAWN BOSS

OWNERS INFORMATION

MACHINE CODE NO:			
SERIAL NO:			
Located on label inside transmission h		_	
B&S ENGINE MODEL NO:	TYPE	CODE_	
HONDA ENGINE TYPE NO: Located on engine refer Engine Owners Manual			
DATE OF PURCHASE:			
	ISSUED T	·O:	
OWNERS NAME:			_
ADDRESS:			= :
			- _STATE:
	ISSUED	BY:	
AUTHORISED DEALER/ DISTRIBUTOR:			_
ADDRESS:			<u>-</u>
TOWN/CITY:			_ _state:
	PRE DELIVERY C	HECK LIST	
Check parts	☐ Assemble ☐	Service □Instruc	tion □

ALWAYS KEEP THIS MANUAL IN A SAFE PLACE.

SAFETY INSTRUCTIONS

- Read, understand, & follow all instructions in the Owner/Operators manual.
- Know the controls and how to stop the engine quickly in an emergency.
- Allow only responsible adults, who are familiar with the instructions in this manual, to operate the machine.
- Clear the area to be mowed of loose objects such as sticks, stones, bones, wire, toys, debris, etc., which could be picked up and thrown by the blades.
- DO NOT mow whilst people, especially children, or pets are in the mowing area.
- DO NOT mow either direction on slopes beyond 15 degrees (1 in 3.75).
- · Exercise extreme caution on slopes.
- Reduce speed on slopes and in sharp turns to prevent overturning or loss of control.
- Start or stop slowly when on slopes.
- Mow up and down slopes, not across the slope.
- Stay alert for holes or bumps in the terrain and other hidden hazards.
- Watch out for traffic when crossing or operating the mower near roadways.
- Stop the blades rotating before crossing surfaces other than grass.
- When using attachments, never direct discharge of material toward bystanders nor allow anyone near the machine while it is in operation.
- Before leaving the operators position
 - a] Disengage all clutches and secure cutting units;
 - b] Return drive pedal to neutral position and set the parking brake;
 - c] Stop the engine and remove the key.
- Disengage drive to attachments and stop enginea] Before refueling;
 - b] Before checking, cleaning or working on the mower:
 - c] After striking a foreign object (check the mower for damage and make repairs before restarting and operating the equipment);
 - d] If machine starts to vibrate abnormally (check immediately).
- Disengage drive to attachments when transporting or not in use.
- A mower operator should be in good physical and mental health and not under the influence of alcohol or any drug which might impair vision, co-ordination or judgment.
- Never mow while barefoot or wearing open sandals or thongs. Wear long trousers and heavy shoes.
- It is advisable to wear suitable eye protection when operating a mower.

- Mow only in daylight or good artificial light.
- Before using, always visually inspect to see that blades, bolts and cutter assembly are not worn or damaged. Replace worn or damaged blades and bolts in sets to preserve balance.
- Check all nuts, bolts, and screws often; always be sure the mower is in safe operating condition.
- Keep safety devices (guards and switches) in place and in working order.
- Never use the mower unless the guards provided by the manufacturer, are in position.
- Ensure any replacement parts used comply with the original manufacture's recommendations and specifications.
- Replace worn or faulty silencers.
- Keep machine free of grass, leaves or other debris, excessive oil, grease, or spilt fuel. These can be a fire hazard.
- Refuel outdoors only. Do not smoke while fueling engine. Never remove the cap of the fuel tank or add petrol while the engine is running or the engine is hot. Remove fuel cap slowly to relieve any tank pressure. If fuel is spilled, do not attempt to start the engine but move machine away from the area of the spill and avoid creating any source of ignition until fuel vapors have dissipated.
- Check for fuel leaks while refueling, before and while using the mower. If a fuel leak is found, do not start or run the engine until the fuel leak is fixed and spilled fuel is wiped away.
- Do not operate engine in a confined space where exhaust fumes (carbon monoxide) can collect.
- Always mount the mower from the left or the opposite side to the discharge chute.
- Start the engine carefully with the cutting means disengaged.
- Do not over-speed the engine or alter governor settings. Excessive speed is dangerous and shortens mower life.
- Stop the engine whenever you leave the mower, even for a moment.
- Store the mower in a well-ventilated room away from naked flames such as may be found in hot water heaters.
- Do not lend or sell the mower, without the owners/ operators Manual.

PRE-DELIVERY INSTRUCTIONS

INTRODUCTION:

The purpose of this procedure is to ensure the dealer/distributor has made the necessary installations, adjustments and checks, before the machine is operational. This procedure begins upon receiving the crated mower and is finalised once the mower has been either sold or leaves the dealer/distributors premises. This is the minimum amount of work required, however it should not be limited to only the areas detailed in this procedure.

RESPONSIBILITY:

It is the responsibility of the dealer/distributors to ensure that before a machine is delivered to a customer, it is in perfect operational condition.

PROCEDURE:

CHECK ACCESSORIES SUPPLIED IN SEAT PROTECTION BAG

- $\hfill\square$ Engine owners manual
- □ Owner/Operator manual
- ☐ Ignition keys (AM015)
- ☐ Spark plug spanner (AM295)
- ☐ Spark plug spanner (AM005G0 16HP Honda)
- ☐ Spark plug Spanner 13HP Honda
- ☐ Tommy bar (AM007)
- ☐ Steering wheel (SW13)
- □ Roll Pin (DP10)
- ☐ Set Screws M8X20 X 2
- □ Nuts M8 Nyloc x 2
- ☐ Seat Springs x 2 (13060)
- □ Washer W05M202 x 2
- □ Warranty Card
- □ Pre-delivery Instruction Sheet


Remove the four seat bolts, shakeproof washers and plain washers to remove the plastic bag protection from around seat. Install the four seat bolts, shakeproof washers and plain washers, making sure that the seat is adjusted into the desired position by using the seat transmission slots, tighten bolts.

TYRE PRESSURE

Before operation ensure that all tyre pressures are equal. The maximum pressure allowed is 140 kpa (20 P.S.I.).

ENGINE OIL

Before operation ensure that engine oil level is to the full mark on the dipstick. (Check engine owners manual if oil needs to be added).

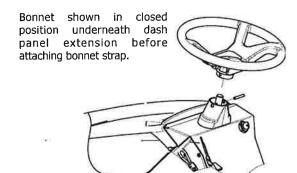

Roll Pin type steering wheel

FUEL TAP

Ensure the fuel tap at the bottom of the LH side of fuel tank is turned to the on position before attempting to start engine. (Use unleaded fuel only).

Turn off fuel tap after use.

ASSEMBLE STEERING WHEEL TO MOWER

Roll Pin Type—To attach the steering wheel, align the hole in the steering wheel boss to the hole in the steering shaft and use a hammer and suitable punch to drive the DP10 roll pin in, through the hole in the steering shaft cover into the steering wheel and shaft. Ensure that the pin is situated centrally in the steering wheel boss and that the steering is free to turn.

Keyed Type— Remove tape attaching woodruff key to steering shaft. Remove the screw & washers attached to the steering shaft. Lubricate taper on steering shaft with grease or anti-seize. Place steering wheel with keyway aligned with woodruff key on shaft. Assemble the screw and washers onto the shaft with 1/2"a/f socket, extension & wrench & tighten to 23Nm.

Press the steering wheel center cover into place using hand pressure only.

SEAT SPRINGS

Install and tighten the two seat springs, bolts and nuts to the bracket welded to the rear of the chassis, which is situated under the seat/transmission cover.

SAFETY SWITCHES


Park brake switch - With cutter lever disengaged, attempt to start the engine without setting the park brake. Engine should not start.

Disengagement Switch - While sitting on machine with park brake set and cutter engaged, attempt to start machine. Engine should not start.

Seat Switch - While sitting on machine start engine, engage cutter and lift weight from seat. Engine should cut out.

CUTTER BELT

Ensure that when the cutter belt is in the disengaged position that the belt does not overlap when squeezed together, if this occurs adjust the cutter engage lever until correct disengagement is achieved.

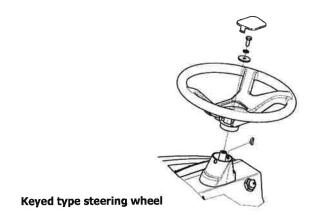

OPERATING INSTRUCTIONS

IMPORTANT

RECOMMENDED FUEL

Unleaded fuel is recommended by all manufacturers of engines fitted to Cox products.

SAFETY MICRO SWITCHES

Before operating machine, ensure that all micro-safety switches are operating correctly. Do not operate machine with faulty, missing or damaged safety micro-switches.

STARTING MACHINE

When starting machine; Ensure parking brake is set. Ensure that cutter is disengaged, otherwise electric starter motor will not engage. If engine is cold move throttle to cold start position and return to desired throttle setting when engine starts. Do not attempt to operate engine with throttle lever in cold start (choke) position. (Note electric start engines fitted with recoil can be manually started with cutter disengaged and ignition on).

BLADE WARNING

Do not use mowing attachment with broken or bent blades, damaged or worn bolts and nuts or damaged cutter disc, otherwise damage and premature wear will result from vibration. Replace blades, bolts and nuts only in pairs to maintain correct balance. Recommended blade nut torque is 36-40Nm. Do not over tighten.

Keep both feet and hands clear at all times of the mowing attachment while attempting to start or operate the machine.



Safety footwear is recommended when operating machine. Mount and dismount only from left hand side of machine. Reference to left or right hand side of machine is determined by sitting in the operating position on the machine. Ensure machine has parking brake engaged when attempting to start engine.

Never allow engine revs to exceed more than 3600 RPM.

TO OPERATE

BEFORE STARTING/SWITCHING OFF:

See Engine Maintenance/Instruction Sheet. When stopping engine disengage cutter return throttle to slow position and switch off

ENGAGING & DISENGAGING MOWING ATTACHMENT:

The Disengaging lever is situated on the right hand side by the steering column. Before starting, disengage mowing attachment by pulling lever fully to the operator. Before engaging mowing attachment ensure cutter height adjustment is in high position. Select preferred cutting height after engaging mowing attachment. For safety it is advisable at all times, other than when mowing, that the mowing attachment be kept in the disengaged position.

TO DRIVE FORWARD/REVERSE:

Power is regulated by the throttle, set throttle control to desired engine power. Press down on the forward section of the drive pedal for forward movement, on the rear of the drive pedal for reverse. The amount of movement controls the ground speed, less movement from the neutral position results in less ground speed, use this feature especially in heavier conditions.

MANOEUVRING:

The forward and reverse operation makes the machine very manoeuvrable and the sharpest turns can be negotiated easily and quickly, however;

Owing to the hydrostatic transmission, when manoeuvring the machine you must allow the machine to come to a complete stop before moving off in the opposite direction. This means that if you are travelling forward and need to reverse out of an area etc, you must return the pedal to the neutral position come to a complete stop and then select reverse drive and Vice Versa for travelling from reverse to forward.

TO BRAKE:

The drive pedal may be used to slow/brake the machine. If travelling forward ease the pedal back into the neutral position and the machine will slow and stop. When travelling in reverse ease the pedal forward into the neutral position. Should a failure to drive occur during operation use the brake pedal situated on the left side of the mower.

PARKING AND TRANSPORTATION BRAKE:

TO ACTIVATE: Fully depress the brake pedal situated at the left side of the mower. Raise park brake knob protruding out of the right hand side of the console and release brake pedal to engage the park brake in lock & release knob. Depress pedal and the mechanism will release.

Do not engage parking brake unless the machine has completely stopped.

Do not attempt to drive with park brake engaged.

CUTTING HEIGHT ADJUSTMENT:

The height adjustment lever is located on the left hand side of the machine and may be altered to suit varying conditions.

NOTE: When mowing slopes, keep drive pedal in forward or reverse, depending on direction of travel. The low gearing will prevent it from picking up excessive speed. If very steep it may be necessary to throttle back slightly and /or, decrease pedal travel.

MAINTENANCE INSTRUCTIONS

It is the owner's responsibility to ensure that all-periodical checks, necessary adjustments and services are carried out.

STOP ENGINE - Never attempt any maintenance with the engine running, remove spark plug lead and ensure the blades have stopped rotating. Before servicing, disconnect spark plug wire and ground it, disconnect battery at negative terminal, to prevent accidental starting.

1. OIL CHANGING & FILTER REPLACEMENT (ENGINE): See Engine Maintenance/Instructions Sheet and carry out as per Engine Manufacturers Recommendations.

SERVICING ENGINE AIR CLEANER FOAM PRE-CLEANER— See engine owners manual for correct method to check and service engine air deaner and or foam pre-cleaner.

TRANSAXLE— Type of Oil- top up with 10w30 oil replace with 5W50 synthetic oil — Quantity 2300mls.

- **2. LUBRICATION OF MACHINE:** Lubrication of machine must be carried out every 25 hours of operation or once a month, whichever falls first. More frequently when operated under adverse conditions.
- **A. OILING:** A few drops of oil should be placed at the following points: Steering linkages and pivot points, disengaging linkages and height adjustment mechanism.
- **B. CHAIN:** Use only chain lube for lubrication of the steering chain.
- **3. TO CHECK BLADES:** Stop engine. Remove spark plug lead. Side Discharge Only, lift deflector and height adjustment control to highest position. If necessary simply remove the blade bolt and nut using a suitable spanner and replace worn parts.
- **4. ENGINE TO PTO VEE BELT ADJUSTMENT:** Loosen the four engine mounting bolts. Move engine forward and adjust belt firmly. Do not over tension. While maintaining tension on the engine re-tighten bolts. Check belt tension at machine service period (25hrs B&S) (50hrs Honda) or more frequently under heavy mowing conditions.
- **5. PTO TO CUTTER VEE BELT ADJUSTMENT:** Tension is automatically adjusted by the belt tensioning springs. However, as the belt stretches it will be necessary to lower the rear of the cutter housing by loosening the rear lifting link nut, and visa versa when a new belt is fitted.
- **6. CUTTER HEIGHT ADJUSTMENT:** If the Mowing Attachment can not be positioned to give a satisfactory grass cut height using the available notches on the chassis the adjustable link can be used to raise the Mowing Attachment to the desired height. Position the mower on a smooth level surface and engage the mowing attachment, lock the park brake on, and lower the Mowing Attachment to the notch above the desired cut height. Place equal height spacers of the desired height under the mowing attachment that can support the mowing attachments weight and lower the Mowing Attachment onto them. Loosen the 2 Screws located together on the front of the Rear Link located below the front of the left foot rest. Push the Rear Link rearwards until it stops and retighten the 2 screws. Adjust the rear lifting link located on the middle rear of the mowing attachment by tightening the nut until it just lifts the rear oif the mowing attachment of the spacers. Lift the Mowing attachment off the spacers and remove the spacers and check the cut height is as desired and the deck is level to slightly higher (3-5 mm) at the back. Adjust height again if required.
- 7. CUTTER BRAKE ASSEMBLY ADJUSTMENT: With disengagement handle in engaged position and mowing attachment in low cut, normal clearance between cutter head pulley and cutter head brake pad is approximately 3mm (1/8"). To adjust clearance, remove 'R' pin from brake pull rod, adjust to give required clearance, replace brake pull rod and 'R' pin. Check operation after adjustment.
- 8. **DISENGAGING ADJUSTMENT:** With the engine switched off, engage the mowing attachment, then fully lower. Place a straight

edge vertically against the front of the front axle beam and in line with the disengagement lever. Measure the distance between the straight edge and the 8mm dia pin fitted with the small 'R' pin for the threaded adjuster. Disengage mowing attachment and using the same method, check the new distance. The difference should be $20-22\mathrm{mm}$. Engage mowing attachment, remove 'R' pin and adjust threaded adjuster accordingly. Install 'R' pin and re-check measurement. Due to normal wear in transmission to cutter vee belt, the disengagement lever will move lower and touch the foot rest. When this occurs the amount of travel will need to be readjusted. If a new vee belt is installed the above settings will apply. Start engine and raise cutter to full height stop, cutter belt should not engage. If this occurs switch off engine, engage cutter then screw adjuster out 1-2 turns then retest.

- **9. TO ADJUST STEERING CHAIN:** Adjust chain by loosening the four bolts which hold the steering idler shaft mounting brackets (AM255) in position, slide forward to tension chain then retighten holts
- **10. TO REMOVE MOWING ATTACHMENT:** Fully lower mowing attachment and engage, remove weight compensating spring, remove 'R' pin from rear lifting link and disconnect, remove 'R' pin from cutter brake adjusting rod and disconnect, disengage mowing attachment, remove belt, remove front pivot pin, Turn steering wheel to the left to slide out mowing attachment. To refit, reverse the above.
- **11. MOWING ATTACHMENT VEE BELT ADJUSTMENT:** Automatic by springs on mowing attachment.
- **12.TYRE PRESSURE:** 140 Kpa (20.P.S.I.) approximately front and rear. Uneven pressure can give an uneven finish when mowing and may cause damage to tyres and/or tubes.
- **13. BATTERY MAINTENANCE:** Maintain electrolyte fluid level just above plates by topping regularly with distilled water. When not in use, a battery discharges by as much as 1% a day, more when the climate is warm. To make up for this loss, a boosting charge should be given once a month. Disconnect battery terminals to charge, then allow to stand minimum 1/2hr before re-connecting (re-check electrolyte level). If a battery is not used for a period of more than three (3) months, the terminals should be disconnected and trickle charged at two (2) amps for two (2) hours once every three (3) months or before use.
- **14. SEAT ADJUSTMENT:** Loosen four seat mounting bolts and slide seat into desired position in slots and re-tighten bolts.
- **15. CLEANING AND POLISHING POLYETHYLENE BONNET AND REAR MUDGUARD:** To keep scratches on bonnet and mudguard to minimum, do not rub or brush off with bare hands, use a soft cloth or a light flow of compressed air. For dirt, wash with a steady stream of water only (no detergent), then blow off excess water with air. To polish remove excess dust or dirt. When surface is dry, spray on an automotive type plastic preservative and leave on for 30 to 60 seconds. Using a dry soft cloth (i.e. cheesecloth) wipe off to bring up lustre.
- **16. GENUINE SPARE PARTS:** Always use Genuine Cox Factory Made Spare Parts. Use of non-genuine COX spares will void your warranty.
- **17. SAFETY FIRST:** The use of any mechanical appliance can cause injury if incorrect procedures are used. Please ensure that all family members of intended operators read this manual thoroughly.

TORQUE SETTINGS

1/4" UNC BOLT/NUT
5/16" UNC BOLT/NUT
3/8" UNC BOLT/NUT
7/16" UNF BOLT
6mm BOLT/NUT
20mm NUT
5/8" UNF NUT
5/8" UNF NUT
5/10 UNF MOLT/NUT
100Nm (84lbf in)
20Nm (180lbf in)
68Nm (27lbf ft)
99Nm (80lbf in)
100Nm (74lbf ft)

MAINTENANCE SCHEDULE

BEFORE EACH USE & EVERY 5 HOURS

Check engine oil level, adjust if required

Check engine air cleaner foam pre-cleaner, service if required

Check engine rotating screen/finger guard, clean if required

Check operation of safety switches, service if required

Check foot brake operation

Check tyre pressures, adjust if required

Check for loose fasteners, tighten if required

Lubricate stub axles

Check mowing attachment cutter blades, bolts, nuts, disc/s, housing, and guards for wear or damage, replace if required

BEFORE EXTENDED STORAGE

Change engine oil - Clean machine - Lubricate as per required

EVERY 5 HOURS

Check engine oil level, adjust if required

Check engine air cleaner foam pre-cleaner, service if req.

Check engine rotating screen/finger guard, clean if required

Check operation of safety switches, service if required

Check foot brake operation

Check tyre pressures, adjust if required

Check for loose fasteners, tighten if required

Check for loose fasteners, tighten if required

Lubricate stub axles

Check mowing attachment cutter blades, bolts, nuts, disc/s, housing,

and quards for wear or damage, replace if required

Check and adjust engine to transmission vee belt if required..

Check transmission to cutter vee belt and adjust cutter housing level if

1 MONTH OR 5 HOURS WHICH EVER OCCURS FIRST

Change engine oil

Check engine air cleaner foam pre-cleaner, service if required Check engine rotating screen/finger guard, clean if required

Check foot brake operation, adjust if required

Check operation of safety switches, service if required

Check tyre pressures, adjust if required

Lubricate stub axles

Check mowing attachment cutter blades, bolts, nuts, disc/s, housing,

and guards for damage, replace if required

HOURS......DEALER..... DATE

required

3 MONTH OR 25 HOURS WHICH EVER OCCURS FIRST

Change engine oil if operating under heavy load or high ambient tem- and guards for wear or damage, replace if required peratureCheck engine air cleaner foam pre-cleaner, service if required * Check and adjust engine to transmission vee belt if required. Check engine rotating screen/finger guard, clean if required *

Check foot brake operation

Check operation of safety switches and replace if required

Check tyre pressures, adjust if required

Lubricate stub axles

Check mowing attachment cutter blades, bolts, nuts, disc/s, housing,

Check battery condition, service if required

Check transmission to cutter vee belt and adjust cutter housing level if required

Check for loose fasteners, tighten if required

*Service more often under dusty conditions, or where air borne debris is present

HOURS.....CUSTOMER..... DATE

6 MONTH OR 50 HOURS WHICH EVER OCCURS FIRST

Change engine oil if operating under heavy load or high ambient tem- Check for loose fasteners, tighten if required perature

Check engine air cleaner foam pre-cleaner, service if required * Check engine rotating screen/finger guard, clean if required *

Check foot brake operation

Check operation of safety switches and replace if required

Check tyre pressures, adjust if required

Lubricate stub axles

Check mowing attachment cutter blades, bolts, nuts, disc/s, hous-

ing ,and guards for wear or damage, replace if required

Check and adjust engine to transmission vee belt if required...

Check battery condition, service if required

Check transmission to cutter vee belt and adjust cutter housing level if required

*Service more often under dusty conditions, or where air borne debris is present

DATE /	/ HOURSDEALER
--------	---------------

9 MONTHS OR 75 HOURS WHICH EVER OCCURS FIRST

Change engine oil if operating under heavy load or high ambient temperature

Check engine air cleaner foam pre-cleaner, service if required * Check engine rotating screen/finger guard, clean if required *

Check foot brake operation

Check operation of safety switches and replace if required

Check tyre pressures, adjust if required

Lubricate stub axles

Check mowing attachment cutter blades, bolts, nuts, disc/s, housing, and guards for wear or damage, replace if required

Check for loose fasteners, tighten if required

Check battery condition, service if required

Check transmission to cutter vee belt and adjust cutter housing level if

Check and adjust engine to transmission vee belt if required.

*Service more often under dusty conditions, or where air borne debris is present HOURS.....CUSTOMER/DEALER.... 12 MONTHS OR 100 HOURS WHICH EVER OCCURS FIRST Change engine oil filter Check tyre pressures, adjust if required Check steering chain an sprockets or wear, adjust if required Change engine oil Check moving attachment cutter blades, bolts, nuts, disc/s, housing, Check engine spark plug, clean, adjust, or replace if required and guards for wear or damage, replace if required If fitted clean engine exhaust spark arrester Check engine air cleaner foam pre-cleaner, service if required * Re-tension rear wheel retaining nut/s Check battery condition, service if required Check engine air cleaner cartridge, service if required* Check belts for wear or damage, replace if required Clean engine cooling system* Replace in-line fuel filter Check and adjust engine to transmission vee belt if required. Check foot brake operation Check transmission to cutter vee belt and adjust cutter housing Lubricate stub axles Check for loose fasteners, tighten if required level if required Check operation of safety switches, service if required *Service more often under dusty conditions, or where air borne debris is present HOURS......DEALER..... DATE 15 MONTHS OR 125 HOURS WHICH EVER OCCURS FIRST Change engine oil if operating under heavy load or high ambient tem-Check battery condition, service if required Check mowing attachment cutter blades, bolts, nuts, disc/s, housing, perature and guards for wear or damage, replace if required Check engine air cleaner foam pre-cleaner, service if required * Check for loose fasteners, tighten if required Check engine rotating screen/finger guard, clean if required Check operation of safety switches and replace if required Check transmission to cutter vee belt and adjust cutter housing level if Check foot brake operation Check and adjust engine to transmission vee belt if required... Lubricate stub axles Check tyre pressures, adjust if required *Service more often under dusty conditions, or where air bome debris is present HOURS.....CUSTOMER/DEALER..... DATE 18 MONTHS OR 150 HOURS WHICH EVER OCCURS FIRST Check moving attachment cutter blades, bolts, nuts, disc/s, housing, Change engine oil and guards for wear or damage, replace if required If fitted clean engine exhaust spark arrestor Check engine air cleaner foam pre-cleaner, service if required * Check belts for wear or damage, replace if required Check mowing attachment brake pad for wear, replace if required Check engine rotating screen/finger guard, clean if required Check clutch arm action, adjust if required Check engine air inlet console screen, clean if required * Check battery condition, service if required Check foot brake operation Check for loose fasteners, tighten if required Check operation of safety switches, service if required Check and adjust engine to transmission vee belt if required. Check tyre pressures, adjust if required Check Transmission to cutter vee belt and adjust cutter housing level if Lubricate stub axles Check steering chain an sprockets or wear, adjust if required *Service more often under dusty conditions, or where air borne debris is present HOURS.....DEALER..... DATE 21 MONTHS OR 175 HOURS WHICH EVER OCCURS FIRST Change engine oil if operating under heavy load or high ambient Check mowing attachment cutter blades, bolts, nuts, disc/s, housing, and guards for wear or damage, replace if required Check engine air cleaner foam pre-cleaner, service if required *

Check tyre pressures, adjust if required Check and adjust engine to tranmission vee belt if required...

Check engine rotating screen/finger guard, clean if required *

Check operation of safety switches and replace if required

Check foot brake operation

Lubricate stub axles

*Service more often under dusty conditions, or where air borne debris is present

HOURS.....CUSTOMER/DEALER..... DATE

Check battery condition, service if required


Check for loose fasteners, tighten if required

Check transmission to cutter vee belt and adjust cutter housing level if

24 MONTHS OR 200 HOURS WHICH EVER OCCURS FIRST

Replace engine oil filter Change engine oil Check engine spark plug, clean, adjust, or replace if required If fitted clean engine exhaust spark arrestor Check engine air cleaner foam pre-cleaner, service if required * Check engine air cleaner cartridge, service if required Clean engine cooling system* Check foot brake operation Check operation of safety switches, service if required Check tyre pressures, adjust if required	Lubricate stub axles Check steering chain and sprockets for wear, adjust if required Check mowing attachment cutter blades, bolts, nuts, disc/s, housing, and guards for wear or damage, replace if required Check belts for wear or damage, replace if required Check battery condition, service if required Check for loose fasteners, tighten if required Check and adjust engine to transmission vee belt if required Check transmission to cutter vee belt and adjust cutter housing level if required
*Service more often under dusty conditions, or where air borne of	debris is present
DATE / / HOURS	DEALER
27 MONTHS OR 225 HOURS WHICH	EVER OCCURS FIRST
Change engine oil if operating under heavy load or high ambient temperature Check engine air cleaner foam pre-cleaner, service if required * Check engine rotating screen/finger guard, clean if required * Check foot brake operation Check operation of safety switches and replace if required Check tyre pressures, adjust if required Lubricate stub axles *Service more often under dusty conditions, or where air borne d	Check mowing attachment cutter blades, bolts, nuts, disc/s, housing, and guards for wear or damage, replace if required Check battery condition, service if required Check for loose fasteners, tighten if required Check transmission to cutter vee belt and adjust cutter housing level if required Check and adjust engine to transmission vee belt if required
DATE / / HOURSCUST	TOMER/DEALER
30 MONTHS OR 250 HOURS WHICH	EVER OCCURS FIRST
Change engine oil If fitted clean engine exhaust spark arrestor Check engine air cleaner foam pre-cleaner, service if required * Check engine rotating screen/finger guard, clean if required * Check foot brake operation Check operation of safety switches, service if required Check tyre pressures, adjust if required Lubricate stub axles Check steering chain an sprockets or wear, adjust if required	Check mowing attachment cutter blades, bolts, nuts, disc/s, housing, and guards for wear or damage, replace if required Check belts for wear or damage, replace if required Check battery condition, service if required Check for loose fasteners, tighten if required Check and adjust engine to transmission vee belt if required. Check transmission to cutter vee belt and adjust cutter housing level if required
*Service more often under dusty conditions, or where air borne of	debris is present
DATE / / HOURS	DEALER
33 MONTHS OR 275 HOURS WHICH	EVER OCCURS FIRST
Change engine oil if operating under heavy load or high ambient temperature Check engine air cleaner foam pre-cleaner, service if required * Check engine rotating screen/finger guard, clean if required * Check foot brake operation Check operation of safety switches and replace if required Check tyre pressures, adjust if required Lubricate stub axles	Check mowing attachment cutter blades, bolts, nuts, disc/s, housing, and guards for wear or damage, replace if required Check battery condition, service if required Check for loose fasteners, tighten if required Check transmission to cutter vee belt and adjust cutter housing level if required Check and adjust engine to transmission vee belt if required.
*Service more often under dusty conditions, or where air borne d	lebris is present
DATE / / HOURSCUS	TOMER/DEALER
36 MONTHS OR 300 HOURS WHICH	EVER OCCURS FIRST
Replace engine oil filter Change engine oil Check engine spark plug, clean, adjust, or replace if required If fitted clean engine exhaust spark arrestor Check engine air cleaner foam pre-cleaner, service if required * Check engine air cleaner cartridge, service if required Clean engine cooling system* Check foot brake operation Check operation of safety switches, service if required Check tyre pressures, adjust if required *Service more often under dusty conditions, or where air borne of	
DATE / / HOURS	DEALER


Model 9605G, A10506G :- Chassis & Components

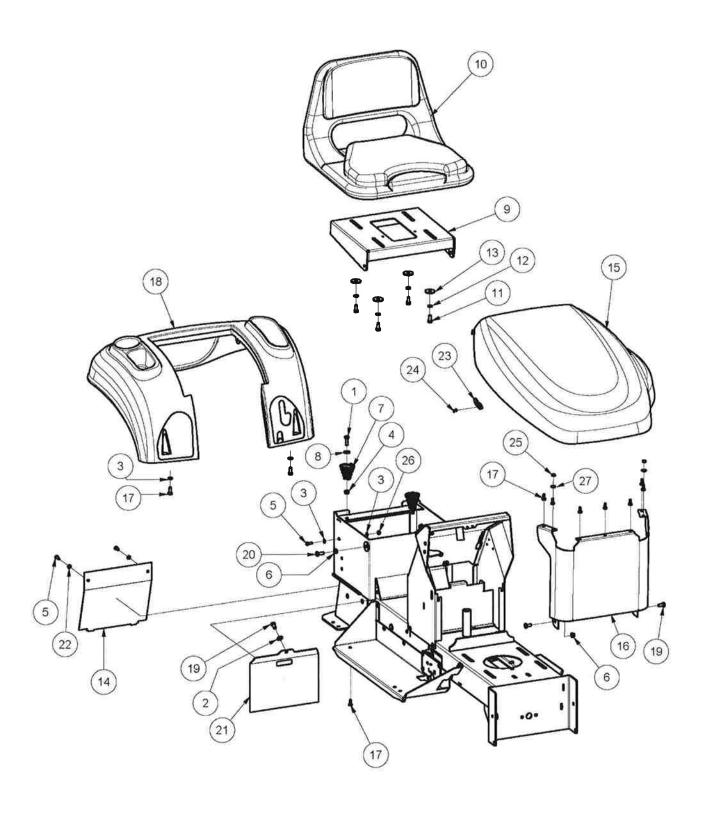

Model 9605G, A10506G :- Chassis & Components

ITEM	PART NUMBER	DESCRIPTION	QTY
1	SH0512C	Screw	2
2	W051218	Washer, Flat	1
3	W041216	Washer, Flat	6
4	N05CN	Nut	2
5	SH0616M	Screw	4
6	NM8NT	Nut	3
7	13060	Spring, Seat	2
8	W05M202	Washer, Flat	2
9	96008	Seat, Mount	1
10	9610906E	Seat	1
	96110	Pan, Seat	1
	96112	Cushion, Bottom	1
	96113	Backrest, Seat	1
	90112	Mounting Plate, Seat Switch	1
	SP1PNCSM	Switch, Seat	1
	SPST04CX0.37	Screw, Pan	3
11	SH0816M	Screw	4
12	WS050216	Washer, Lock, Spring	4
13	W052003	Washer, Flat	4
14	96037	Panel, Cover, Trans Rear	1
15	96043	Cowl, Bonnet	1
16	96072	Panel, Nose, Bonnet 13HP	1
	A105073L	Panel, Nose, Bonnet 17HP	1
17	SPPK5x16	Screw, Pan	9
18	96044	Mudguard	1
19	SH0816M	Screw	3
20	SH0820M	Screw	2
21	89021	Door, Console, Battery Access	1
22	WS040816	Washer, Lock, Spring	2
23	96114	Strap, Bonnet	2
24	PR04M4.8	Pop Rivet	2
26	NM6NT	Nut	2
27	W040816	Washer	2


Model A11607L, A11608F, A11707L, A11708F :- Chassis & Components B&S ONLY

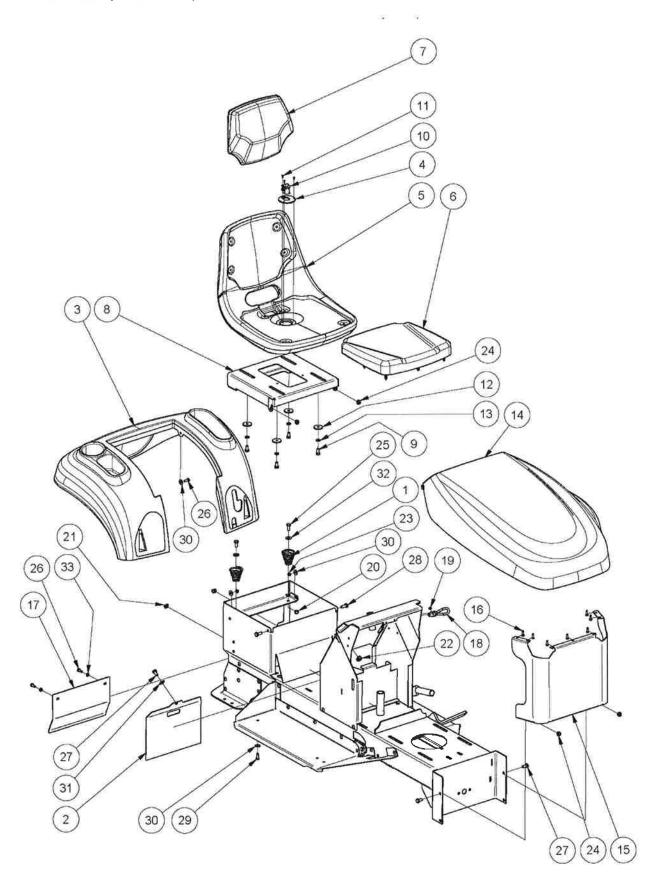

Model A11607L, A11608F, A11707L, A11708F :- Chassis & Components B&S ONLY

ITEM	PART NUMBER	DESCRIPTION	QTY
1	13060	Spring, Seat	2.
2	89021	Door, Console	1
3	96044	Mudguard	1
4	9011208G	Seat Switch Mounting Plate	1
5	96109	Sub Assy Seat A11607L & A11707L	1
	A116110	Seat, Medium incl Switch A11608F & A11708F	1
	96110	Pan, Seat, Medium A11607L & A11707L	1
6	9611208G	Cushion, Bottom, Medium, YellowA11607L & A11707L	1
7	96113	Cushion, Back, Seat, Medium, YellowA11607L & A11707L	1
8	A116009L	Mount, Seat	1
9	SH0816M	Screw	4
10	SP1PNCSM	Switch, Plunger	1
11	SPST04CX0.37	Screw, Pan	3
12	W052003	Washer, Flat	4
13	WS050216	Washer, Lock, Spring	4
14	96043	Cowl, Bonnet	1
15	A116073L	Nose, Bonnet 13HP ONLY	1
	A117073L	Nose, Bonnet 15.5HP & 17HP ONLY	1
16	SPPK5X16	Screw, Pan	7
17	A116037L	Cover, Rear, Green	1
18	96114	Strap, Bonnet, Bunji Loop	2
19	PR04M4.8	Rivet	2
20	N05CN	Nut	2
21	NCM6X2	Cage Nut	2
22	NCM8X2.65	Cage Nut	1
23	NM6NT	Nut	2
24	NM8NT	Nut	4
25	SH0512C	Screw	2
26	SH0616M	Screw	4
27	SH0816M	Screw	3
28	SH0820M	Screw	2
29	SPPK6X20	Screw, Pan	2
30	W041216	Washer	6
31	W051218	Washer	1
32	W05M202	Washer	2
33	WS040816	Washer, Lock, Spring	2


Model A11908F :- Chassis & Components HONDA ONLY

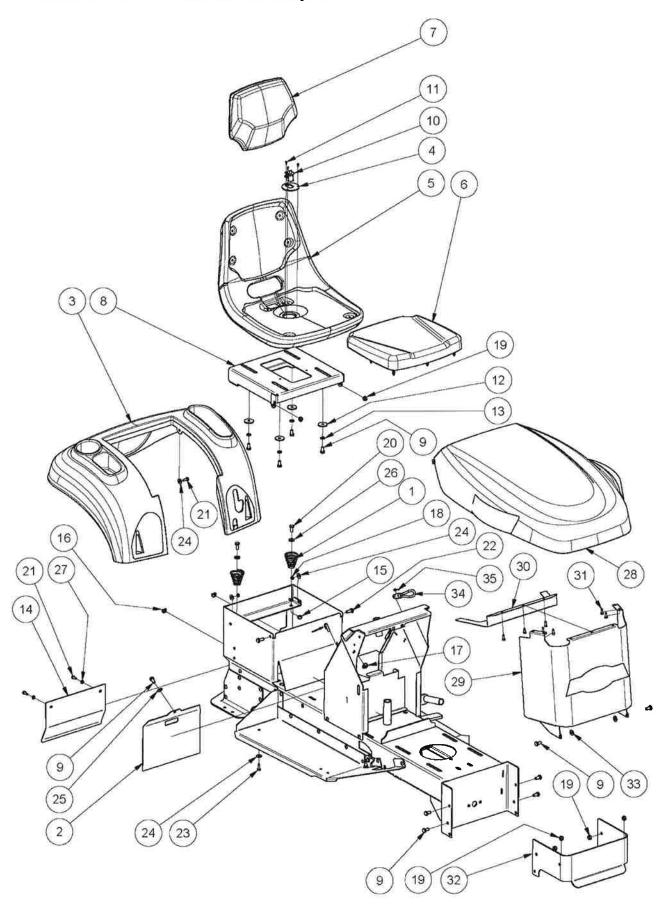

Model A11908F :- Chassis & Components HONDA ONLY

ITEM	PART NUMBER	DESCRIPTION	QTY
1	13060	Spring, Seat	2
2	89021	Door, Console	1
3	96044	Mudguard	1
4	9011208G	Seat Switch Mounting Plate	1
5	A116110	Seat, Medium incl Switch	1
8	A116009L	Mount, Seat	1
9	SH0816M	Screw	11
10	SP1PNCSM	Switch, Plunger	1
11	SPST04CX0.37	Screw, Pan	3
12	W052003	Washer	4
13	WS050216	Washer, Lock, Spring	4
14	A116037L	Cover, Rear	1
15	N05CN	Nut	2
16	NCM6X2	Cage Nut	2
17	NCM8X2.65	Cage Nut	1
18	NM6NT	Nut	2
19	NM8NT	Nut	6
20	SH0512C	Screw	2
21	SH0616M	Screw	4
22	SH0820M	Screw	2
23	SPPK6X20	Screw, Pan	2
24	W041216	Washer	4
25	W051218	Washer	1
26	W05M202	Washer	2
27	WS040816	Washer, Lock, Spring	2
28	96043	Cowl, Bonnet	1
29	A119073L	Nose, Bonnet, Sloping	1
30	A119075B	Baffle, Hot Air, Bonnet, Front	1
31	SPPK5X16	Screw, Pan	7
32	A119040L	Bumper, Front	1
33	W051216	Washer	2
34	96114	Strap, Bonnet, Bunji Loop	2
35	PR04M4.8	Rivet	2

Model A13509G, A13510B, A13609G, A13610B, A13709G, A13710B:-Chassis & Components B&S & 13HP HONDA ONLY

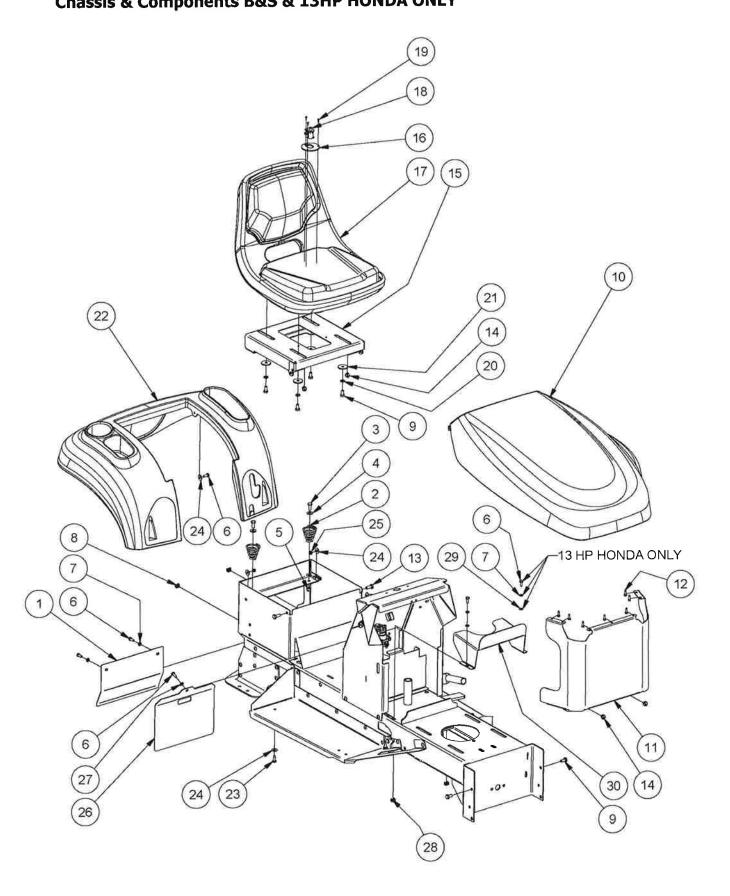


Model A13509G, A13510B, A13609G, A13610B, A13709G, A13710B:-

Chassis & Components B&S & 13HP HONDA ONLY

ITEM	PART NUMBER	DESCRIPTION	QТY
1	A116037L	Cover, Rear	1
2	13060	Spring, Seat	2
3	SH0512C	Screw	2
4	W05M202	Washer	2
5	N05CN	Nut	2
6	SH0616M	Screw	7
7	WS040816	Washer, Lock, Spring	4
8	NCM6X2	Nut, Cage	2
9	SH0816M	Screw	6
10	96043	Cowl, Bonnet, Green	1
11	A116073L	Nose, Bonnet 13.5HP B&S	1
	A117073L	Nose, Bonnet 15.5HP 16.5HP 18.5HP B&S	1
	A119273L	Nose, Bonnet 13HP Honda	1
12	SPPK5X16	Screw, Pan	7
	W030820	Washer	7
	WSR12	Washer, Seal	7
13	SH0820M	Screw	2
14	NM8NT	Nut	4
15	A116009L	Mount, Seat	1
16	90112	Seat Switch Mounting Plate	1
17	A116110	Seat, Medium	1
18	SP1PNCSM	Switch, Plunger	1
19	SPST04CX0.37	Screw, Pan	3
20	WS050216	Washer, Lock, Spring	4
21	W052003	Washer	4
22	96044	Mudguard	1
23	SPPK6X20	Screw, Pan	2
24	W041216	Washer	6
25	NM6NT	Nut	2
26	A135021L	Door, Console	1
27	W040816	Washer	1
28	NCM6X2.6X9.5	Nut, Cage 13 HP Honda	2
29	W040818	Washer	2
30	A119214L	Stand, Tank, Fuel, Green 13HP Honda	1


MODEL A14010K, A14110K:-CHASSIS & COMPONENTS 13HP HONDA, 16.5HP & 18.5HP B&S ONLY

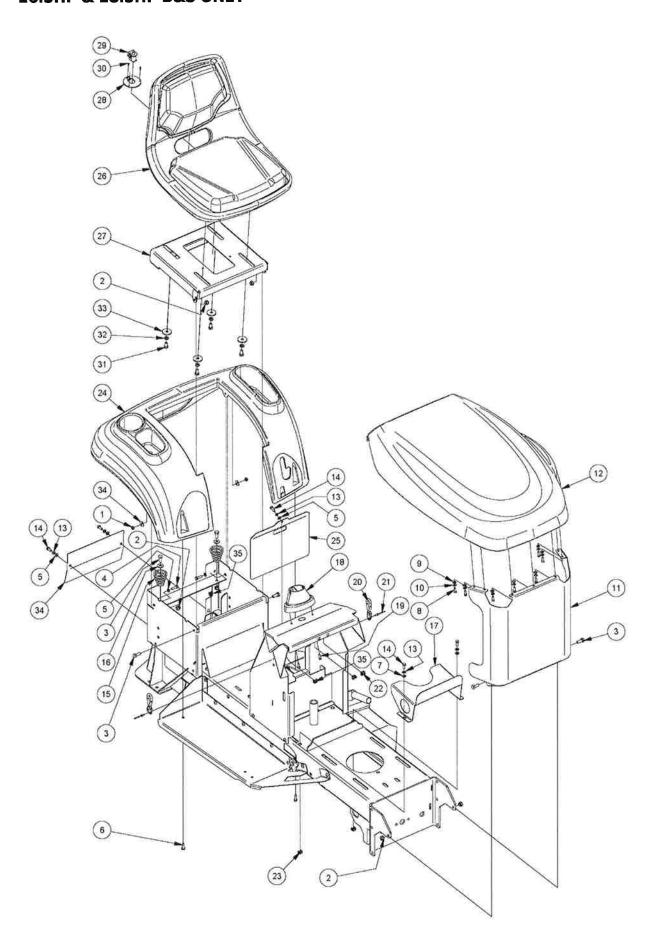

MODEL A14010K, A14110K:-CHASSIS & COMPONENTS 13HP HONDA, 16.5HP & 18.5HP B&S ONLY

ITEM	PART NUMBER	DESCRIPTION	QTY
1	NM6NT	Nut	2
2	NM8NT	Nut	7
3	SH0820M	Screw	6
4	SH0620M	Screw	3
5	W06MN	Washer, Flat	5
6	SPPK6X20	Screw, Pan	2
7	W040818	Washer, Flat	2
8	SPPK5X16	Screw, Pan	7
9	WSR12	Washer, Seal, Rubber	7
10	W030820	Washer, Flat	7
11	A141173L	Nose, Bonnet 13HP HONDA	1
	A140073L	Nose, Bonnet	1
12	96043	Cowl, Bonnet, Green	1
13	WS040816	Washer, Lock, Spring	5
14	SH0616M	Screw	5
15	13060	Spring, Seat	2
16	W05M202	Washer, Flat	2
17	A119214L08L	Stand, Tank, Fuel, Green 13HP HONDA	1
18	A131009	Cover, Shaft, Steering	1
19	SPPK5X16	Screw, Pan	2
20	96114	Strap, Bonnet, Bunji Loop	2
21	PR04M4.8	Rivet	2
22	NCM5X2.5X9.5	Nut, Cage	2
23	NCM6X1.6X9.5	Nut, Cage 13HP HONDA	2
24	96044	Mudguard	1
25	A135021L	Door, Console, Green	1
26	A116109	Sub-Assy, Seat	1
27	A116009L11D	Mount, Seat, Medium	1
28	90112	Seat Switch Mounting Plate	1
29	SP1PNCSM	Switch, Plunger	1
30	SPST04CX0.37	Screw, Pan	3
31	SH0816M	Screw	4
32	WS050216	Washer, Lock, Spring	4
33	W052003	Washer, Flat	4
34	A139036L	Cover, Rear	1
35	NCM6X1.6X9.5	Nut, Cage	3


Model A13709G, A13710B:-Chassis & Components 16HP HONDA ONLY

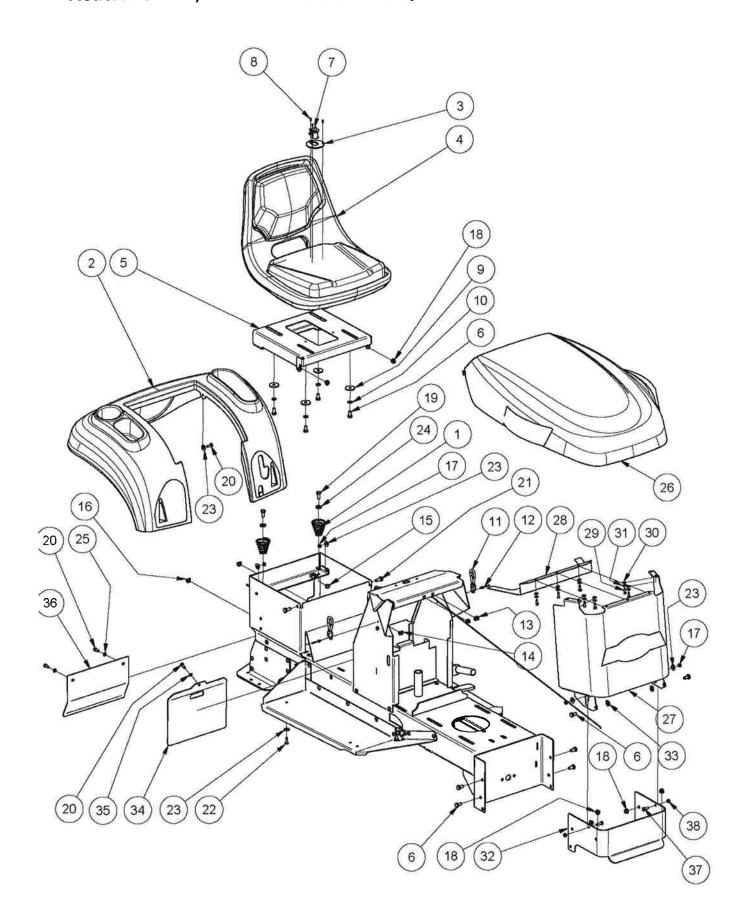

Model A13709G, A13710B:-Chassis & Components 16HP HONDA ONLY

ITEM	PART NUMBER	DESCRIPTION	QTY
1	13060	Spring, Seat	2
11	96114	Strap, Bonnet, Bunji Loop	2
12	PR04M4.8	Rivet	2
13	NCM5X2.5X9.5	Nut, Cage	2
14	NCM6X1.6X9.5	Nut, Cage	1
2	96044	Mudguard	1
3	90112	Seat Switch Mounting Plate	1
4	A116110	Seat, Medium	1
5	A116009L	Mount, Seat, Medium	1
6	SH0816M	Screw	10
7	SP1PNCSM	Switch, Plunger, 1 Pole, Nc, Snap Mtg	1
8	SPST04CX0.37	Screw, Pan	3
9	W052003	Washer, Flat	4
10	WS050216	Washer, Lock, Spring	4
15	N05CN	Nut	2
16	NCM6x2	Nut, Cage	2
17	NM6NT	Nut	4
18	NM8NT	Nut	6
19	SH0512C	Screw	2
20	SH0616M	Screw	3
21	SH0820M	Screw	2
22	SPPK6X20	Screw, Pan	2
23	W041216	Washer, Flat	4
24	W05M202	Washer, Flat	2
25	WS040816	Washer, Lock, Spring	2
26	96043	Cowl, Bonnet	1
27	A119073L10G	Nose, Bonnet, Sloping	1
28	A119075B	Baffle, Hot Air, Bonnet, Front	1
29	SPPK5X16	Screw, Pan	7
30	WSR12	Washer, Seal	7
31	W030820	Washer, Flat	7
32	A119040L10G	Bumper, Front	1
33	W051216	Washer, Flat	2
34	A135021L	Door, Console	1
35	W06MN	Washer, Flat	1
36	A116037L	Cover, Rear	1
37	SH0620M	Screw	2
38	NHM6	Nut	2


MODEL A14110K:- CHASSIS & COMPONENTS 16HP HONDA ONLY

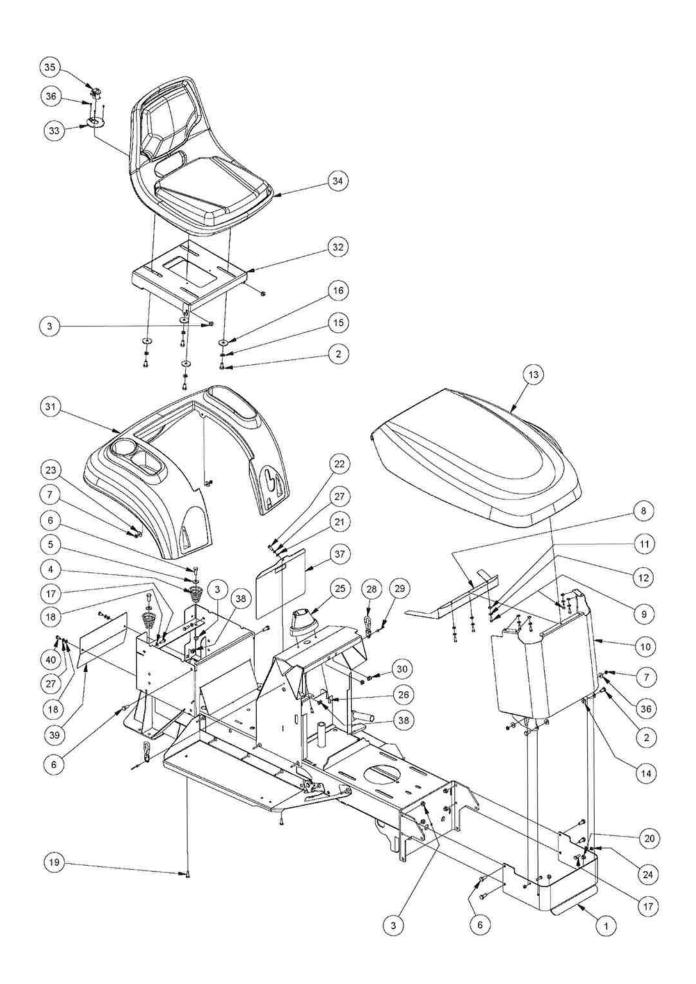

MODEL A14110K:- CHASSIS & COMPONENTS 16HP HONDA ONLY

ITEM	PART NUMBER	DESCRIPTION	QTY
1	A141040L	Bumper, Front	1
2	SH0816M	Screw	6
3	NM8NT	Nut	8
4	13060	Spring, Seat	2
5	W05M202	Washer, Flat	2
6	SH0820M	Screw	2
7	NM6NT	Nut	4
8	A119075B	Baffle, Hot Air, Bonnet, Front	1
9	SPPK5X16	Screw, Pan	7
10	A119073L10G	Nose, Bonnet, Sloping	1
11	WSR12	Washer, Seal	7
12	W030820	Washer, Flat	7
13	96043	Cowl, Bonnet	1
14	W051216	Washer, Flat	2
15	WS050216	Washer, Lock, Spring	4
16	W052003	Washer, Flat	4
17	SH0620M	Screw	4
18	W06MN	Washer, Flat	4
19	SPPK6X20	Screw, Pan	2
20	NHCM8	Nut	2
21	W040816	Washer, Flat	1
22	SH0616M	Screw	1
23	W041216	Washer, Flat	4
24	NHM6	Nut	2
25	A131009	Cover, Shaft, Steering	1
26	SPPK5X16	Screw, Pan	2
27	WS040816	Washer, Lock, Spring	3
28	96114	Strap, Bonnet	2
29	PR04M4.8	Rivet	2
30	NCM5X2.5X9.5	Nut, Cage	2
31	96044	Mudguard	1
32	A116009L11D	Mount, Seat, Medium	1
33	90112	Seat Switch Mounting Plate	1
34	A116110	Seat, Medium	1
35	SP1PNCSM	Switch, Plunger	1
36	SPST04CX0.37	Screw, Pan	3
37	A135021L	Door, Console	1
38	NCM6X1.6X9.5	Nut, Cage	3
39	A139036L	Cover, Rear	1
40	SH0612M	Screw	2

Model 9605G:- Front Axle Components 13HP Only

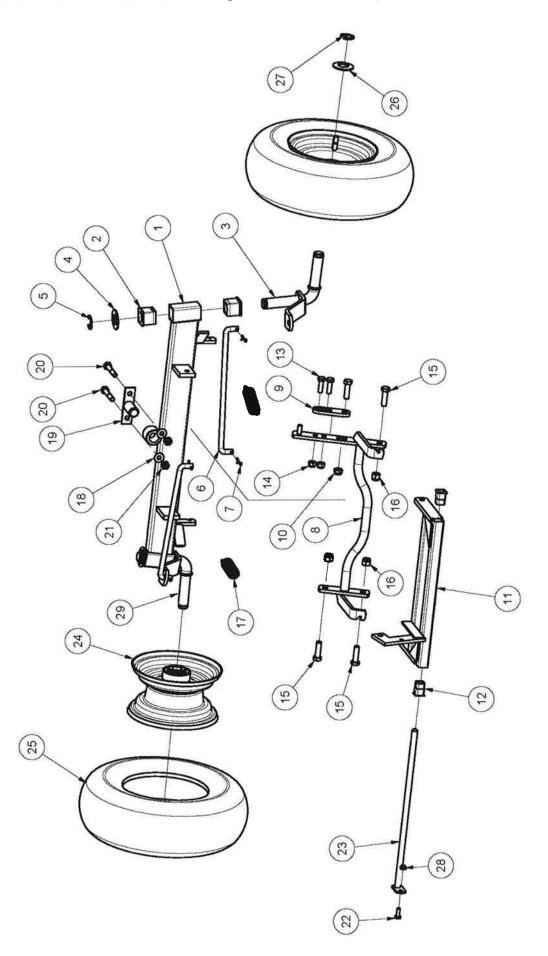

Model 9605G:- Front Axle Components 13HP Only

ΠE	M PART NUMBER	DESCRIPTION	QTY
1	96005	Axle Beam, Front NLA Use p/n A111021L	1
2	89028	Bush, Pivot, Nylon	4
3	89050	Axle, Stub, R/H	1
4	W203902	Washer, Flat	2
5	C02	Circlip, Ext, "E" Type	2
6	89020	Tie Rod	2
7	CP3-220	Split Pin	4
8	8909905C	Connecting Link	1
9	89098	Link, Adjust	1
10	N06CN	Nut	1
11	89080	Link, Connect, Cutter	1
12	AM230	Bush - Plastic	2
13	SH0516C	Screw	2
14	N05CN	Nut	2
15	B0620C	Bolt	4
16	NF06CN	Nut	3
17	AM040	Spring Extension, Cutter Belt	2
18	W051218	Washer, Flat	2
19	13242	Front Axle Mount Pin	1
20	B0850M	Bolt	2
21	NM8NT	Nut	2
22	SH0616M	Screw	1
23	13016	Pin, Pivot	1
24	89032	Wheel, Front, C/W Bearings (Round Profile Tyre Only)	2
25	TT13x500-6SS	Tyre—Tubeless (Round Profile Tyre Only)	2
	STU13x500-6SS	Tube—Optional	
	VSS	Valve Stem- Tubeless	2
26	WSCM20402.0	Washer, Spring, Conical	2
27	C02	Circlip, Ext, "E" Type	2
28	NM6NT	Nut	5
29	89057	Stub Axle—LH	1




Round profile tyre suit P/n 89032



Flat profile tyre suit P/n 89032TPC

For 13HP Machines Only

Model A11607L: Front Axle Components

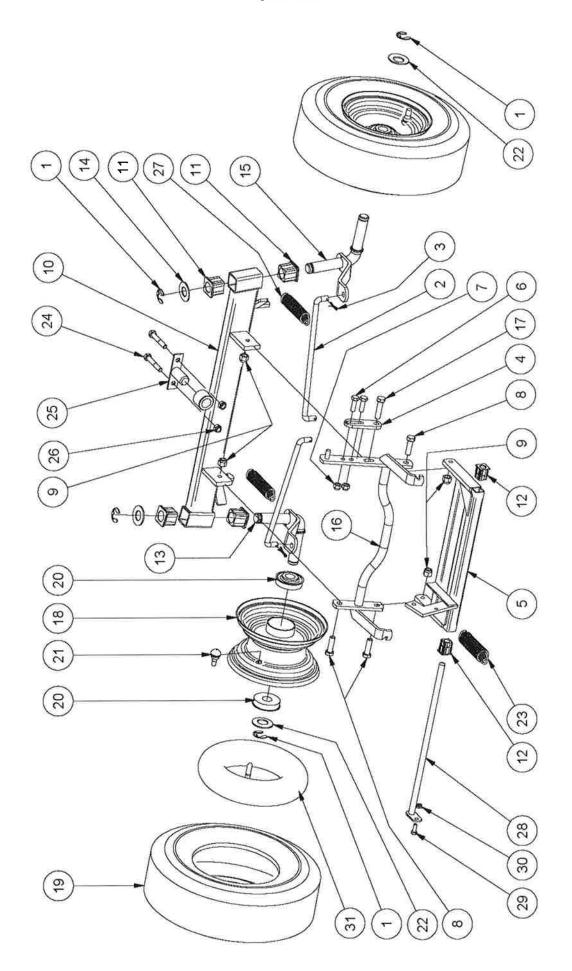

For 13HP Machines Only

Model A11607L :- Front Axle Components (Pressed Metal Wheel Hubs)

ITEM	PART NUMBER	DESCRIPTION	QTY
1	C02	Circlip	4
2	89020	Tie Rod	2
3	CP3-220	Pin, Split	2
4	89098	Link, Adjust	1
5	89080	Link, Connect, Cutter .	1
6	SH0516C	Screw	2
7	N05CN	Nut, Hex, Nyloc	2
8	B0620C	Bolt	3
9	NF06CN	Nut, Hex, Nyloc	4
10	A111021L	Beam, Axle, Front	1
11	95117	Bush, Pivot	4
12	AM369	Bush	2
13	A108057Z	Axle, Stub	1
14	W122414	Washer, Flat	2
15	A108050Z	Axle, Stub	1
16	8909905C	Link, Connect, Axle	1
17	B0624C	Bolt	1
18	89032TPC	Wheel, Front, C/W Bearings (Flat Profile Tyre Only)	2
20	KITBBLB	Kit, Bearing, Ball	2
21	VSS	Valve, Tubeless	2
22	WSCM20402.0	Washer, Spring, Conical	2
23	AM145	Spring	1
24	B0850M	Bolt	2
25	13242	Pin, Pivot, Front Axle	1
26	NM8NT	Nut	2
27	AM040	Spring Extension	2
28	13016	Pin	1
29	SH0616M	Screw	1
30	NM6NT	Nut	1
31	SSTU13X500-6SS	Tube - Optional Spares	




Round profile tyre suit P/n 89032



Flat profile tyre suit P/n 89032TPC

Model A11608F, A13509G, A13510B:- Front Axle Components 13HP & 16.5HP B&S (Pressed Metal Wheel Hubs)

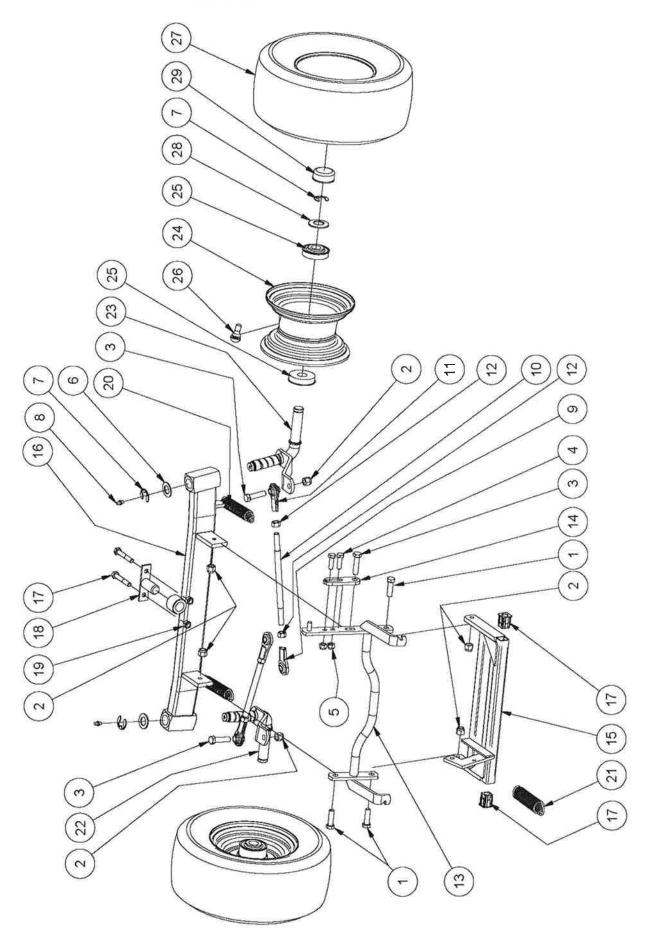

Model A11608F, A13509G, A13510B:- Front Axle Components 13HP & 16.5HP B&S (Pressed Metal Wheel Hubs)

ITEM	PART NUMBER	DESCRIPTION	QTY
1	B0620C	Bolt	3
2	NF06CN	Nut	6
3	B0624C	Bolt	3
4	SH0516C	Screw	2
5	N05CN	Nut	2
6	AM336	Washer, Sealing, Shaft	2
7	C02	Circlip	4
8	GNTF3	Nipple, Grease	2
9	AM020	End, Rod, Stamp, Unf, 3/8"Int	2
10	AM256	Tie Rod Inc. Nuts	2
11	AM337	End, Rod, Stamp, Unf, 3/8"Int, Shoulder Ball	2
12	N06F	Nut	4
13	8909905C	Link, Connect, Axle, Adjust	1
14	89098	Link, Adjust	1
15	89080	Link, Connect, Cutter	1
16	A105005L	Beam, Axle, Front	1
17	B0850M	Bolt	2
18	13242	Pin, Pivot, Front Axle	1
19	NM8NT	Nut	2
20	AM040	Spring Extension	2
21	AM145	Spring, Extension	1
22	A116057Z	Axle, Stub	1
23	A116050Z	Axle, Stub	1
24	89032	Rim, Wheel (Round Profile)	2
	89032TPC	Rim, Wheel (Flat Profile)	2
25	KITBBLB	Kit, Bearing, Ball (2 Bearings and optional washer supplied)	2
26	VSS	Valve, Tubeless, Snap-In & Cap	2
27	TT13x 500-6SS	Tyre (Round Profile Tyre Only)	2
	STU13x500-6SS	Tube (Optional)	
28	KITSHIM	Washer	2
29	A116060	Cap, Hub	2




Round profile tyre suit P/n 89032



Flat profile tyre suit P/n 89032TPC

Model A10506G, A11707L, A11708F, A11908F, A13510B, A13609G, A13610B, A13709G, A13710B: Front Axle Components (Cast Alloy Wheel Hubs) For 13HP & 16HP Honda, 15.5HP, 17HP & 18.5HP B&S Machines

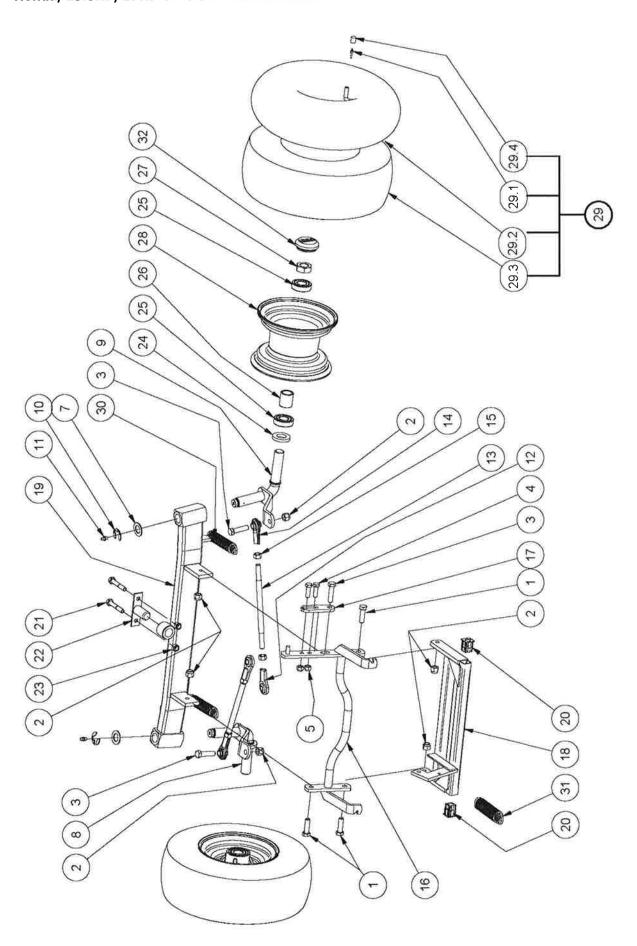


Model A10506G, A11707L, A11708F, A11908F, A13510B, A13609G, A13610B, A13709G, A13710B: Front Axle Components (Cast Alloy Wheel Hubs) For 13HP & 16HP Honda, 15.5HP, 17HP & 18.5HP B&S Machines

ITEM	PART NUMBER	DESCRIPTION	QTY
1	B0620C	Bolt	3
2	NF06CN	Nut, Hex, Nyloc	6
3	B0624C	Bolt	3
4	SH0516C	Screw	2
5	N05CN	Nut	2
7	AM336	Washer, Sealing, Shaft	2
8	AM333	Axle Stub L/H	1
9	AM334	Axle Stub R/H	1
10	C02	Circlip	2
11	GNTF3	Nipple, Grease	2
12	AM020	End, Rod, Stamp	2
13	AM256	Tie Rod	2
14	AM337	End, Rod, Stamp , Shoulder Ball	2
15	N06F	Nut	4
16	8909905C	Link, Connect, Axle	1
17	89098	Link, Adjust	1
18	89080	Link, Connect, Cutter	1
19	A105005L	Beam, Axle, Front	1
20	AM369	Bush	2
21	B0850M	Bolt	2
22	13242	Pin, Pivot	1
23	NM8NT	Nut	2
24	W203806	Washer, Flat	2
25	BB204212N	Bearing, Ball	4
26	AM021	Sleeve, Spacer, Bearing	2
27	NHM20X1.5T	Nut	2
28	AM193M9	Rim	2
29	TT500X6	Tyre (Round Profile Tyre Only)	2
29.2	STU500X6	Tube	1
30	AM040	Spring	2
31	AM145	Spring	1
32	AM07099C	Cap, Hub	2



(Round Profile Tyre Only)


MODEL A14010K, A14110K:- STEERING COMPONENTS

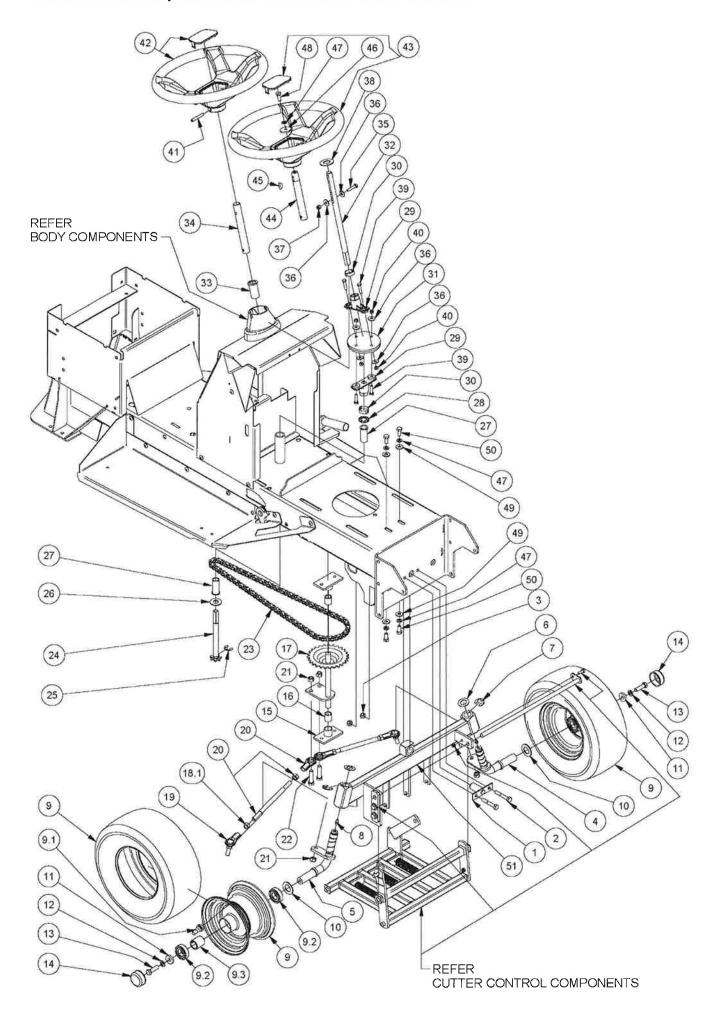

MODEL A14010K, A14110K:- STEERING COMPONENTS


ITEM	PART NUMBER	DESCRIPTION	QTY
1	13242	Pin, Pivot, Front Axle	1
2	B0850M	Bolt	2
3	NM8NT	Nut	4
4	13203	Axle, Stub, Left	1
5	13204	Axle, Stub, Right	1
6	AM336	Washer, Sealing, Shaft	2
7	C02	Circlip	2
8	GNTF3	Nipple, Grease	2
9	A139032	Wheel	2
9.1	VSS	Valve, Tubeless	1
9.2	BB204212N	Bearing, Ball	2
9.3	AM021	Sleeve, Spacer, Bearing	1
10	W20MN	Washer, Flat	2
11	13107	Washer	2
12	WS06081.5	Washer, Lock, Spring	2
13	SH0620F	Screw	2
14	A116060	Cap, Hub	2
15	AM255	Steering Idler Shaft Mtg Brkt	2
16	AM215	Idler Bush	2
17	90271	Idler, Steering	1
18	AM256	Tie Rod Inc. Nuts	2
18.1	N06F	Nut	2
19	RE38INTSTUD	End, Rod	2
20	AM337	End, Rod	2
21	N06FC	Nut	4
22	B0624F	Bolt	2
23	AM018	Chain, Steering	1
24	95006	Shaft, Steering, Lower	1
25	C05	Circlip	1
26	W092016	Washer, Flat	≈ 1
27	AM017C1	Steering Shaft Bush With Collar	2
28	89100	Fastener, Pushon	1
29	89097	Steering Shaft Yoke	2
30	OC21	"O" Clip	2
31	AM25399J	Disc, Universal Joint	1
32	A131087Z	Shaft, Steering, Upper	1
33	13012	Bush, Flanged, Nylon	1
34	A131089Z	Shaft, Steering, Top	1
35	B0630M	Bolt	1
36	W041216	Washer, Flat, Bright	6
37	NM6N	Nut	1
38	W122414	Washer, Flat	1
39	B0625M	Bolt	4
40	NM6NT	Nut	6
41	DP10	Pin, Roll	1
42	SW13	Wheel, Steering, 13" Incl Cover	1
43	SW13T	Wheel, Steering, 13", 3/4" Taper Hub+ Cover	1
44	A131109Z	Shaft, Steering, Top, 3/4" Taper	1
45	SK09	Key, Woodruff	1
46	W052003	Washer, Flat	1
47	WS050216	Washer, Lock, Spring	5
48	SH0512F	Screw	1
49	W05M202	Washer, Flat	6
50	SH0512C	Screw	4
51	A139103L	Beam, Axle, Front	1
31	/ 1107 100 E	Julia Contact Contact	-

Model 9605G & A10506G:- Steering Components

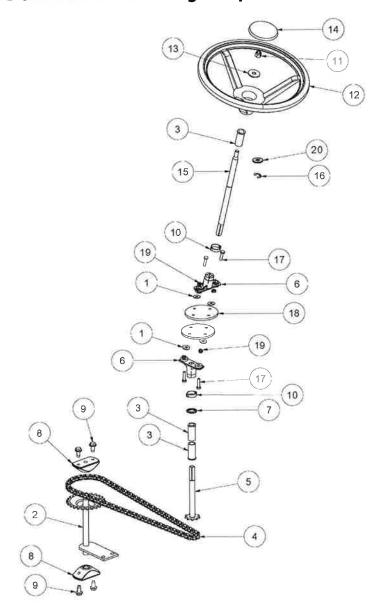


ITEM	PART NUMBER	DESCRIPTION	QTY
1	W041216	Washer, Flat	4
2	AM331	Steering Idler	1
3	AM017C1	Steering Shaft Bush With Collar	3
4	AM018	Chain, Steering incl Link	1
	SAM019	Chain Conn Link	1
5	89083	Shaft, Steering, Lower	1
6	89097	Steering Shaft Yoke	2
7	89100	Fastener, Push-on	1
8	90113	Steering Idler Shaft Mtg Bracket	2
9	PLAS5/16	Screw	4
10	OC21	"O" Clip	2
11	NF06CN	Nut	1
12	AM167M8	Steering Wheel	1
13	W0620HD	Washer, Flat	1
14	AM225H04	Steering Wheel, Cover, Cap	1
15	89087	Steering Shaft Upper	1
16	C05	Circlip, Ext, "E" Type	1
17	B0625M	Bolt	4
18	AM25399J	Disc, Universal Joint	1
19	NM6NT	Nut	4
20	W092016	Washer	1

Model A11607L, A11608F, A11707L, A11708F & A11908F :- Steering Components

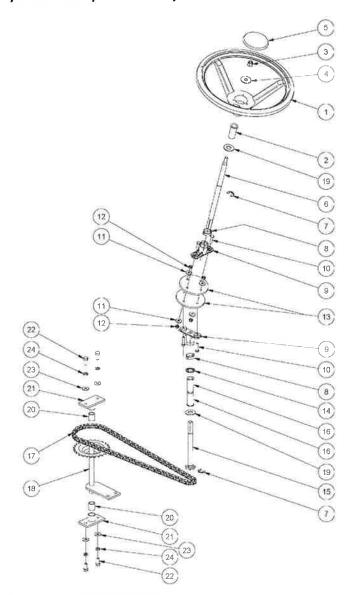


ITEM	PART NUMBER	DESCRIPTION	QTY
1	AM167M8	Steering Wheel	1
2	AM017C1	Steering Shaft Bush With Collar	1
3	NF06CN	Nut	1
4	W0620HD	Washer, Flat	1
5	AM225	Steering Wheel, Cover, Cap	1
6	89087	Steering Shaft Upper	1
7	C05	Circlip, Ext, "E"Type	2
8	OC21	"O" Clip	2
9	89097	Steering Shaft Yoke	2
10	B0625M	Bolt	4
11	W041216	Washer, Flat	4
12	NM6NT	Nut	4
13	AM25399J	Universal, Steering Joint	1
14	89100	Fastener, Push on, Round	1
15	95006	Shaft, Steering, Lower	1
	89083	Shaft, Steering, Lower (13hp Only)	1
16	AM017C1	Steering Shaft Bush With Collar	2
17	AM018	Chain, Steering c/w Link	1
	SAM019	Connecting Link	
18	95007	Idler, Steering	1
	AM331	Steering Idler (13hp Only)	1
19	W092016	Washer, Flat	2
20	AM215	Idler Bush	2
21	AM255	Steering Idler Shaft Mtg Brkt	2
22	SH0512C	Screw	4
23	W05M202	Washer, Flat	4
24	WS050216	Washer, Lock, Spring	4

Model A13509A, A13509G, A13510B,A13609G, A13610B, A13709G, A13710B:- Steering Components - Roll Pin Type Steering Wheel

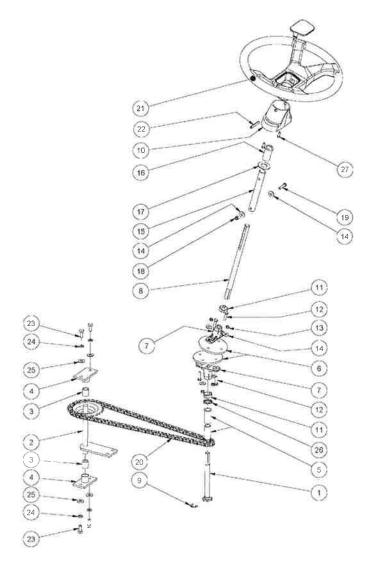


ITEM	PART NUMBER	DESCRIPTION	QTY
1	95006	Shaft, Steering, Lower	1
2	95007	Idler, Steering	1
3	AM215	Idler Bush	2
4	AM255	Steering Idler Shaft Mtg Brkt	2
5	AM017C1	Steering Shaft Bush With Collar	2
6	AM25399J	Disc, Universal Joint	1
7	89097	Steering Shaft Yoke	2
8	A131087Z	Shaft, Steering, Upper	1
9	C05	Circlip	1
10	A131009	Cover, Shaft, Steering	1
11	OC21	"O" Clip	2
12	B0625M	Bolt	4
13	NM6NT	Nut	4
14	W041216	Washer	6
15	A131089Z	Shaft, Steering	1
16	13012	Bush	1
17	W122414	Washer	1
18	NM6N	Nut	1
19	B0630M	Bolt	1
20	AM018	Chain, Steering	1
21	SW13	Wheel, Steering Incl Cover	1
22	DP10	Pin, Roll	1
23	SH0512C	Screw	4
24	WS050216	Washer, Lock, Spring	4
25	W05M202	Washer	4
26	89100	Fastener, Push on	1
27	SPPK5X16	Screw	2

Model A13509G, A13510B, A13609G, A13610B, A13709G, A13710B:-Steering Components - Taper Hub (Keyed) Steering Wheel

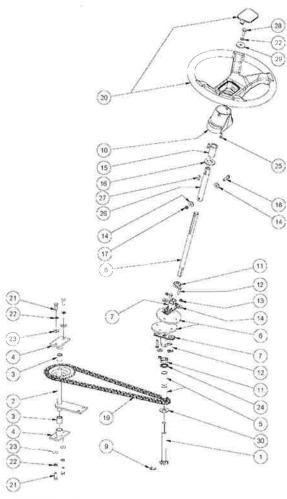

ITEM	PART NUMBER	DESCRIPTION	QTY
1	95006	Shaft, Steering, Lower	1
2	95007	Idler, Steering	1
3	AM215	Idler Bush	2
4	AM255	Steering Idler Shaft Mtg Brkt	2
5	AM017C1	Steering Shaft Bush With Collar	2
6	AM25399J	Disc, Universal Joint	1
7	89097	Steering Shaft Yoke	2
8	A131087Z	Shaft, Steering, Upper	1
9	C05	Circlip, Ext, "E"Type	1
10	A131009	Cover, Shaft, Steering	1
11	OC21	"O" Clip	2
12	B0625M	Bolt	4
13	NM6NT	Nut	4
14	W041216	Washer	6
15	13012	Bush, Flanged, Nylon	1
16	W122414	Washer	1
17	NM6N	Nut	1
18	B0630M	Bolt	1
19	AM018	Chain, Steering	1
20	SW13T	Wheel, Steering, 13", 3/4" Taper Hub+ Cover	1
21	SH0512C	Screw	4
22	WS050216	Washer, Lock, Spring	5
23	W05M202	Washer	4
24	89100	Fastener, Pushon, Round	1
25	SPPK5X16	Screw, Pan	2
26	A131109Z	Shaft, Steering, Top, 3/4" Taper	1
27	SK09	Key, Woodruff	1
28	SH0512F	Screw	1
29	W052003	Washer	1
30	W092016	Washer	1


Model 9605G & A10506G: Drive Components

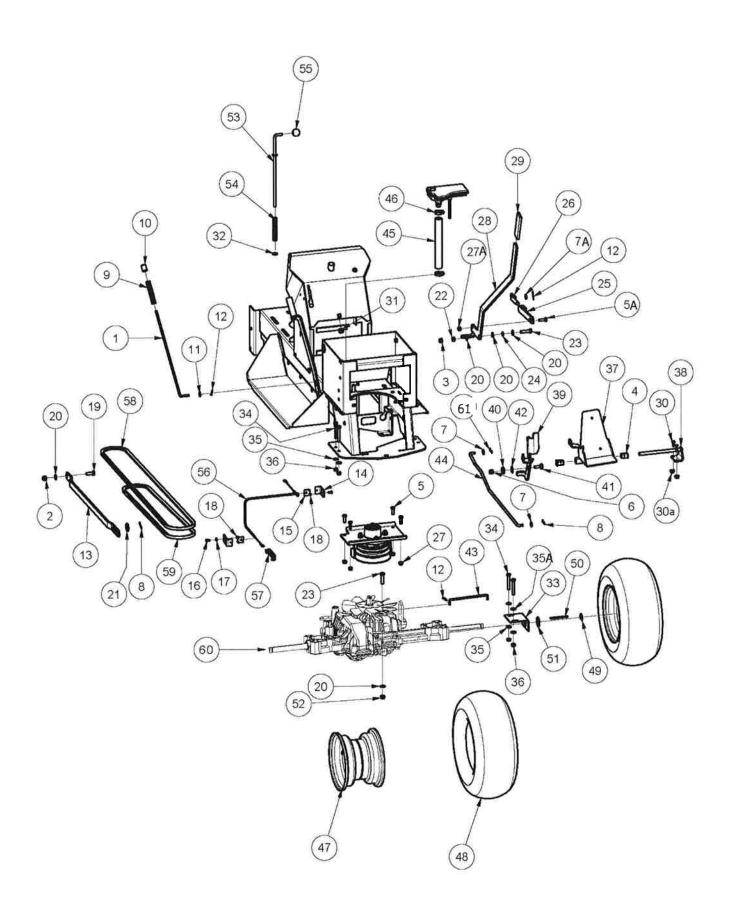

Model 9605G & A10506G: Drive Components

ITEM	PART NO.	DESCRIPTION	QTY
1	89015	Height Adjust Rod	1
2	NF06CN	Nut	3
3	N06CN	Nut	8
4	AM230	Bush - Plastic	2
5	SH0516C	Screw	10
5A	SH0512C	Screw	1
6	NF06CN	Nut	9
7	W051218	Washer, Flat	11
7 A	W05M202	Washer	1
8	RP03	Pin, "R"	2
9	AM012	Ht Adj Pawl Push Rod Spring	1
10	AM013Q2	Ht Adj Pawl Push Rod Button	1
11	W041216	Washer, Flat	7
12	RP01	Pin, "R"	3
13	8904607J	Assy Conn Link, Front To Rear	1
	95119	Link, Float, Rear	1
	95120	Link, Adjust, Front	1
	NF06CN	Nut	2
	SH0616C	Screw	2
	W061216	Washer	2
14	96103	Lug, End Stop, Brake Cable	2
15	96104	Lug, Locator, Brake Cable	2
16	SPM5X12	Screw, Pan	2
17	W040818	Washer, Flat	5
18	NM5NT	Nut	4
19	SH0616C	Screw	1
20	W061216	Washer, Flat	8
21	W0620HD	Washer, Flat	2
22	N06C	Nut	1
23	B0624C	Bolt	2
24	WS060815	Washer, Lock, Spring	1
25	AM240	Pivot Bush	1
26	AM24105C	Disengaging Adj Threaded	1
27	N05CN	Nut	7
27A	NT05CN	Nut	1
28	96105	Handle, Cutter Disengage	1
29	AM009	Hand Grip	1
30	SH0616M	Screw	11
30a	NM6NT	Nut	2
31	NCM8X3.2	Nut, Cage	1
32	W05M202	Washer, Flat	3
33	14022	Hub, Thrust, Bracket	2
34	B0860M	Bolt	8
35	W051218	Washer, Flat	8
35A	W05M202	Washer	4
36	NM8NT	Nut	11
37	96011	Pedal, Drive	1
38	96070	Pin, Pivot, Drive Pedal	1
39	96069	Park Brake Pedal	1
40	96071	Spacer, Park Brake Pedal	1
41	AM031D1	Bolt	1
43	96051	Rod, Select Free Wheel	1
44	89052	Control, Rod, Drive	1
		•	



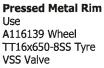

DESCRIPTION

Wheel, Rim, Rear

Valve Stem—Tubeless

Circlip, Ext, "E" Type

Ht Adj Pawl Push Rod Spring

Spring, Tension, Brake Cable

Hose Clamp

STU16x650-8SS Tube—Optional

Key

Nut

Knob

Washer, Flat

Pin Park Brake

Brake Cable

Transaxle

Split Pin

Belt V, Drive Belt

Belt V, Cutter Deck

Hose, Transaxle Reservoir

Tyre (Tubeless Round Profile Tyre Only)

ITEM PART NO 96089

CH01

89071

VSS

C02

51 W122414

89095

N06CN

89013

AM012

14038

89074

14101

V39

V13

89029

CP2-516

TT16x650-8SS

45

46

47

48

49

50

52

53

54 55

56

57

58

59

60

QTY

1

2

2

2

2 4

2

4

1

1

1

1

1

1 1

1

1

1




Cast Alloy Rim Use AM305 Rim TT650X8 Tyre & Tube STU650X8 Tube 14001 Hub, Adaptor SH1025M Bolt (3) W061216 Washer (3)



Pressed Metal Rim Use Photo (1)

Model A11607L, A11707L, A11608F, A11708F, A11908F, A13509A, A13509G, A13709G:-

Drive Components

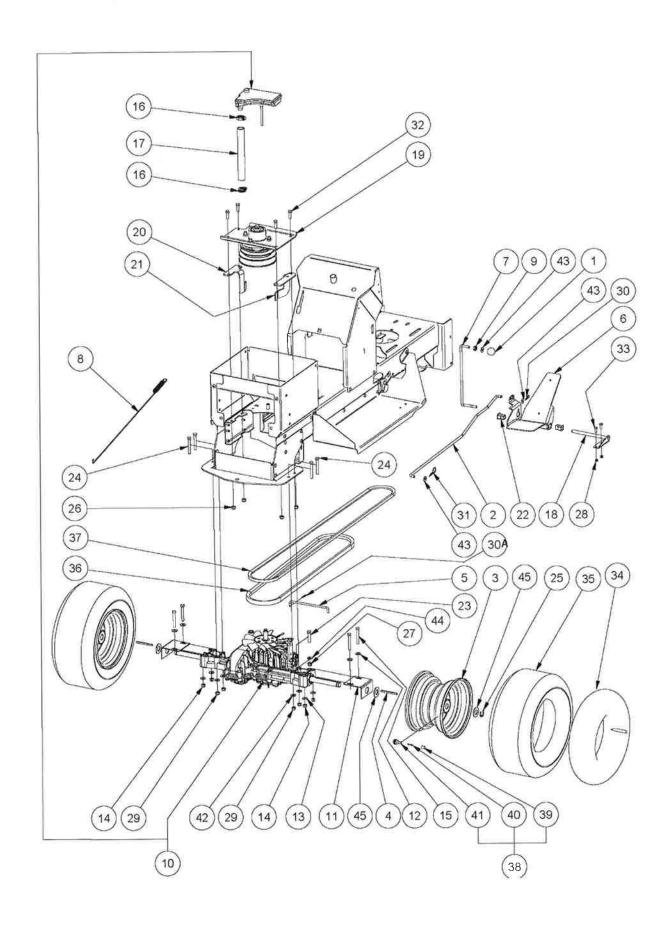

Model A11607L, A11707L, A11608F, A11708F, A11908F, A13509A, A13509G, A13709G:-

ITEM

36

37

38

42

43

44

45

46

PART No

V13

V09

V39

V55

VSS

W051216

W051218

W061216


W122414

W203806

Drive Components

ITEM	PART No	DESCRIPTION	QTY
1	14038	Knob, Spherical	1
2	89052	Control Rod, Drive	1
3	A116139	Wheel incl Tyre	2
4	89095	Key	2
5	96051	Rod, Select Free Wheel	1
6	A111013L	Pedal, Drive	1
7	A111017Z	Pin, Locking, Brake+Drive	1
8	A111018	Spring	1
9	A111050Z	Bush, Pin, Locking	1
10	89029	Transaxle, Hydro	1
11	14022	Hub, Thrust, Bracket	2
12	W05M202	Washer, Flat	4
13	W051218	Washer, Flat	4
14	NM8NT	Nut	4
15	B0860M	Bolt	4
16	CH01	Clamp, Hose	2
17	96089	Hose, Transaxle	1
18	A116015Z	Pivot, Pedal, Drive Sub-Assy Pto (refer Drive PTO Compo-	1
19		nents)	
20	A116093Z	Guide, Belt, Left	1
21	A116095Z	Guide, Belt, Right	1
22	AM230	Bush - Plastic	2
23	B0624C	Bolt	1
24	B0860M	Bolt	4
25	C02	Circlip	2
26	N05CN	Nut	4
27	N06CN	Nut	1
28	NM6NT	Nut	2
29	NM8NT	Nut	4
30	RP01	Pin, 'R'	1
30A	RP04	Pin, 'R'	1
31	RP03	Pin, 'R'	1
32	SH0825M	Screw	4
33	SH0616M	Screw	2
34	STU16X650-89	SSTube optional	2
35	TT16X 650-8S	S Tyre- Tubeless	2



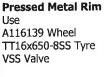

DESCRIPTION

Belt V (32" cut)

Belt V (38" cut)

Valve, Tubeless

Washer, Flat

Washer, Flat

Washer, Flat

Washer, Flat

Washer, Flat

Belt V (Suit machines fitted

Belt V (Suit machines fitted with "B" Section Pulley)

with "A" Section Pulley)

QTY

1

1

1

1

2

4

3

1

2

2




Cast Alloy Rim Use AM305 Rim TT650X8 Tyre & Tube STU650X8 Tube 14001 Hub, Adaptor SH1025M Bolt (3) W061216 Washer (3)



Pressed Metal Rim NLA Use Photo 1

Model A13510B, A13610B, A13710B:-Drive Components

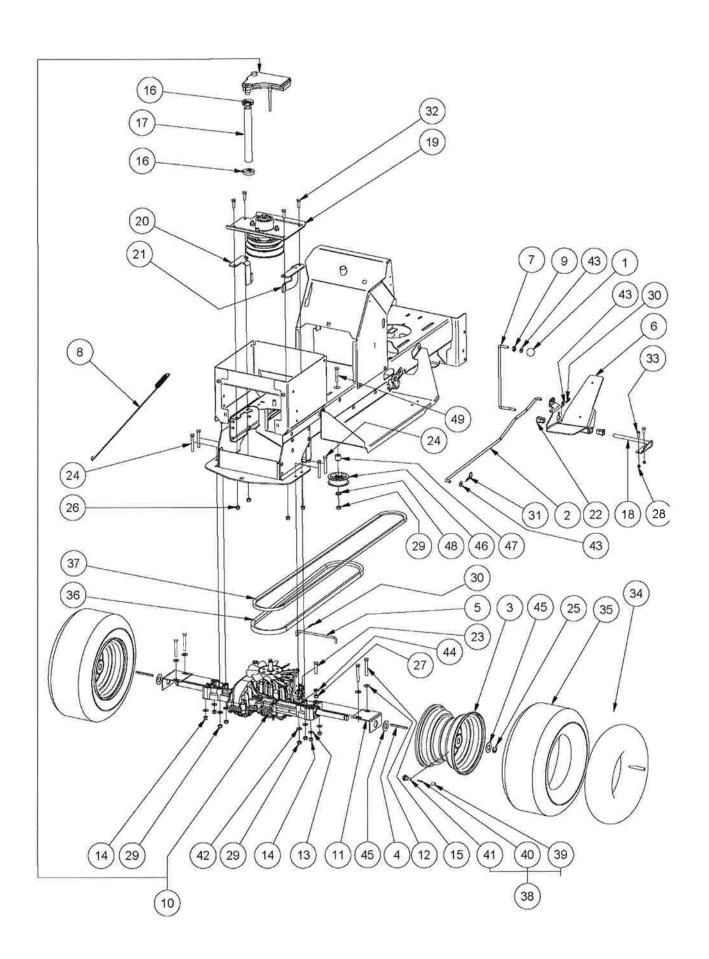

Model A13510B, A13610B, A13710B:-Drive Components

	J. A.10010D/	A15010D/ A15710D1	
ITEM	PART No	DESCRIPTION	QTY
1	14038	Knob	1
2	89052	Control Rod, Drive	1
3	A116139	Wheel, 8" incl Tyre	2
4	89095	Key	2
5	96051	Rod, Select Free Wheel	1
6	A111013L	Pedal, Drive, Green	1
7	A111017Z	Pin, Locking, Brake+Drive	1
8	A111018	Spring, Extension, Foot Brake	1
9	A111050Z	Bush, Pin, Locking	1
10	89029	Transaxle, Hydro	1
11	14022	Bracket, Thrust, Hub	2
12	W05M202	Washer	4
13	W051218	Washer	4
14	NM8NT	Nut	4
15	B0860M	Bolt	4
16	CH01	Clamp, Hose	2
17	96089	Hose, Transaxle	1
18	A116015Z	Pivot, Pedal, Drive	1
19		Sub-Assy Pto (Refer Drive PTO	1
20	A116093Z	Guide, Belt, Left	1
21	A116095Z	Guide, Belt, Right	1
22	AM230	Bush - Plastic	2
23	B0624C	Bolt	1
24	B0860M	Bolt	4
25	C02	Circlip, Ext, 'E' Type	2
26	NM8NT	Nut	4
27	N06CN	Nut	1
28	NM6NT	Nut	2
29	NM8NT	Nut	5
30	RP01	Pin, 'R'	2
30A	RP04	Pin, 'R'	1
31	RP03	Pin, 'R'	1
32	SH0825M	Screw	4
33	SH0616M	Screw	2
34	STU16x650-88SS	Tube, Optional	2
35	TT16x650-8SS	Tyre- Tubeless	2
36	V46	Belt V - (32" Cut)	1
	V09	Belt V-(38" Cut)	1
37	V39	Belt V, (Suit Machines Fitted With "A" Section Pulley)	1
	V55	Belt V, (Suit Machines Fitted With "B" Section Pulley)	1





Pressed Metal Rim Use A116139 Wheel TT16x650-8SS Tyre VSS Valve




Cast Alloy Rim Use AM305 Rim TT650X8 Tyre & Tube STU650X8 Tube 14001 Hub, Adaptor SH1025M Bolt (3) W061216 Washer (3)



Pressed Metal Rim NLA Use Photo 1


MODEL A14010K, A14110K:- Drive Components

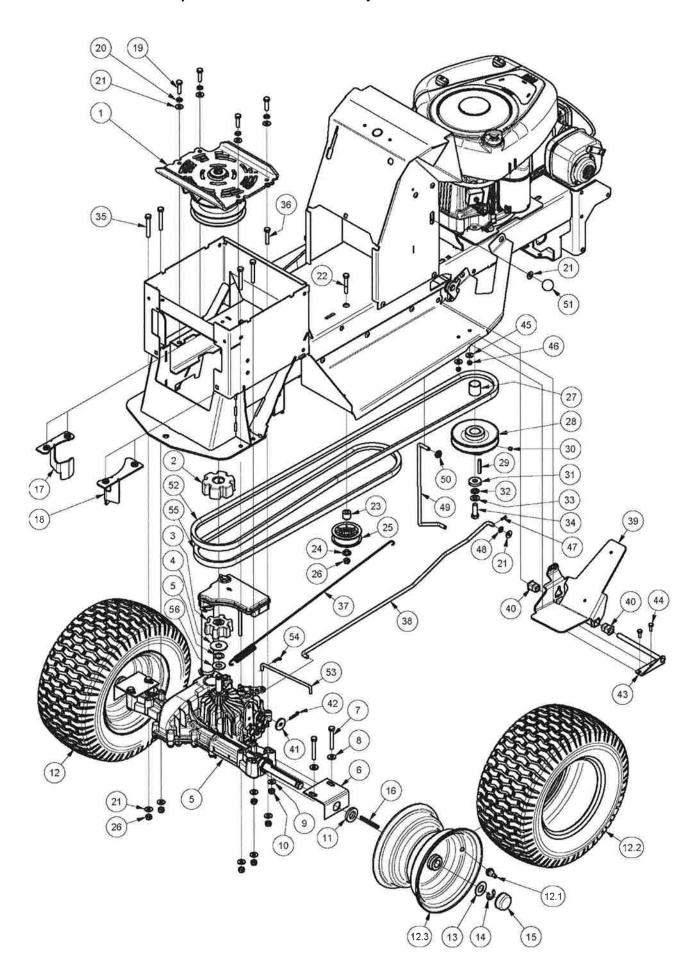

MODEL A14010K, A14110K:- Drive Components

ITEM	PART NUMBER	DESCRIPTION	QTY
1		Sub-Assy, PTO	1
2	A116013	Cushion, Drive	1
3	A116025	Spline, Driven, Cushion, Large	1
4	89048	Washer	1
5	A139012	Transaxle, Hydro	1
6	14022	Bracket, Thrust, Hub	2
7	B0860M	Bolt	4
8	W05M202	Washer	4
9	W051218	Washer	4
10	NM8NT	Nut	4
11	W203806	Washer	2
12	A116139	Wheel	2
12.1	VSS	Valve, Tubeless	1
12.2	TT16X 650-8SS	Tyre, Tubeless	1
13	W122414	Washer	2
14	C02	Circlip	2
15	A116060	Cap, Hub	2
16	14126	Key	2
17	A139092Z	Guide, Belt, Left	1
18	A139094Z	Guide, Belt, Right	1
19	B0830M	Bolt	4
20	WS050216	Washer, Lock, Spring	4
21	W051218	Washer	11
22	B0850M	Bolt	1
23	90293	Boss, Idler	1
24	90294	Boss, Idler	1
25	PIFBB126598A	Idler, Flat	1
26	NM8NT	Nut	6
27	A108103	Spacer, Pulley, Engine	1
28	A108101	Pulley, Engine	1
29	A108104	Key	1
30	GS0505C	Screw, Set	1
31	W072004	Washer	1
32	WS071006	Washer, Lock, Spring	1
33	W071416	Washer	1
34	SH0720F	Bolt	1
35	B0860M	Bolt	4
36	B0840M	Bolt	1
37	A111018	Spring, Extension	1
38	89052	Control Rod	1
39	A111013L	Pedal, Drive	1
40	AM230	Bush - Plastic	2
41	W052003	Washer	1
42	RP01	Pin, 'R'	1
43	A116015Z	Pivot, Pedal, Drive	1
44	SH0616M	Screw	2
45	W041216	Washer, Flat	2
46	NM6NT	Nut	2
47	CP2-512	Pin, Split	
48	14157	Fastener, Push On, Round	1
49	A111017Z	Pin, Locking, Brake+Drive	1
50	A111050Z	Bush, Pin, Locking	1
51	14038	Knob	1
52	V55	Belt V	1
53	96051	Rod, Select Free Wheel	1
54	RP04	Pin, 'R'	1
55	V13	Belt, V	1
56	W092016	Washer	1


Model 9605G, A10506G, A11607L, A11608F, A11707L, A11708F, A11908F, A13509G, A13510B, A13609G, A13610B, A13709G, A13710B, A14010K, A14110K:- Transaxle Components

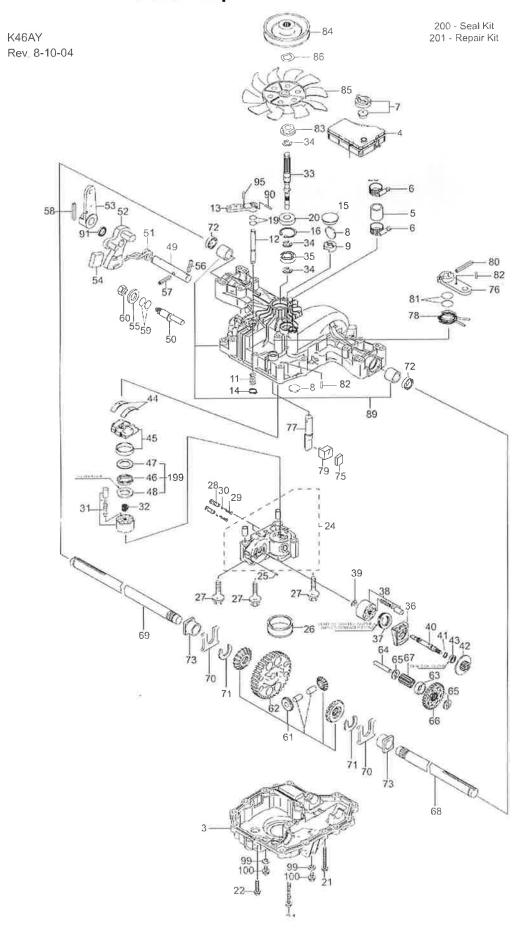

Model 9605G, A10506G, A11607L, A11608F, A11707L, A11708F, A11908F, A13509G, A13510B, A13609G, A13610B, A13709G, A13710B, A14010K, A14110K:-Transaxle Components (TUFF TORQ)

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QT
1	89029	Transaxle	1	67	T1A646033531	Final Pinion Gear (10t)	1
3	T1A646084163	Lower Case	1	68	T1A646089430	Axle Shaft Left	1
4	T1A646024460	Reservoir Tank	1	69	T1A646089440	Axle Shaft Right	1
5	KIT231	Hose 240L incl Clamp	1	70	T19216334261	Thrust Washer	1
	KIT232	Hose 210L incl Clamp	1	71	T19216834270	Ring 17	1
6	CH12	Clamp	2	73	T19216834350	Bushing	1
7	T19485924252	Vent Valve 15	1	75	T1A646036121	Brake Shoe	1
9	T1A646024370	Magnet Holder	1	76	T1A646036160	Brake Lever	1
11	T19215427281	Spring 25	1	77	T1A646036171	Brake Shaft	1
12	T1A646089510	Bypass Shaft B	1	78	T1A646036180	Brake Return Spring	1
13	T1A632029520	Bypass Lever	1	79	T1A646036200	Brake Actuator	1
14	T19216829570	Ring 10	1	80	T22351050032	Pin 5 * 32	1
15	T1C655036300	Sealing Cap 30	1	82	T22351040016	Spring Pin 4 * 16	1
16	T22252000350	Snap Ring C 35	1	83	T1A646025300	Spline Collar	1
21	T26476080552	Tapping Screw 8 * 55	1	84	Refer PTO	Pulley	1
22	T26476080302	Tapping Screw 8 * 30	1	85	T1A646083050	Fan, White NOT USED ON A14010	ок1
24	T1A646024910	Center Case K	1	00	T1 A C 4 C 0 0 2 0 C 0	A14110K	1
25	T19216824760	Pin 3 * 9.8	1	86	T1A646083060	Wave Washer	1
26	T19216324950	Filter	1	89	T1A646024302	Upper Case Kit	1
27	T26106100752	Bolt 10 * 75	1	90	T22351030020	Pin 3.0a * 20	1
28	T1A646024800	Ids Valve	1	95	T22351030016	Spring Pin 3.0a * 16	1 1
29	T1A646024761	Ids Spring	1	100	T26106080122	Drain Bolt 8 * 12	1
30	T1A646024790	Ids Filter 300	1	199	T1A646088150	Bearing	
31	T19216825111	Cylinder Block Kit	1	200	T1A646099140	K46 Seal Kit (All Models)	1 1
32	T1A646025200	Spring	1	201	T46005	Repair Kit	1
33	T1A646025251	Pump Shaft	1				
34	T19215485310	E-Ring 15	1				
35	T24101062020	Bearing 6202c3	1				
36	T19216824210	Motor Housing	1				
37	T19216324240	Thrust Bearing 51106	1				
38	T19216825210	Cylinder Block Kit	1				
39	T19216825230	Washer 12 * 24 * 1	1				
40	T1A646025271	Motor Shaft	1				
41	T19215425310	Snap Ring S15	1				
42	T1A646085400	Motor Gear 12t	1				
43	T24102062020	Bearing 6202 Duc3	1				
44	T19216327060	Thrust Metal	1				
45	T1A646024700	Swash Plate	1				
49	T1A646029911	Control Shaft	1				
50	T1A646029920	Fulcrum	1				
51	T1A646029800	Torsion Spring, Standard	1				
52	T1A646029900	Control Arm E	1				
53	T1A646029851	Control Lever C	1				
54	T1A646029350	Jerky Plate	1				
55	T22137120000	Washer 12	1				
56	T1A646029940	Cotter Pin 1/8" * 3/4"	1				
57	T22351060036	Spring Pin 6 * 36	1				
58	T22351060040	Roll Pin 6 * 40	1				
60	T26776120002	Nut 12	1				
61	T1A646031510	Differential Gear Kit	1				
62	T1A646033520	Final Gear (54t)	1				
63	T1A646033250	Final Pinion Collar	1				
64	T1A646033410	Reduction Shaft	1				
65	T19216833420	Washer 12 * 32 * 3.2	1				
66	T1A646083450	Reduction Gear 31t	1				


Model 9605G & A10506G: Drive PTO Components

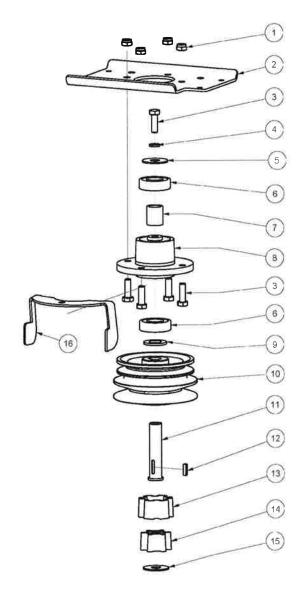

ITEM	PART NUMBER	DESCRIPTION	QTY
1	NM10NT	Nut	4
2	89022	Brace, Upper, Drive	1
3	SH1030M	Screw	5
4	WS071006	Washer, Lock, Spring	1
5	13247	Washer	1
6	BB205215NS	Bearing	2
7	AM021	Sleeve, Spacer, Bearing	1
8	AM242	Bearing Housing	1
9	W204303	Washer, Flat	1
10	89024	Pulley, Drive	1
11	89027	Spindle, Drive Pulley	1
12	AM271	Key	1
13	8902606K	Cushion, Drive	1
14	89025	Spline Drive	1
15	89048	Washer, Flat	1
16	89092	Belt Guide, Drive Pulley	1

MODEL A11607L, A11608F, A11707L, A11708F & A11908F: DRIVE PTO COMPONENTS


FOR MODELS CR9600U BEFORE SERIAL NO 5415 —FOR MODELS CR9602U BEFORE SERIAL NO 8191 FOR MODELS CR9603U BEFORE SERIAL NO 655 —FOR MODELS CR9604U BEFORE SERIAL NO 160

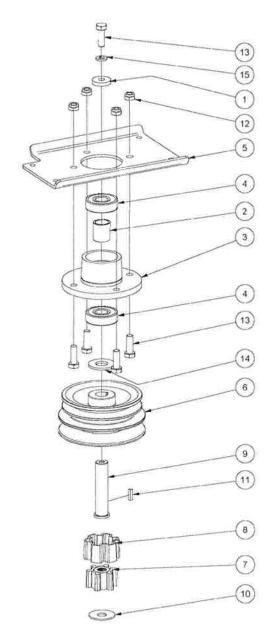

ITEM	PART NUMBER	DESCRIPTION	QTY
1	13247	Washer, Flat	1
2	AM021	Sleeve, Spacer, Bearing	1
3	AM242	Bearing Housing	1
4	BB205215NS	Bearing, Ball	2
5	89022	Brace, Upper Drive	1
6	89024	Pulley, Transaxle	1
7	89025	Spline Drive	1
8	8902606K	Cushion, Drive	1
9	89027	Drive Spindle	1
10	89048	Washer	1
11	AM271	Pulley Key (L/H & R/H)	1
12	NM10NT	Nut	4
13	SH1030M	Screw	5
14	W204303	Washer, Flat	1
15	WSM10X3.7X2.5	Washer, Lock, Spring	1


MODEL A11608F, A11708F, A11908F, A13509A, A13509G, A13510B, A13609G, A13510B, A13709G, A13710B:- DRIVE PTO COMPONENTS

FOR MODELS CR9600U FROM SERIAL NO 5415 —FOR MODELS CR9602U FROM SERIAL NO 8191 FOR MODELS CR9603U FROM SERIAL NO 655 —FOR MODELS CR9604U FROM SERIAL NO 160

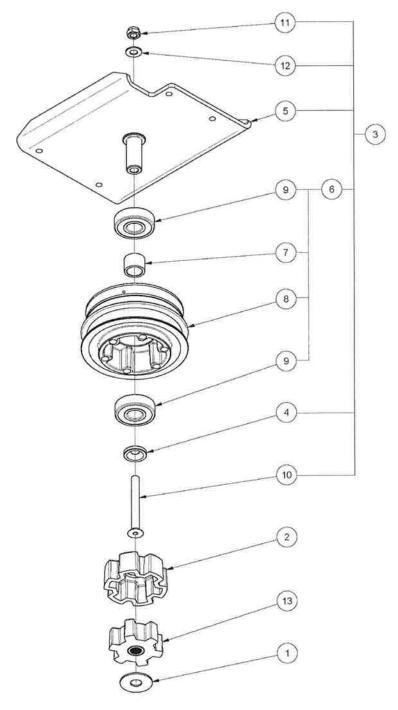


ITEM	PART NUMBER	DESCRIPTION	QTY
1	89048	Washer	1
2	A116013	Cushion, Drive	1
3		Sub-Assy, Pto	1
4	A116012Z	Washer, Bearing, Retaining	1
5	A116021L	Brace, Upper, Drive	1
6		Sub-Assy, Pulley, PTO	1
7	232103	Sleeve, Spacer, Bearing	1
8	A116024	Pulley, Pto (Suit machines fitted with "A" Section Belt & Pulley)	1
	A135024	Pulley, Pto (Suit machines fitted with "B" Section Belt & Pulley)	1
9	BB205215NS	Bearing, Ball	2
10	CSSBM10X90	Screw	1
11	NM10NT	Nut	1
12	W10MN	Washer, Flat	1
13	A116025	Spline, Driven, Cushion, Large	1

MODEL A14010K, A14110K:- Drive PTO Components

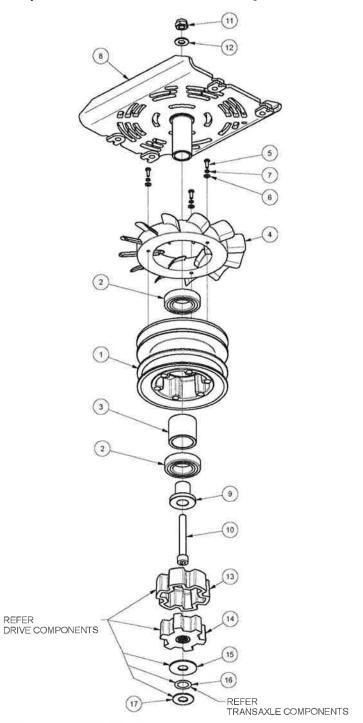

ITEM	PART NUMBER	DESCRIPTION	QTY
1	A139024	Pulley, PTO, Socket, Cushion	1
2	BB305513NS	Bearing, Ball	2
3	A139031	Sleeve, Spacer, Bearing	1
4	A139025	Fan, Transaxle	1
5	SPM4X12	Screw, Pan	3
6	W04MN	Washer, Flat	3
7	WSM4X1.2X1.2	Washer, Lock, Spring	3
8	A139026L	Mount, PTO, Vented	1
9	A139028Z	Retainer, Recessed, Bearing	1
10	CHSBM10X75	Bolt, Cap	1
11	NM10NT	Nut	1
12	W10MN	Washer, Flat	1
13	A116013	Cushion, Drive	1
14	A116025	Spline, Driven, Cushion, Large	1
15	89048	Washer	1
16	T1A646083060	Washer, Wave	1
17	W092016	Washer	1


Model 9605G, A10506G, A11607L & A11707L:- Engine Ancillary Components

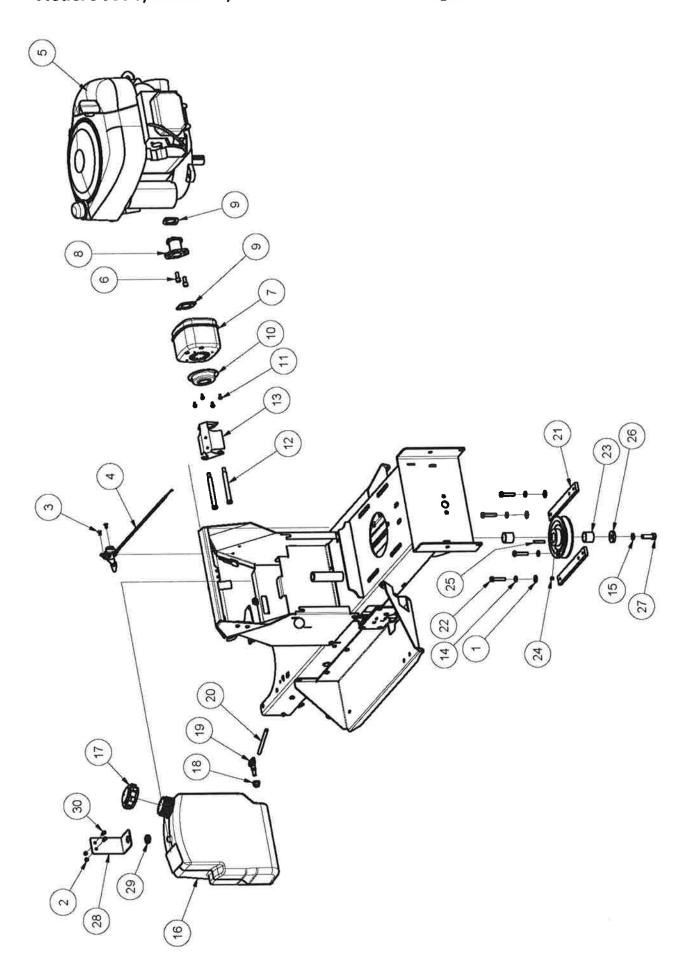

Model 9605G, A10506G, A11607L & A11707L:- Engine Ancillary Components

ITEM	PART NUMBER	DESCRIPTION	QTY
1	W051218	Washer, Flat	4
2	NM5NT	Nut	2
3	PR0306	Rivet	2
4	13101	Assy, Control, Throttle	1
5	13 HP, 15.5HP or 17HP B&S	Engine	1
	A108109B	Engine Plate 13HP Only	1
6	CHSS0512C	Screw, Cap	2
7		Side muffler	1
8		Side muffler manifold	1
9		Gasket B&S	2
10		Side muffler deflector	1
11	ST0806	Screw	4
12		Side muffler screw	2
13		Side muffler bracket	1
14	WS050216	Washer, Lock, Spring	4
15	WS071006	Washer, Lock, Spring	1
16	80033	Tank, Fuel	1
17	CF01	Cap, Fuel	1
18	AM294	Grommet, Fuel Tap	1
19	AM293	Fuel Tap	1
20	14107	Fuel Hose	1
21	AM078B0	Mount, Plate	2
22	B0524C	Bolt	4
23	89060	Engine Pulley Spacer	2
24	GS0505C	Screw, Set	1
	KIT204	Engine Pulley Kit (incl pulley, spacer, key & screw)	1
25	AM175	Key, Engine Pulley	1
26	W072004	Washer, Flat	1
27	SH0720F	Bolt	1
28	80036	Bracket, Restrain, Fuel Tank 13HP	1
	A105007B	Bracket. Restrain, Fuel Tank 15.5HP & 17HP	1
29	80037	Grommet	1
30	SPM5x12	Screw	2

MODEL A11608F, A11708F, A13509A, A13509G, A13510B, A13609G, A13610B, A13709G, A14010K, A14110K:- ENGINE ANCILLARY COMPONENTS B&S ONLY

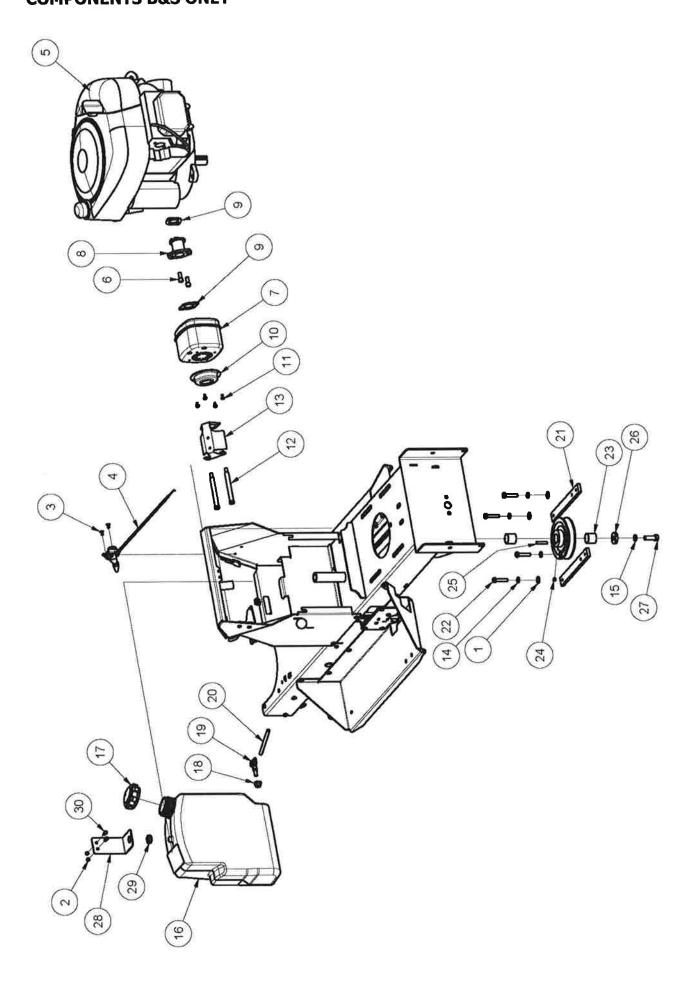


MODEL A11608F, A11708F, A13509A, A13509G, A13510B, A13609G, A13610B, A13709G, A14010K, A14110K:- ENGINE ANCILLARY COMPONENTS B&S ONLY

ITEM	PART NUMBER	DESCRIPTION	QTY
1	W051218	Washer, Flat	4
2	NM5NT	Nut	2
3	BHSSM5X16	Screw, Control, Throttle	2
	NM5NT	Nut, Control, Throttle	2
4	A131101	Assy, Control, Throttle	1
5		Engine	1
	A108109B09H	Engine Plate	1
6	CHSS0512C	Screw, Cap	2
7		Side muffler	1
8		Side muffler manifold	1
9		Gasket B&S	2
10		Side muffler deflector	1
11	ST0806	Screw	4
12		Side muffler screw	2
13		Side muffler bracket	1
14	WS050216	Washer, Lock, Spring	4
15	WS071006	Washer, Lock, Spring	1
16	80033	Tank, Fuel	1
17	CF01	Cap, Fuel	1
18	AM294	Grommet, Fuel Tap	1
19	AM293	Fuel Tap	1
20	14107	Fuel Hose	1
21	AM078B0	Mount, Plate	2
22	B0524C	Bolt	4
23	A108103	Engine Pulley Spacer	2
24	GS0505C	Screw, Set	1
	KIT204	Engine Pulley Kit (incl pulley, spacer, key & screw)	1
25	A108104	Key, Engine Pulley	1
26	W072004	Washer, Flat	1
27	SH0720F	Bolt	1
28	80036	Bracket, Restrain, Fuel Tank 13HP	1
	A105007B	Bracket. Restrain, Fuel Tank 15.5HP 16.5HP & 18.5HP	1
29	80037	Grommet	1
30	SPM5x12	Screw	2
	AM295	Spark Plug Spanner	1

MODEL A13709G, A13710B,A14010K, A14110K:-COMPONENTS 13HP HONDA ONLY


ENGINE ANCILLARY

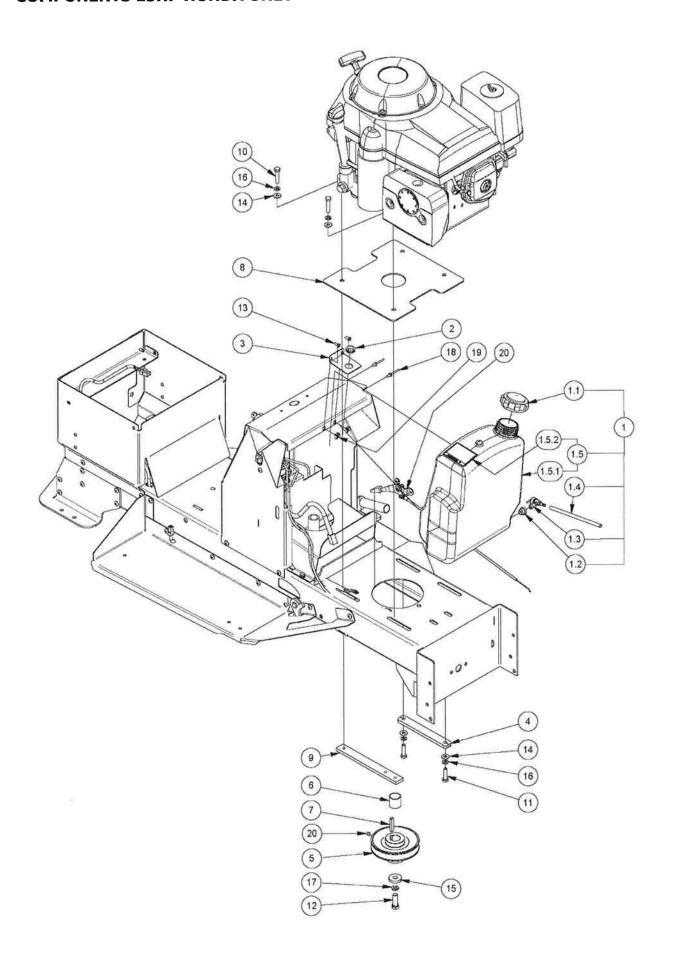

MODEL A13709G, A13710B,A14010K, A14110K:- ENGINE ANCILLARY COMPONENTS 13HP HONDA ONLY

ITEM	PART NUMBER	DESCRIPTION	QTY
1	80035	Sub-Assy, Tank, Fuel	1
1.1	CF01	Cap, Fuel	1
1.2	AM294	Grommet, Fuel Tap	1
1.3	AM293	Petrol Tap	1
1.4	14107	Line, Fuel, L=180	1
1.5	KIT167	Kit, Tank, Fuel	1
1.5.1		Tank, Fuel	1
1.5.2		Decal, Warning, Fuel	1
2	80037	Grommet	1
3	A107007B	Bracket, Restrain, Fuel Tank	1
4	A107114Z	Plate, Mount, Engine, 13.0 Hon, Left	1
5	A108101	Pulley, Engine	1
6	A108103	Spacer, Pulley, Engine, L=28	1
7	A108104	Key	1
8	A108109B09H	Plate, Base, Engine	1
	CP07	Clip	1
	BHSSM5X12	Screw	1
	NM5N	Nut	1
9	AM078B0	Engine Mount Bolt Plate	1
10	B0524C	Bolt	2
11	B0520F	Bolt	2
12	SH0720F	Bolt	1
	W071416	Washer, Flat	2
13	SPM5X12	Screw, Pan	2
14	W051218	Washer, Flat	4
15	W072004	Washer, Flat	1
16	WS050216	Washer, Lock, Spring	4
17	WS071008	Washer, Lock, Spring	1
18	PR0306	Rivet	2
19	NCM5X2.5X9.5	Nut, Cage	2
20	A133033	Control, Speed, Engine, 13.0HP	1

MODEL A11908F, A13709G, A13710B,A14010K, A14110K:-ENGINE ANCILLARY COMPONENTS 16HP HONDA ONLY

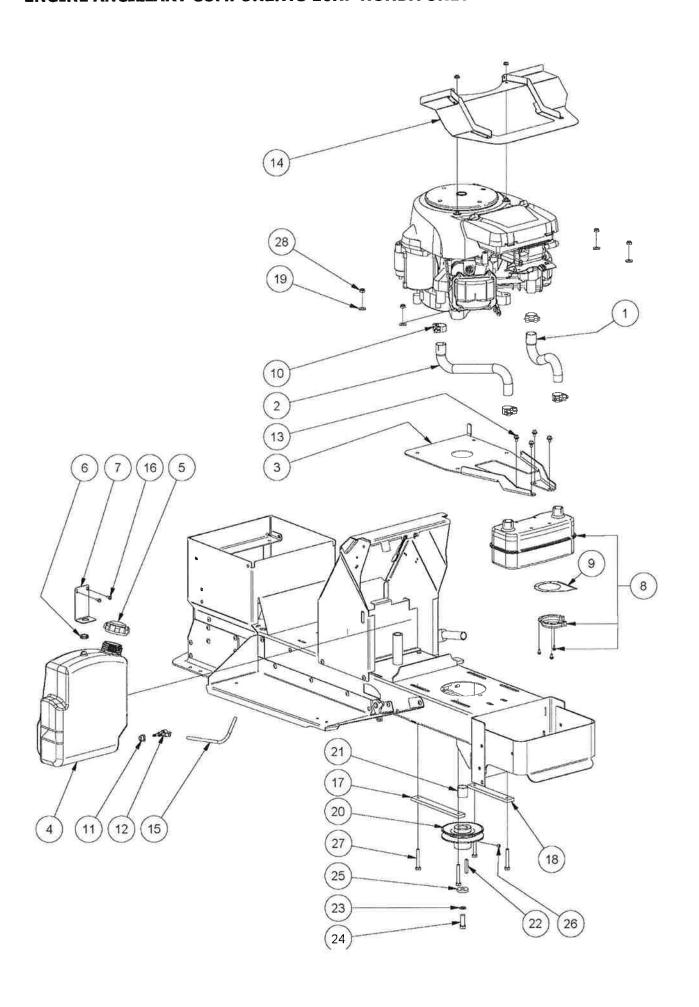


MODEL A11908F, A13709G, A13710B,A14010K, A14110K:-ENGINE ANCILLARY COMPONENTS 16HP HONDA ONLY

ITEM	PART NUMBER	DESCRIPTION	QTY
1	A119121C	Pipe, Exhaust, Left	1
2	A119123C	Pipe, Exhaust, Right	1
3	A119125Z	Bracket, Muffler, 16.0 Hon	1
4	80033	Tank, Fuel	1
5	CF01	Cap, Fuel	1
6	80037	Grommet	1
7	A105007B	Bracket, Restrain, Fuel Tank	1
8	90167	Muffler, Exhaust	1
9	80025	Deflector, Exhaust Gas	1
10	90168	Clamp, Hose, T-Bolt	4
11	AM294	Grommet	1
12	AM293	Petrol Tap	1
13	B0408TFS	Screw	4
14	A119127B09G	Baffle, Hot Air, Engine, Front	1
15	A119129	Fuel Line	1
16	SPM5X12	Screw, Pan	2
17	A116208Z	Plate, Mounting, Engine, Right	1
18	A116207Z	Plate, Mounting, Engine, Left	1
19	W05M202	Washer	4
20	A108101	Pulley, Engine	1
21	A108103	Spacer, Pulley, Engine	1
22	A108104	Key	1
23	WS071008	Washer, Lock, Spring	1
24	SH0720F	Bolt	1
	W071416	Washer	2
25	W072004	Washer	1
26	GS0505C	Screw, Set	1
27	SH0850M	Screw	4
28	NHCM8	Nut	4
	A133133	Control, Speed, Engine	1
	BHSSM5X12	Screw, Control, Throttle	2
	NM5NT	Nut, Control, Throttle	2
	A119135	Clamp, Cable	1
	NM8NT	Nut	1
	SH0616M	Screw	1
	W041216	Washer	1
	AM295	Spark Plug Spanner	1
	AM005GO	Spark Plug Spanner 16HP Honda Only	1

Model 9605G, A10506G, A11607L, A11707L, A11608F & A11708F:-


Electrical Components Schematic

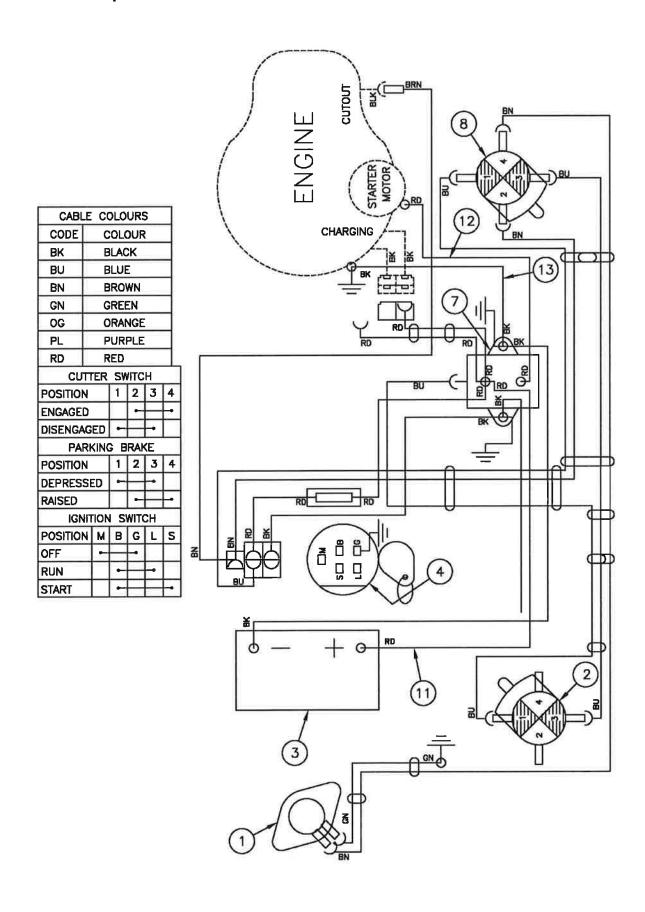


Model 9605G, A10506G, A11607L, A11707L, A11608F & A11708F:-

Electrical Components Schematic

ITEM	PART NO	DESCRIPTION	QTY
1	SP1PNCSM	Seat Switch	1
2	SKIT132	Park Brake Switch incl Cover	1
3		Battery (Purchase Replacement Locally)	1
4	AM014	Ignition Switch 13HP B&S	1
	13125	Ignition Switch 15.5HP, 16HP & 17HP B&S	1
5	AM015	Ignition Key	1pr
6	SH0616M	Solenoid Mounting Bolt	2
7	AM159	Solenoid	1
8	SKIT133	Disengaging Switch	1
9	NM6NT	Solenoid Mounting Bolt Nut	2
10	89081	Wiring Harness 13HP	1
	A105081	Wiring Harness 15.5HP, 16HP & 17HP	1
11	89082	Battery To Solenoid (Red) Lead	1
12	AM265	Solenoid To Starter Motor (Red)	1
13	15235	Chassis To Engine & Battery Lead (Black)	1
14	SH0616M	Battery Terminal Bolt	2
	NM6NT	Battery Terminal Bolt Nut	2
	CABLETIES	Cable Tie	5
15	89065	Solenoid Bracket	1
	PR0306	Solenoid Bracket Rivet	2
16	N04C	Nut	2
17	W040816	Washer, Flat	2

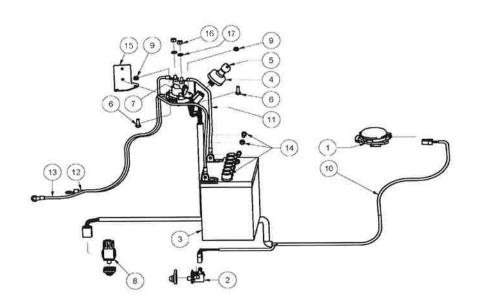


MODEL A13509G, A13510B, A13609G, A13610B, A13709G, A13710B, A14010K, A14110K:-ELECTRICAL COMPONENTS SCHEMATIC 13HP HONDA, 13.5HP 15.5HP 16.5HP 18.5HP B&S ONLY

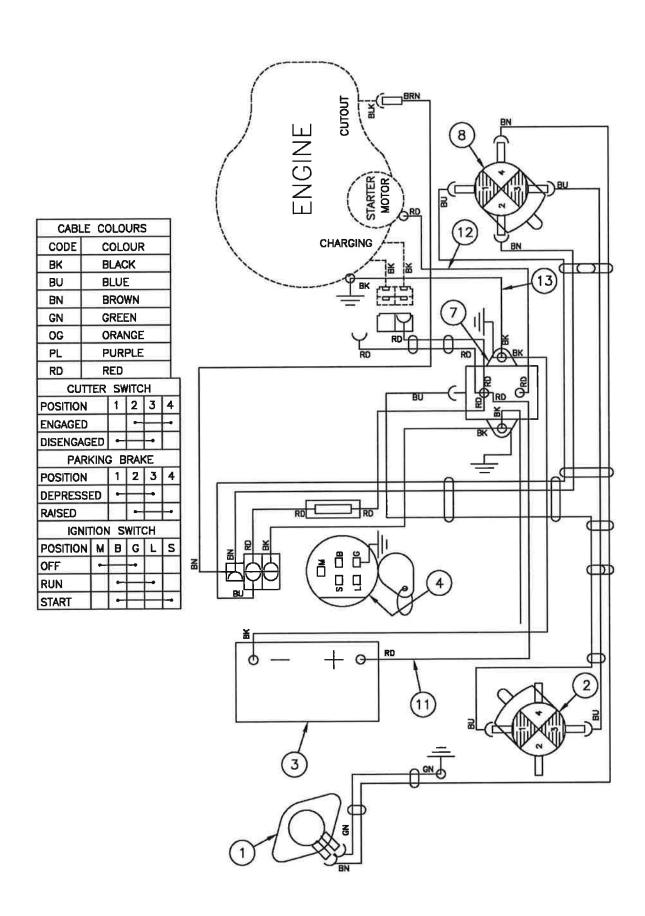


MODEL A13509G, A13510B, A13609G, A13610B, A13709G, A13710B, A14010K, A14110K:-ELECTRICAL COMPONENTS SCHEMATIC 13HP HONDA, 13.5HP 15.5HP 16.5HP 18.5HP B&S ONLY

ITEM	PART NUMBER	DESCRIPTION	QTY
1	SP1PNCSM	Seat Switch	1
2	SKIT132	Park Brake Switch Incl Cover	1
3		Battery (purchase locally)	1
4	13125	Switch, Key	1
5	AM015	Ignition Key	1
6	SH0616M	Screw	2
7	AM159	Solenoid	1
8	SKIT133	Disengaging Switch	1
9	NM6NT	Nut	2
10	A123026	Harness, Wiring, Main	1
11	89082	Lead, Battery To Solenoid, Red	1
12	AM265	Lead, Battery, Red	1
13	15235	Lead, Battery, Black, 3 term	1
14	N04C	Nut	2
15	W040818	Washer, Flat	2
	A133037	Tube, Wiring, Starter 13HP Honda	1
	13111	Engine Harness 13.0HP Honda Engine	1
	A116113	Engine Harness 13.5HP B&S Engine	1
	13112	Engine Harness 15.5HP 16.5HP 17.5HP & 18.5HP B&S Engine	1

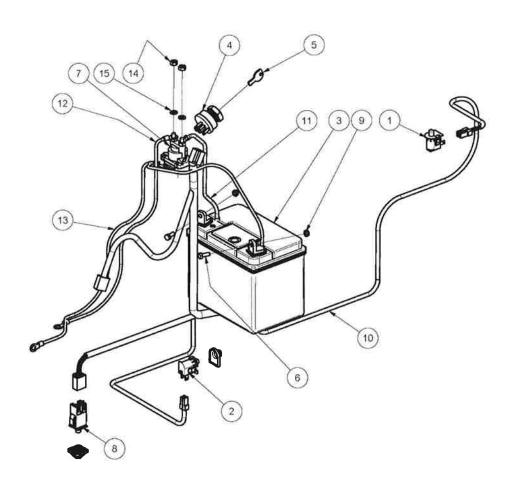


MODEL A11908F, A13709G, A13710B, A14110K:-ELECTRICAL COMPONENTS SCHEMATIC 16HP HONDA ONLY

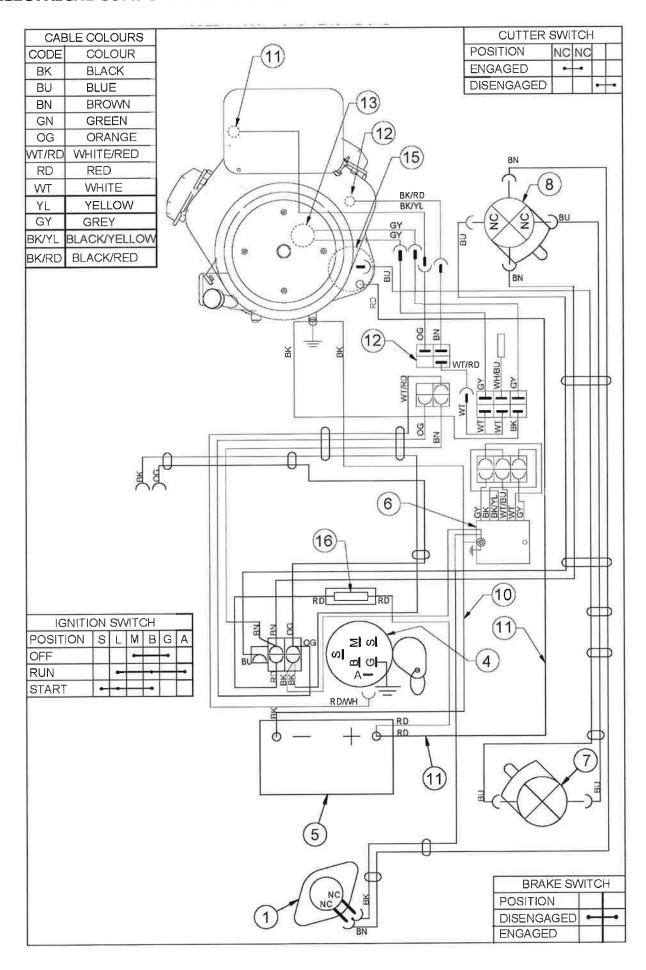


MODEL A11908F, A13709G, A13710B, A14110K:-ELECTRICAL COMPONENTS SCHEMATIC 16HP HONDA ONLY

ITEM	PART NUMBER	DESCRIPTION	QТΥ
1	SP1PNCSM	Switch, Plunger	1
2	A123026	Harness, Wiring, Main	1
3	13369	Lead, Battery, Black, 3term	1
4	13125	Switch, Key, 3 Posn, Magneto, 6 Term	1
5		Battery	1
6		Regulator/Rectifier	1
7	SKIT132	Foot Switch	1
8	SKIT133	Cutter Switch Incl Cover	1
9	A123113	Harness, Wiring, Engine, 16.0 Hon	1
10	AM015	Ignition Key	1
11		Fuel Cut Solenoid	1
12		Engine Stop	1
13		12a Charge Coil	1
14	84132	Lead, Battery	1
15		Starter Motor Solenoid	1
16		Fuse 15a	1
17	NHM8	Nut	2
18	B0630M	Bolt	2
19	NM6NT	Nut	4
20	SH0616M	Screw	2

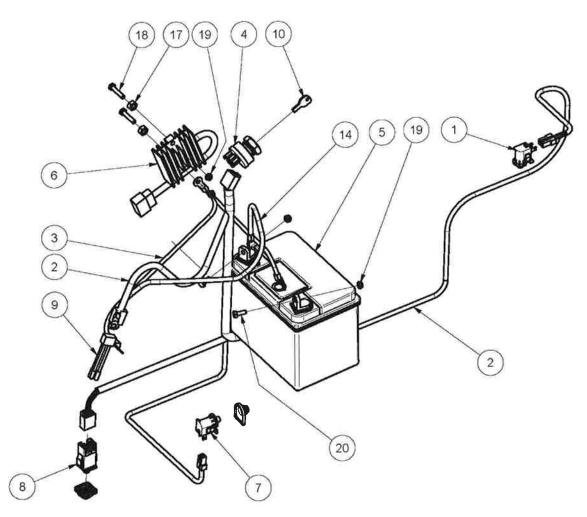


Model A11607L, A11707L, A11608F, A11708F & A11908F :-Cutter Control Components

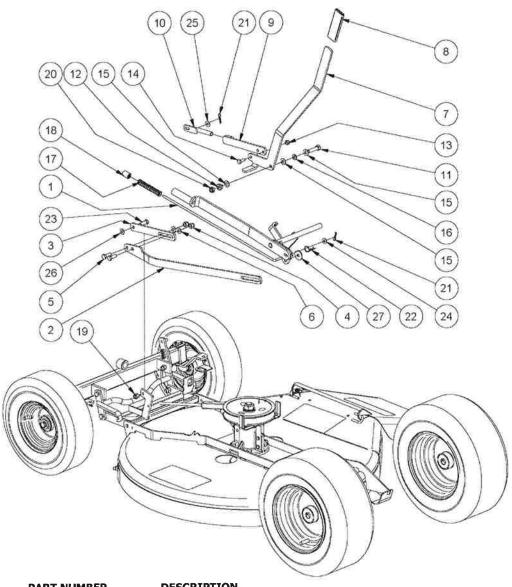


ITEM	PART NUMBER	DESCRIPTION	QTY
1	A108003Z	Rod, Adjust, Height, Cut	1
2	A108009Z	Link, Float, Rear (32" cut)	1
_	A119018Z	Link, Float, Rear (38" cut)	1
3	95120	Link, Adjust, Front	1
4	NF06CN	Nut	2
5	SH0616C	Screw	2
6	W061216	Washer, Flat	2
7	A116106Z	Lever, Disengage, Cutter	1
8	AM009	Hand Grip	1
9	AM240	Disengaging Adjuster Bushed	1
10	AM24105C	Disengaging Adjuster Threaded	1
11	B1040M	Bolt	1
12	NFM10	Nut	1
13	NM8NT	Nut	1
14	SH0825M	Screw	1
15	W10MN	Washer, Flat	3
16	WSM10X3.7X2.5	Washer, Lock, Spring	1
17	AM012	Height Adjustment Pawl Push Rod Spring	1
18	AM013Q2	Height Adjustment Pawl Push Rod Button	1
19	NF06CN	Nut	1
20	NM10NT	Nut	1
21	RP01	Pin, 'R'	2
22	RP03	Pin, 'R'	1
23	SH0616C	Screw	1
24	W041216	Washer, Flat	1
25	W051218	Washer, Flat	1
26	W061216	Washer, Flat	1
27	W0620HD	Washer, Flat	1

Model A13509G, A13510B, A13609G, A13610B, A13709G, A13710B:- Cutter Control Components

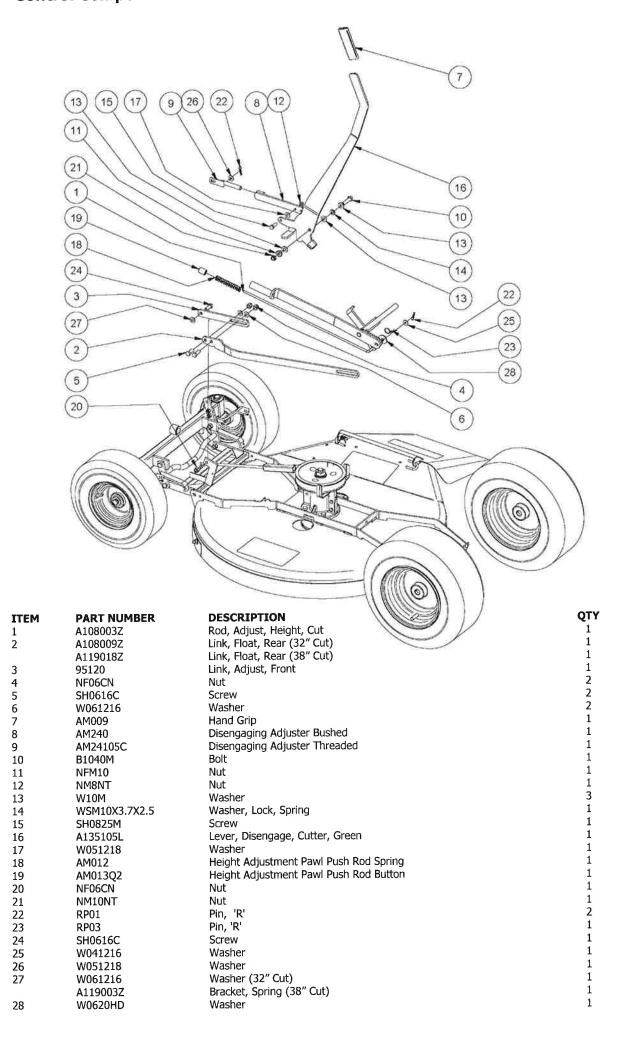

MODEL A14010K, A14110K:- CUTTER CONTROL COMPONENTS

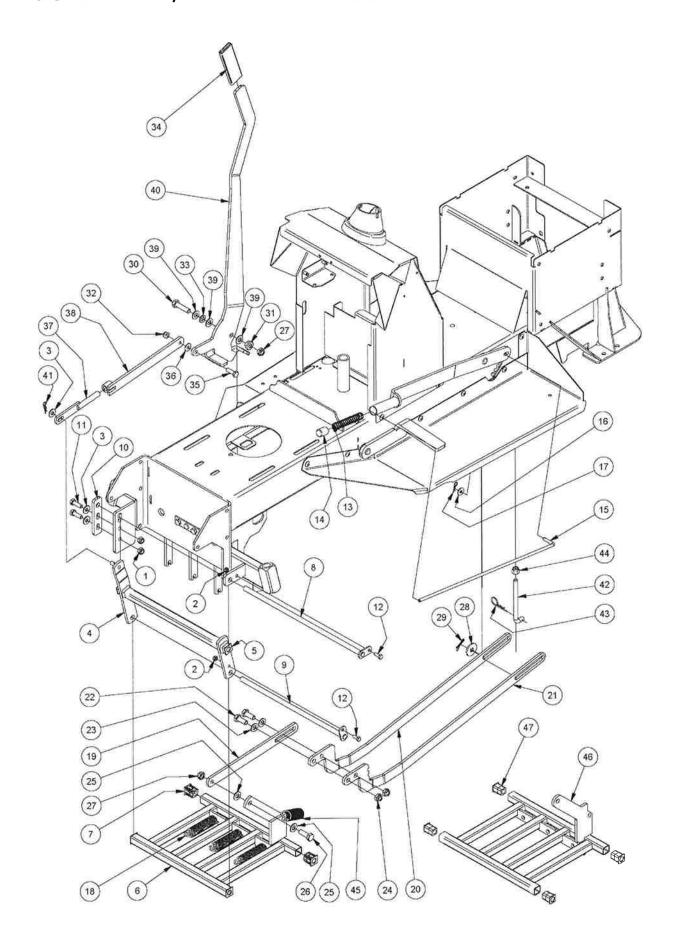


MODEL A14010K, A14110K:- CUTTER CONTROL COMPONENTS

ITEM	PART NUMBER	DESCRIPTION	QTY
1	NM8NT	Nut	4
2	NM6NT	Nut	3
3	W05M202	Washer	3
4	A139104L	Link, Drop, Disengagement, Cutter	1
5	AM369	Bush	2
6	KIT234	Kit, Link, Drag Inc Bushes	1
7	AM369	Bush	4
8	90022	Pin, Pivot	1
9	13016	Pin	2
10	90012	Connecting Link Adjuster Bracket	1
11	SH0825M	Screw	2
12	SH0616M	Screw	3
13	AM012	Height Adjustment Pawl Push Rod Spring	1
14	AM013Q2	Height Adjustment Pawl Push Rod Button	1
15	A108003Z	Rod, Adjust, Height, Cut	1
16	W041216	Washer	1
17	RP04	Pin, 'R'	1
18	AM040	Spring, Extension	3
19	A139008Z	Link, Adjust, Suspend, Front	1
20 & 21	A141010Z	Link, Float, Suspend, Rear Mowing Attachment 32" & 38"	1
22	SH1025M	Screw	2
23	W10MN	Washer	2
24	NM10NT	Nut	2
25	W10MN	Washer	2
26	SH1030M	Screw	1
27	NM10NT	Nut	2
28	W0620HD	Washer	1
29	CP3-220	Pin, Split	1
30	B1040M	Bolt	1
31	NFM10	Nut	1
32	NM8NT	Nut	1
33	WSM10X3.7X2.5	Washer, Lock, Spring	1
34	AM009	Hand Grip	1
35	SH0825M	Screw	1
36	W051218	Washer	1
37	A139020Z	Link, Adjust, Disengagement	1
38	A139018Z	Link, Disengagement	1
39	W10M	Washer	3
40	A135105L	Lever, Disengage, Cutter	1
41	RP01	Pin, 'R'	1
42	AM185BO	Cutter Lifting Link	1
43	RP03	Pin, 'R'	1
44	NF06CN	Nut	1
45	AM145	Spring, Extension, Weight Compensating	1
	A118039	Spring, Extension, Wt Compensating, 38" Mowing Attachment	1
46	KIT235	Kit, Link, Drag, Attachment, Mowing, Inc Bushes	1
47	AM230	Bush - Plastic	4

Model 9605G, A10506G, A11607L & A11707L:-

Cutter Attachment & Components

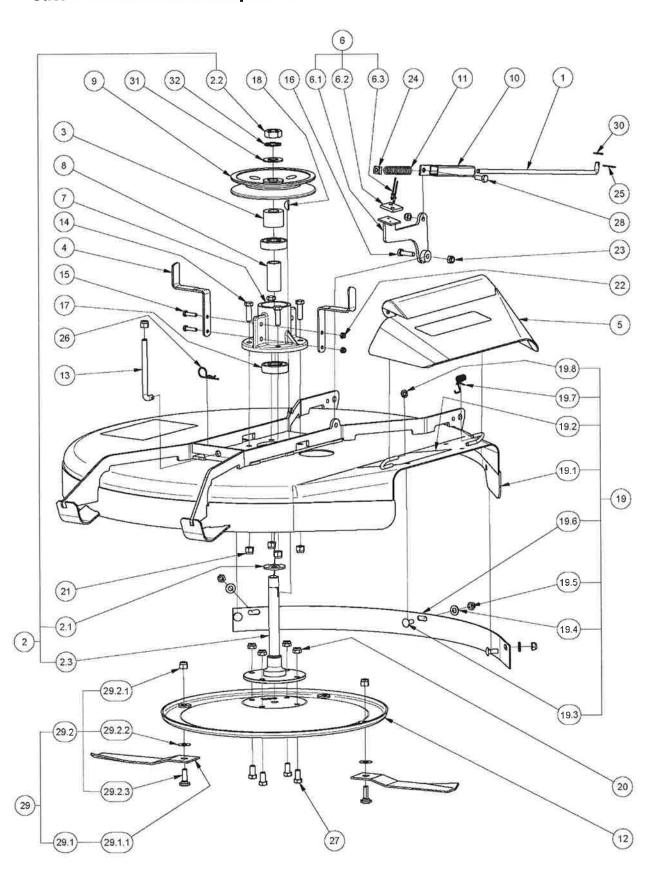


Model 9605G, A10506G, A11607L & A11707L:-

Cutter Attachment & Components

ITEM	PART NUMBER	DESCRIPTION	QTY
1	251301	Rod, Adj, Cutter Brake	1
2	89014	Spindle, Cutter	1
2.1	13128	Washer	1
2.2	NHM20X1.5T	Nut	1
3	89016	Spacer, Cutter Spindle	1
4	89019	Cutter Bearing Housing Belt Guide	2
5	AM259	Deflector	1
6	A100004	Lever, Brake, Cutter	1
6.2	AM033I95	Pad, Brake, Cutter	1
6.3	PR0205	Rivet	2
7	AM027	Cutter, Bearing, Housing	1
8	AM029	Sleeve, Spacer, Bearing	1
9	AM030	Cutter, Head, Pulley	1
10	AM034H0	Cutter Head Brake Adj Brkt	1
11	AM035	Spring, Compression, Cutter Brake	1
12	AM07604A	Disk, Cutter	1
13	AM185B0	Cutter Lifting Link	1
14	B0620C	Bolt	4
15	B0625M	Bolt	2
16	B0830M	Bolt	1
17	BB205215NS	Bearing, Ball	2
18	SK09	Key	1
19	KIT199	Kit, Housing, Cutter	1
19.2	DEC116	Decal, Danger, Mowing Attachment	2
19.3	BCHSNM8X20	Bolt, Cup, Sq Neck	3
19.4	W061216	Washer, Flat	3
19.5	NM8NT	Nut	3
19.6	89063	Deflector, Front, Cutter	1
19.7	A100003	Spring, Torsion, Deflector	1
19.8	AM274	Fastener, Push-on, Round	1
20	N06CN	Nut	4
21	NF06CN	Nut	5
22	NM6NT	Nut	2
23	NM8NT	Nut	2
24	NS05C	Nut, Square	1
25	RP01	Pin, 'R'	1
26	RP03	Pin, 'R'	1
27	SH0612C	Screw	4
28	SH0820M	Screw	1
29	SKIT54N	32" HD Stepped Blade/Bolt/Nut Set	1
29.1	SMB198S	Stepped Blade [Set]	1
29.2	SKIT01D1	Blade Bolt & Nut Set	2
30	W051218	Washer, Flat	1
31	W203902	Washer, Flat	1
32	WM20S	Washer, Lock	1

MODEL A11608F, A11708F, A13509G, A13510B, A13610B, A13709G, A13710B, A14010K, A14110K:- 32" CUTTER ATTACHMENT & COMPONENTS FOR CR9600U FROM S/NO 5361 & CR9602U FROM S/NO 8183

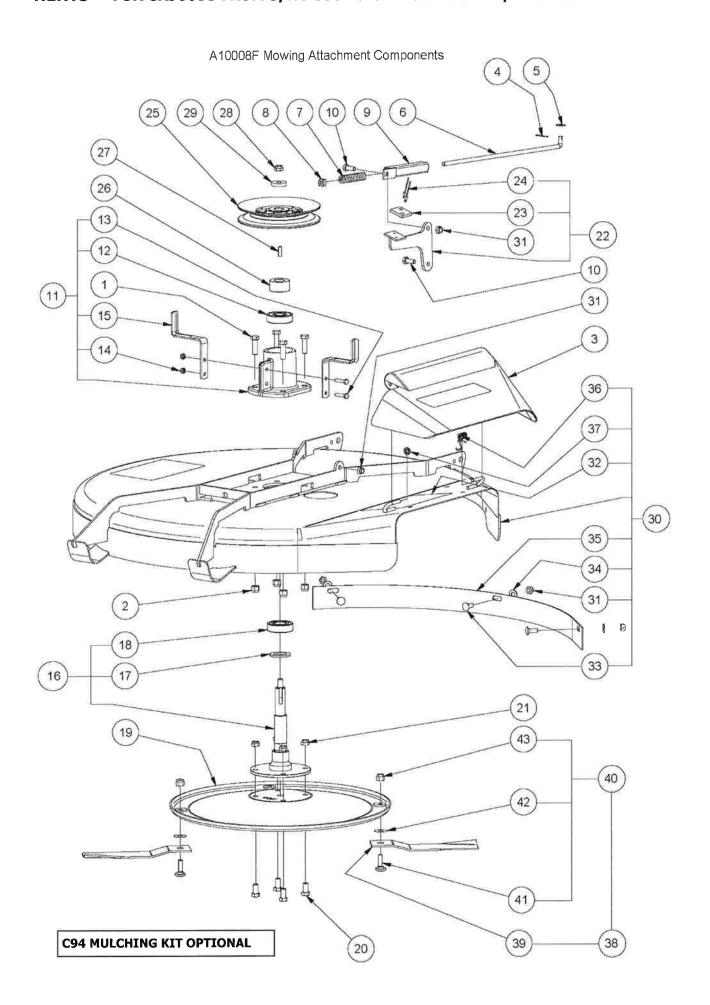


MODEL A11608F, A11708F, A13509G, A13510B, A13610B, A13709G, A13710B, A14010K, A14110K:- 32" CUTTER ATTACHMENT & COMPONENTS FOR CR9600U FROM S/NO 5361 & CR9602U FROM S/NO 8183

ITEM	PART NUMBER	DESCRIPTION	QTY
1	B0620C	Bolt	4
2	NF06CN	Nut	4
3	AM259	Deflector	1
4	RP01	Pin, 'R'	1
5	W051218	Washer	1
6	251301	Rod, Adj, Cutter Brake	1
7	AM035	Spring, Compression, Cutter Brake	1
8	NS05C	Nut, Square	1
9	AM034H0	Cutter Head Brake Adj Brkt	1
10	SH0820M	Screw	2
11	A100009	Sub-Assy, Housing, Bearing, Cutter	1
12	BB205215NS	Bearing, Ball	1
13	B0625M	Bolt	2
14	NM6N	Nut	2
15	A100013Z	Guide, Belt, Cutter	2
	A100027Z	Brace	2
16	A100007	Sub-Assy, Spindle	1
17	A100021Z	Washer	1
18	BB255215NN	Bearing, Ball	1
19	AM07604A	Disk, Cutter	1
20	SH0612C	Screw	4
21	N06CN	Nut	4
22	A100010	Lever, Brake, Cutter (cast iron)	1
	A100004	Lever, Brake, Cutter (aluminium)	1
23	AM033I95	Pad, Brake, Cutter	1
24	PR0205	Rivet	2
25	A100017	Pulley, Cutter (cast iron)	1
	A100029	Pulley, Cutter (aluminium)	1
26	A100023Z	Spacer, Sleeve	1
27	A100025	Key	1
28	NHCM10	Nut	1
29	13247	Washer	1
30	KIT199	Kit, Housing, Cutter	1
31	NM8NT	Nut	4
32	DEC116	Decal, Danger, Mowing Attachment	2
33	BCHSNM8X20	Bolt, Cup, Sq Neck	3
34	W061216	Washer	3
35	A100030L	Deflector, Front, Cutter	1
36	A100003	Spring, Torsion, Deflector	1
37	AM274	Fastener, Push-on	1
38	SKIT54N	32 " Stepped Blade/Bolt/Nut Set	1
	SKIT55N	32" Hi-Lift Blade/Bolt/Nut Set (Optional)	
39	SMB198S	Blade, Heavy Duty, Stepped	1
	SMB198A	Blade, Heavy Duty, Hi-Lift (Optional)	
40,41,42	SKIT01D1	Blade Bolt & Nut Set	1
43	NF06CN	Nut	1
	V13	Belt	1


MODEL A11908F, A13609G, A13709G, A13610B, A13710B, A14010K, A14110K:-38" CUTTER ATTACHMENT AUXILIARY COMPONENTS

MODEL A11808F 935mm (38") MOWING ATTACHMENT EXPLODED VIEW OF AUXILIARY COMPONENTS

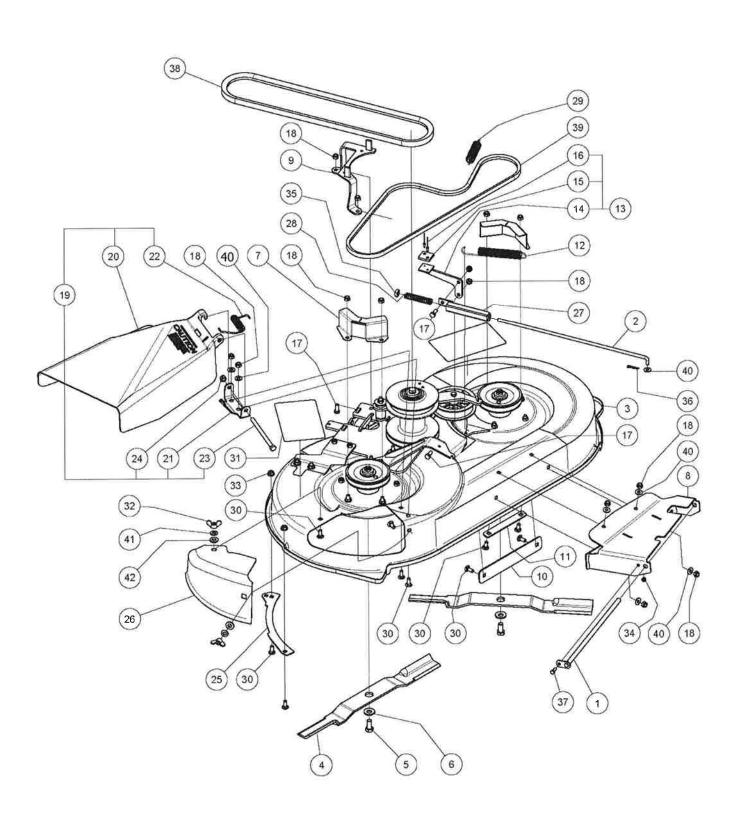

MODEL A11908F, A13609G, A13709G, A13610B, A13710B, A14010K, A14110K:-38" CUTTER ATTACHMENT AUXILIARY COMPONENTS

ITEM	PART NUMBER	DESCRIPTION	QTY
1	13016	Pin	1
2	90136	Cutter Brake Adjuster Rod	1
3	A118001L	Deck, Mower, Side (38")	1
4	A118040	Blade, Mower, Bar	2
5	SH1225M	Screw	2
6	WSCM12293.0	Washer, Spring, Conical	2
7	A118018L	Guard, Pulley	2
8	A118021L	Attachment, Link, Drag	1
9	A118024Z	Guide, Belt	1
10	A118034Z	Plate, Reinforcement, Front	1
11	A118036Z	Plate, Reinforcement, Upper	1
12	A119001	Spring, Extension, Cutter Belt	1
13	A118049	Sub-Assy, Arm, Brake, Cutter	1
15	AM033I95	Pad, Brake, Cutter	1
16	PR0205	Rivet	2
17	SH0820M	Screw	3
18	NM8NT	Nut	14
19		Sub-Assy, Deflector	1
20	A118016	Deflector, Discharge, 38"	1
21	A118026Z	Bracket, Pivot, Deflector	1
22	A118054	Spring, Torsion, Deflector	1
23	B0680C	Bolt	1
24	N06CN	Nut	1
25	A118058B	Guard, Blade	1
26	A118118B	Plug, Discharge, Mulch, 38"	1
27	AM034H0	Cutter Head Brake Adj Brkt	1
28	AM035	Spring, Compression, Cutter Brake	1
29	AM040	Spring, Extension, Cutter Belt	1
30	BCHSNM8X20	Bolt, Cup, Sq Neck	10
31	DEC116	Decal, Danger, Mowing Attachment	2
32	NW08M	Nut, Wing	2
33	NFM8	Nut, Hex, Flange	2
34	NM6NT	Nut	1
35	NS05C	Nut, Sqr	1
36	RP01	Pin, 'R'	1
37	SH0616M	Screw	1
38	V09	Belt, V	1
39	V48	Belt, V	1
40	W051218	Washer	6
41	W061216	Washer	2
42	W10102225	Washer	2

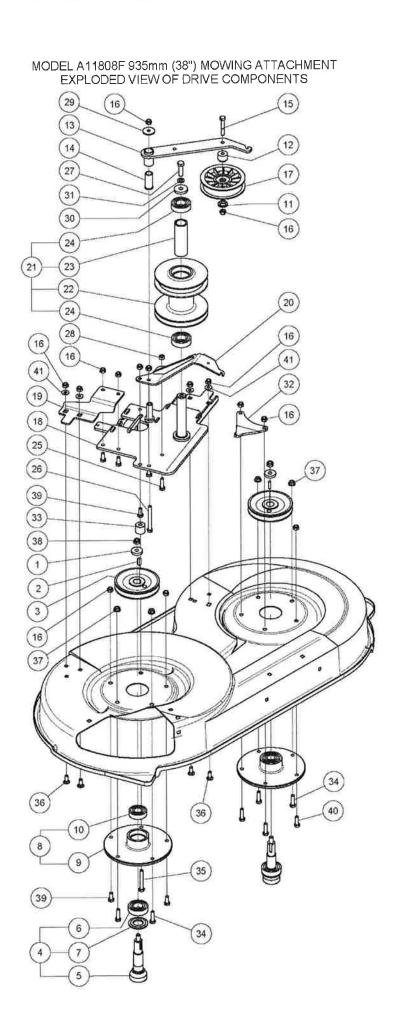


MODEL A11908F, A13609G, A13709G, A13610B, A13710B, A14010K, A14110K:-38" CUTTER ATTACHMENT DRIVE COMPONENTS

ITEM	PART NUMBER	DESCRIPTION	QTY
1	13247	Washer	2
2	A100025	Key	2
3	A118003	Pulley, Cutter	2
4	KIT240	Sub-Assy, Spindle (includes 2 shafts)	1
6	BB255215NN	Bearing, Ball	1
7	A118012Z	Shield, Bearing	1
8	A118014	Sub-Assy, Housing, Bearing, Cutter	2
10	BB204714NN	Bearing, Ball	1
11	14025	Boss, Idler, 17dia, 3high	1
12	15176	Boss, Idler, 17dia, 17high	1
13	A118028Z	Arm, Tensioner, Belt	1
14	AM017C1	Steering Shaft Bush With Collar	1
15	B0850M	Bolt	1
16	NM8NT	Nut	14
17	PIFBB02	Idler, Flat, Flg, Brg, Sealed	1
18	A118030B	Mount, Pulley, Transfer	1
19	A118032Z	Brace, Transfer Pulley Mount	1
20	A118038Z	Mount, Spring, Tensioner	1
21	A118053	Sub-Assy, Pulley, Transfer	1
22		Pulley, Transfer	1
23	A118041	Sleeve, Spacer, Bearing	1
24	BB255215NN	Bearing, Ball	2
25	B0830M	Bolt	1
26	B0875M	Bolt	1
27	B1035M	Bolt	1
28	NHM8	Nut	1
29	W052003	Washer	1
30	W103506	Washer	1
31	WS103.52.2	Washer, Lock, Spring	1
32	A118051Z	Bracket, Mount, Spring	1
33	A118057Z	Spacer	1
34	B0830M	Bolt	6
35	B0860M	Bolt	1
36	BCHSNM8X20	Bolt, Cup, Sq Neck	4
37	NFM8	Nut	4
38	NHCM10	Nut	2
39	SH0820M	Screw	4
40	SH0825M	Screw	1
41	W051218	Washer	5


Ģ.	Mod 1 2 3	el 9605G & A10 PART NUMBER DEC085 DEC116 DEC127	Model 9605G & A10506G:- DECALSITEM PART NUMBER DESCRIPTION1 DEC085 Decal, Warning, Gasoline2 DEC116 Decal, Danger, Mowing Attachment3 DEC127 Decal, Warning, Mount This Side Only
	4 10	DEC171 DEC172	Decal, Lawn Boss Bonnet Decal, Lawn Boss, 13 Hp
	9 /	DEC211 13094 DEC199	Decal,Lawn Boss, 17HP Pad, Non-Skid, Running Board Decal, Guard Infill, Lawnboss L/H
	8 6 11	DEC200 DEC173 DEC125	Decal, Guard Infill, Lawnboss R/H Decal, Park Brake, Lawn Boss Cutter Disenaage
(12 13	DEC135	Decal, Caution, Hot Muffler Decal, Drive Pedal
(a) (b)	14 15 16	DEC169 DEC170 89066	Decal, Lawn Boss, Console Top Decal, Lawn Boss Console, Lower Non-Siip, Drive Pedal
(E) (E)	17	89067 DEC208	Non-Slip Brake Pedal Decal, Lawn Boss, Proudly Australian

QTY

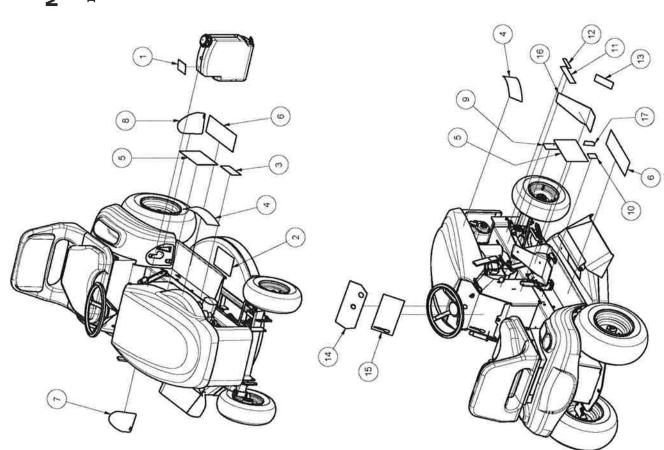


Model A11607L, A11707L, A11608F, A11708F, A11908F, A13509G, A13609G, A13709G, A13510B, A13610B, A13710B:-DECALS

ITEM	PART NUMBER	DESCRIPTION	ŲΤΥ
Ţ	13094	Pad, Non-Skid, Running Board	2
2	DEC08505K	Decal, Warning, Fuel	H
33	8906608A	Non-Skid, Pedal, Drive	1
4	29067	Non-Slip, Brake Pedal	Н
2	DEC116	Decal, Danger, Mowing Attachment	2
9	DEC208	Decal, Lawn Boss, Proudly Australian	П
7	DEC171	Decal, Lawn Boss Bonnet	2
8	DEC124	Decal, Brake	П
6	DEC125	Cutter Disengage	=1
10	DEC127	Mount This Side Only	
11	DEC135	Decal, Caution, Hot Muffler	-
12	DEC136	Decal, Drive Pedal	Н
13	DEC169	Decal, Lawn Boss, Console Top	П
	DEC248	Decal, Lawn Boss, Console Top	П
14	DEC170	Decal, Lawn Boss Console, Lower	Н
	DEC245	Decal, Lawn Boss Dash	П
15	DEC172	Decal, Lawn Boss, 13 Hp	2
	DEC211	Decal, Lawn Boss, 17 Hp	2
	DEC226	Decal, Lawn Boss, 15.5 Hp	2
	DEC227	Decal, Lawn Boss, 16 Hp	2
16	DEC199	Decal, Guard Infill, Lawn Boss L/H	П
17	DEC200	Decal, Guard Infill, Lawn Boss R/H	1
18	DEC224	Decal, Park Brake, Lawn Boss	-

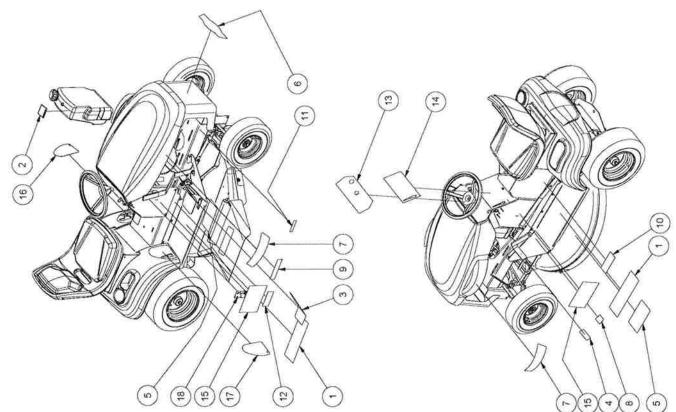

ITEM	PART NUMBER	DESCRIPTION
1	13094	Pad, Non-Skid, Running Board
2	DEC08505K	Decal, Warning, Fuel
м	8906608A	Non-Skid, Pedal, Drive
4	95067	Non-Slip, Brake Pedal
5	DEC116	Decal, Danger, Mowing Attachment
9	DEC208	Decal, Lawn Boss, Proudly Australian
7	DEC171	Decal, Lawn Boss Bonnet
8	DEC124	Decal, Brake
6	DEC125	Cutter Disengage
10	DEC127	Mount This Side Only
11	DEC135	Decal, Caution, Hot Muffler
12	DEC136	Decal, Drive Pedal
13	DEC248	Decal, Lawn Boss, Console Top
14	DEC245	Decal, Lawn Boss, Dash
15	DEC172	Decal, Lawn Boss, 13 Hp
	DEC227	Decal, Lawn Boss, 16 Hp
	DEC258	Decal, Lawn Boss, 16.5 Hp
	DEC259	Decal, Lawn Boss, 18.5 Hp
16	DEC199	Decal, Guard Infill, Lawn Boss L/H
17	DEC200	Decal, Guard Infill, Lawn Boss R/H
18	DEC224	Decal, Park Brake, Lawn Boss

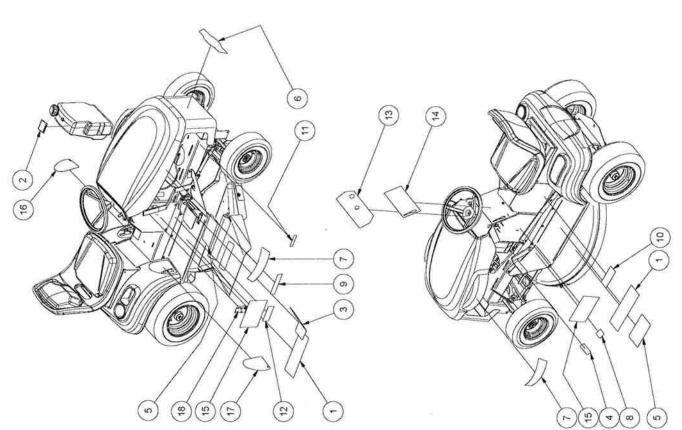

COX INDUSTRIES WARRANTY POLICY

NEW MOWER:

COX INDUSTRIES warrants in respect of each new 1) ride-on mower sold, that for a period of two (2) years equipment while unit repairs are in progress. (Domestic/Consumer use**) or six (6) months 2) Commercial/Contractors/Hire use***) to the original communication expenses. purchaser from the date of purchase, COX 3) INDUSTRIES or an authorised dealer will repair or transportation of failed unit or any part thereof. replace free of charge any ride-on mower parts found 4) normal use and operating conditions provided that:

- used, operated, maintained and regularly serviced as to the COX-INDUSTRIES maintenance schedule. per the maintenance schedule during the warranty 5)
- authorised COX INDUSTRIES Dealer.
- "Domestic/Consumer use" means the defects. personal residential household (property) used by the 6) original retail purchaser.
- *** "Commercial use" means all other uses, approved by COX INDUSTRIES. including income producing, rental, schools, 7) government departments and charity operators.

PARTS INSTALLED DURING NEW MOWER 8) **WARRANTY PERIOD:**

Warranty coverage for parts installed during new 9) mower warranty period shall consist of the remainder machine after it is known to be defective. of the new mower warranty period or ninety (90) 10) Damage caused by racing and similar activities days, which ever is greater, provided the installation or by overloading. is performed by an authorised COX INDUSTRIES Dealer.

ENGINE & TRANSAXLE:

The engine or transaxle in a new Mower is covered to the extent exclusion is permitted by law. by the manufacturer of that specific engine or transaxle, not by COX INDUSTRIES. Refer to the engine To the extent that it is not prevented from doing so owners manual for engine details.

BATTERY:

The battery in a new mower is covered for a period replace faulty materials or parts; or for any loss, of twelve (12) months by the battery supplier to the damage or original purchaser from the date of purchase.

WARRANTY SERVICE:

In the event of a need for warranty service contact workmanship or otherwise your local authorised COX INDUSTRIES Dealer.

Date of purchase of machine must be given before The careless or improper use of a machine of this warranty claim will be accepted for processing.

WARRANTY REGISTRATION:

The warranty registration card must be completed by either to the operator, to the owner or to any person the dealer with the customer at the time of purchase directly or indirectly or to property if such accident is and returned to COX INDUSTRIES or an authorised caused by circumstances arising other than by the Dealer within 14 days.

WARRANTY EXCLUSIONS:

- The rental of another machine or related
- Telephone, facsimile expenses or other related
- Transportation and Insurance charges during
- The labour, parts, mechanical adjustments or to be defective in materials or workmanship under lubricant costs which, in the judgement of COX INDUSTRIES or their authorised dealer, are made or 1. The mower has been properly and reasonably should be made as standard maintenance according
- The replacement of normal maintenance parts such as (mower discs, blades, bolts and nuts, vee 2. The replacement or repair is performed by an belts and bearings) made in connection with normal maintenance services as opposed to manufacturing
 - Any defect caused by alteration, modification, fitment of a non-genuine part or attachment not
 - Any defect caused by misuse, negligence, accidents or failure to carry out proper maintenance procedures.
 - Any defect caused by work carried out by other than an authorised dealer.
 - Damage caused by continued operation of the

All implied warranties (save those preserved by stature) are excluded. Liability for consequential damages under any and all warranties are excluded

from statute, the manufacturer will not accept liability for costs of labour, postage, cartage or delivery to accident directly, indirectly, consequently suffered by the purchaser, operator or any other person or property as a result of such faults whether due to defective materials or

type can be dangerous. The manufacturer or selling agent does not accept responsibility for accident negligence or default of COX INDUSTRIES.



Cox Industries (Australia) Pty Ltd

70 Landseer Street
Acacia Ridge Qld 4110
Australia
PH 07 3323 2222 FAX 07 3344 6233

Web Site Address: www.coxmowers.com.au

Email: sales@coxmowers.com.au