

RIDE-ON MOWERS

MODEL	SALES CODE	Y	EAR OF MANUFACTURE
A12208G	C1332B	13hp,13.5hp B&S 805mm (32") Cut	2008—2009
A12308G	C1332HON	13hp Honda 805mm (32") Cut	2008—2009
	C1638HON	16hp Honda (38") Cut	2008-2009
A12408G	C1532B	15.5hp B&S 805mm (32") Cut	2008—2009
	C1732B	17hp B&S 805mm (32") Cut	2008—2009
A12508L	C1532BRB	15.5hp B&S 805mm (32") Rear Bage	ger 2008—2009
A13109G	C1332B	13.5hp B&S 805mm (32") Cut	2009—2010
A13209G	C1532B	15.5hp B&S 805mm (32") Cut	2009—2010
	C1632B	16.5hp B&S 805mm (32") Cut	2010
	C1732B	17.5hp B&S 805mm (32") Cut	2009—2010
	C1832B	18.5hp B&S 805mm (32") Cut	2010
A13309G	C1332HON	13hp Honda 805mm (32") Cut	2009—2010
	C1638HON	16hp Honda (38") Cut	2009—2010
A13409G	C1532BRB	15.5hp B&S 805mm (32") Rear Bage	ger 2009—2010
	C1632BRB	16.5hp B&S 805mm (32") Rear Bage	ger 2010
A14310K	C1632BS	16.5hp B&S 805mm (32") Cut	2010 —
	C1832BS	18.5hp B&S 805mm (32") Cut	2010 —
A14410K	C1632BRBS	16.5hp B&S 805mm (32") Rear Bag	ger 2010—
A14510K	C1332HS	13hp Honda 805mm (32") Cut	2010—
	C1638HS	16hp Honda (38") Cut	2010—



OWNERS INFORMATION

COX SERIAL NO: Located on Label inside Transmission Housing B&S ENGINE MODEL NO: Located on Engine refer Engine Owners Manual HONDA ENGINE MODEL NO: Located on Engine refer Engine Owners Manual DATE OF PURCHASE: OWNERS NAME: ADDRESS: TOWN/CITY: STATE: AUTHORISED COX DEALER/ DISTRIBUTOR:	
B&S ENGINE MODEL NO: TYPE: CODE: Located on Engine refer Engine Owners Manual HONDA ENGINE MODEL NO: SERIAL NO: Located on Engine refer Engine Owners Manual DATE OF PURCHASE: OWNERS NAME: STATE:	
Located on Engine refer Engine Owners Manual HONDA ENGINE MODEL NO: Located on Engine refer Engine Owners Manual DATE OF PURCHASE: OWNERS NAME: ADDRESS: TOWN/CITY: STATE: AUTHORISED COX DEALER/	
ADDRESS: TOWN/CITY: STATE: AUTHORISED COX DEALER/	
ADDRESS: TOWN/CITY: STATE: AUTHORISED COX DEALER/	_
AUTHORISED COX DEALER/	=: -
•	
	<u>-</u>
ADDRESS:	-
TOWN/CITY: STATE:	

PRE DELIVERY CHECK LIST

Check parts ☐ Assemble ☐ Service ☐ Instruction ☐


ALWAYS KEEP THIS MANUAL IN A SAFE PLACE.

SAFETY INSTRUCTIONS

- Read, understand, & follow all instructions in the Owner/Operators manual.
- Know the controls and how to stop the engine quickly in an emergency.
- Allow only responsible adults, who are familiar with the instructions in this manual, to operate the machine.
- Clear the area to be mowed of loose objects such as sticks, stones, bones, wire, toys, debris, etc., which could be picked up and thrown by the blades.
- DO NOT mow whilst people, especially children, or pets are in the mowing area.
- DO NOT mow either direction on slopes beyond 15 degrees, (1 in 3.75), (27%).
- Exercise extreme caution on slopes.
- Reduce speed on slopes and in sharp turns to prevent overturning or loss of control.
- Start or stop slowly when on slopes.
- Mow up and down slopes, not across the slope.
- Stay alert for holes or bumps in the terrain and other hidden hazards.
- · Use care when pulling loads
 - a] Use only approved hitch point;
 - b] limit loads to those you can safely control;
 - c] Do not turn sharply;
 - d] use care when backing up.
- Watch out for traffic when crossing or operating the mower near roadways.
- Stop the blades rotating before crossing surfaces other than grass.
- When using attachments, never direct discharge of material toward bystanders nor allow anyone near the machine while it is in operation.
- Before leaving the operators position
 - al Disengage all clutches and secure cutting units;
 - b] Return drive pedal to neutral position and set the parking brake;
 - c] Stop the engine and remove the key.
- Disengage drive to attachments and stop enginea] Before refueling.
 - b] Before removing grass-catcher;
 - c] Before clearing blockages from chute;
 - d] Before checking, cleaning or working on the mower:
 - e] After striking a foreign object (check the mower for damage and make repairs before restarting and operating the equipment);
 - f] If machine starts to vibrate abnormally (check immediately).
- Disengage drive to attachments when transporting or not in use.
- A mower operator should be in good physical and mental health and not under the influence of alcohol or any drug which might impair vision, co-ordination or judgment.

- Never mow while barefoot or wearing open sandals or thongs. Wear long trousers and heavy shoes.
- It is advisable to wear suitable eye protection when operating a mower.
- Mow only in daylight or good artificial light.
- Before using, always visually inspect to see that blades, bolts and cutter assembly are not worn or damaged. Replace worn or damaged blades and bolts in sets to preserve balance.
- Check all nuts, bolts, and screws often; always be sure the mower is in safe operating condition.
- Keep safety devices (guards and switches) in place and in working order.
- Never use the mower unless the grass catcher, or guards provided by the manufacturer, are in position.
- Ensure any replacement parts used comply with the original manufacture's recommendations and specifications.
- Replace worn or faulty silencers.
- Keep machine free of grass, leaves or other debris, excessive oil, grease, or spilt fuel. These can be a fire hazard.
- Refuel outdoors only. Do not smoke while fueling engine. Never remove the cap of the fuel tank or add petrol while the engine is running or the engine is hot. Remove fuel cap slowly to relieve any tank pressure. If fuel is spilled, do not attempt to start the engine but move machine away from the area of the spill and avoid creating any source of ignition until fuel vapors have dissipated.
- Check for fuel leaks while refueling, before and while using the mower. If a fuel leak is found, do not start or run the engine until the fuel leak is fixed and spilled fuel is wiped away.
- Do not operate engine in a confined space where exhaust fumes (carbon monoxide) can collect.
- Always mount the mower from the left or the opposite side to the discharge chute.
- Start the engine carefully with the cutting means disengaged.
- Do not over-speed the engine or alter governor settings. Excessive speed is dangerous and shortens mower life.
- Stop the engine whenever you leave the mower, even for a moment.
- Store the mower in a well-ventilated room away from naked flames such as may be found in hot water heaters.
- Do not lend or sell the mower, without the owners/ operators Manual.

Loose Parts A12808L Rear Bagger

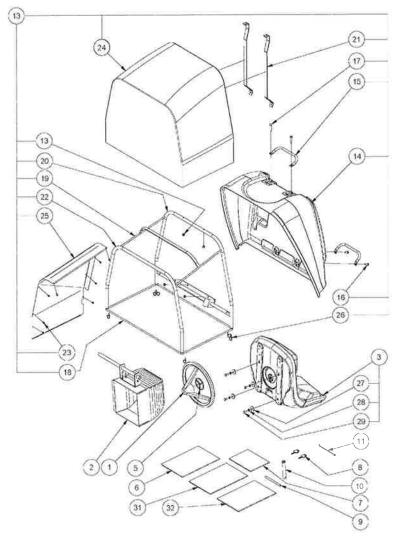

ITEM	PART NUMBER	DESCRIPTION	QTY
1	SW13	Steering Wheel	1
2	A128060	Deflector, Discharge, Rear, 805(32")	1
3	A122110	Seat	1
4	95112	Cushion, Bottom, Seat, Medium, Red	1
5		Steering Wheel, Cover	1
6		Manual, Owner, Ride-On Mower, Stockman 3	1
7		Warranty Card-Reply Paid	1
8	90134	Key, Ignition Switch, Vinyl Covered, Steel	2
9	AM007	Bar, Tommy, 9.5x150, Znpl	1
10	AM295	Spanner, Tube, Spark Plug, 5/8"Af, Znpl	1
11	13127	Hook, Spring Pull	1
12	A129000	Sub-Assy, Catcher, Grass, Bag, Rear, 2001	1
13	NM8NT	Nut, Hex, Nyloc, Thin, M 8, Pc6, Znpl	4
14	A102003	Cover, Catcher, Plastic, Red	1
15	14154	Handle, Front, Grass Catcher, Black	2
16	SH0825M	Screw, Hex, M 8x 20, Pc8.8, Znpl	2
17	B0840M	Bolt, Hex, M8x40, Pc8, Znpl	2
18	13312	Front, Catcher Frame, 150l	1
19	A129018	Frame, Rear, Black	1
20	A129005B	Frame, Upper, 165I, Black	1
21	A129021B	Bar, Tunnel, Top, Black	2
22	A129002B	Frame, Lower, 165I, Black	1
23	ST0808D	Screw, Hex Washer, Seal, Drill, #8-18x12, Gal	8
24	A129014	Bag, Catcher, Grass, Rear, 165l	1
25	A129061B	Deflector, Inner, Side, Black	1
26	CABLETIES	Cable Ties 100mm X 2.5 Black	6
27	W052003	Washer, Flat, Black, 5/16"X1-1/4"X3, Znpl	4
28	WS050216	Washer, Lock, Spring, 5/16"X1/8"X1/16", Znpl	4
29	SH0816M	Screw, Hex, M 8x 16, Pc8.8, Znpl	4
30	PD006	Instruct, Pre-Delivery	1
31		Manual, Engine, Owner/Operator	1

PRE-DELIVERY INSTRUCTIONS

INTRODUCTION:

The purpose of this procedure is to ensure the dealer/distributor has assembled & made the necessary checks, & adjustments, before the mower is operational, and instructed the owner in its safe operation & maintenance. This procedure begins upon receiving the crated mower and is finalised once the mower has been either sold or leaves the dealer/distributors premises. This is the minimum amount of work required, however it should not be limited to only the areas detailed in this procedure.

RESPONSIBILITY:

It is the responsibility of the dealer/distributors to ensure that before a mower is delivered to a customer, it is in perfect operational condition.

PROCEDURE:

CHECK SHIPPING CRATE & CONTENTS FOR DAMAGE

UNCRATE THE MOWER

CHECK COMPONENTS SUPPLIED IN SEAT PROTECTION BAG

Engine owners Manual	1
Owner/Operator Manual	1
Tube Spanner (AM006C1)	1
Tommy Bar (AM007)	1
Ignition Keys (AM015)	2
Spark plug tube Spanner	
(AM295 B&S or AM005G0 16HP Honda)	1
Spark plug Spanner 13HP Honda	
Steering Wheel (SW13)	1
Roll Pin (DP10)	1
Drive cone clearance Gauges (13126)	2
Seat Springs (13060)	2
Screws M 8X 20	2
Seat spring Washers 5/16"	2
Nuts M 8 Nyloc	2
Warranty Card	1
Pre-delivery instruction Sheet	1


REMOVE SEAT PROTECTION BAG

Remove the four screws, lock washers and plain washers securing the seat to the seat mount & remove the plastic bag from the seat. Install the four screws, spring washers, and plain washers, through the slots in the seat mount and adjusted the seat to the desired position using the slots provided, & tighten screws.

ASSEMBLE STEERING WHEEL TO MOWER

Roll Pin Type—To attach the steering wheel, align the hole in the steering wheel boss to the hole in the steering shaft and use a hammer and suitable punch to drive the DP10 roll pin in, through the hole in the steering shaft cover into the steering wheel and shaft. Ensure that the pin is situated centrally in the steering wheel boss and that the steering is free to turn.

Keyed Type— Remove tape attaching woodruff key to steering shaft. Remove the screw & washers attached to the steering shaft. Lubricate taper on steering shaft with grease or anti-seize. Place steering wheel with keyway aligned with woodruff key on shaft.

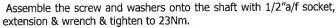

Press the steering wheel center cover into place using hand pressure only.

ASSEMBLE SEAT MOUNT & SEAT SPRINGS TO MOWER

Install the two seat springs using the screws, washers, nuts, to the brackets at the top rear of the Transmission Housing, and tighten the screws, and nuts.

Install the Seat & Mounting to the Transmission Housing using the Screws and Nuts.

CHECK TYRE PRESSURE

Before operation ensure that all tyre pressures are equal. The recommended pressure is 140 kpa (20 P.S.I.).

CHECK ENGINE OIL

Before operation ensure that engine oil level is to the full mark on the dipstick. (Refer engine owners manual for procedure & if some oil needs to be added refer Engine owners Manual for Correct Grade).

CHECK FUEL

Ensure the fuel tap at the bottom left side of fuel tank is turned to the on position before attempting to start engine. (Use unleaded fuel only).

Turn off fuel tap after use.

CHECK CLUTCH PLATE ADJUSTMENT

Engage and disengage the cutter disengage lever a few times and leave in the engaged position, this will centre the clutch arm assembly in the neutral position. Loosen the four square head set screws on the clutch plates using tube spanner (AM006C1) and tommy bar (AM007). Insert the clearance gauges supplied, one between the forward clutch plate and cone and the other between the reverse clutch plate and cone and hook them onto the intershaft. Slide both clutch plates against the clearance gauges and drive cone, tighten the set screws firmly onto the flat on the intershaft. Remove gauges.

CHECK SAFETY SWITCH OPERATION

Foot Switch - With cutter disengage lever in disengaged position, attempt to start the engine without depressing the foot switch. Engine should not start.

Disengagement Switch - While sitting on seat with foot on foot switch and cutter lever in engaged position, attempt to start the engine. Engine should not start.


Start Switch


With Cutter Lever in disengaged position & foot switch depressed start engine.


Seat Switch - While sitting on seat with engine running engage cutter and lift weight from seat. Engine should cut out.

CHECK CUTTER BELT DISENGAGEMENT

Ensure that when the cutter belt is in the disengaged position that the belt does not overlap when squeezed together, if this occurs adjust the cutter engage lever until correct disengagement is achieved.

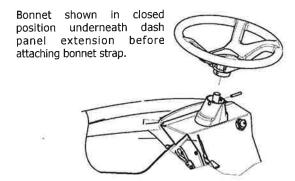


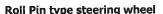

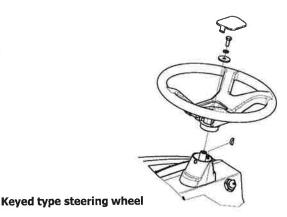

A12808L 16.5HP Rear Bagger Catcher Assembly



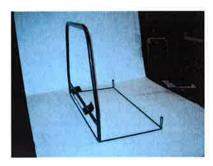


















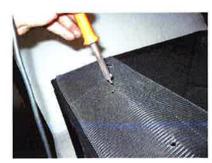









OPERATING INSTRUCTIONS

IMPORTANT

RECOMMENDED FUEL

Unleaded fuel is recommended by all manufacturers of engines fitted to Cox products.

DRIVE PRESSURE

Ensure when applying pressure to the drive pedal the wheels start rotating, failure to adhere to this will result in clutch plate on the rear of the drive pedal for reverse. The amount of and clutch cone damage.

SAFETY SWITCHES

operating correctly. Do not operate machine with faulty, prolonged period, you may experience minor clutch fade, missing or damaged safety switches.

STARTING MACHINE

When starting machine, place right heel on foot switch located on rear of footrest. Ensure that cutter is disengaged, otherwise electric starter motor will not engage. If engine is cold move engine speed control to choke start position and return to desired engine speed setting when engine starts. attempt to operate engine with engine speed control lever in Owing to the heel and toe type action of the drive pedal, it is choke position. (Note electric start engines fitted with recoil can be manually started with cutter disengaged and ignition on).

BLADE WARNING

Do not use mowing attachment with broken or bent blades, damaged or worn bolts and nuts or damaged cutter disc, otherwise damage and premature wear will result from vibration. Replace blades, bolts and nuts only in pairs to maintain correct balance. Recommended blade nut torque is 36-40Nm. Do not over tighten.

Keep both feet and hands clear of the mowing attachment at all times while attempting to start or operate the machine.

WARNING

DO NOT OPERATE WITHOUT MOWING ATTACHMENT **DEFLECTOR FITTED & DOWN OR DO NOT OPERATE** WITHOUT GRASS CATCHER FITTED.

Safety footwear is recommended when operating machine. Mount and dismount only from left hand side of machine. Reference to left or right hand side of machine is determined by sitting in the operating position on the machine.

Ensure machine has park brake engaged when attempting to start engine.

Never allow engine revs to exceed more than 3600 RPM.

TO OPERATE

BEFORE STARTING/STOPPING:

See Engine Maintenance/Instruction Sheet. When stopping engine, disengage cutter, return engine speed control to slow position and switch off

DISENGAGING MOWING ATTACHMENT:

The cutter disengaging lever is situated on the right hand side by the steering column. Before starting, disengage mowing attachment by pulling lever fully back towards the operator.

For safety it is advisable at all times, other than when mowing, that the mowing attachment be kept in the disengaged position.

TO DRIVE FORWARD/REVERSE:

Engine speed is regulated by the engine speed control, set engine speed control to desired engine power. Press down on the forward section of the drive pedal for forward movement, pressure can be used to control the ground speed, especially in heavier conditions. When operating the mower on slopes Before operating machine, ensure that all safety switches are greater than 10 degrees but less than 15 degrees for a should this occur, vary your mowing style eg: mow around some flat areas, then the slope followed by the flat area again. This will allow the drive to cool before travelling up the slope

> N.B. Ensure that when pressure is applied to the drive pedal wheels are rotating or damage will occur to clutch plates.

Do not MANOEUVRING:

possible to take the machine straight from forward to reverse and vice versa. This instant forward and reverse operation makes the machine very manoeuvrable and the sharpest turns can be negotiated easily and quickly.

TO BRAKE (WITH ENGINE RUNNING):

The drive pedal may be used to stop the machine. If travelling forward push the pedal into reverse until machine stops, then bring the pedal back to neutral position or vice versa if travelling in reverse. Should a drive failure occur during operation use the brake pedal situated on the left hand side and forward of where your foot would rest during normal operation.

TO BRAKE (WITH ENGINE STOPPED):

Use foot brake pedal only.

Damage to drive cone will occur if drive pedal is used to brake the machine with the engine stopped.

PARKING AND TRANSPORTATION BRAKE:

Depress the lever protruding out of the left hand mudguard downward and shift the lever to the left to engage the park brake. Depress and shift to the right to release.

Do not engage parking brake unless the machine has completely stopped.

Do not attempt to drive with park brake engaged damage will occur to clutch plates and or large drive sprockets.

CUTTING HEIGHT ADJUSTMENT:

The height adjustment lever is located on the left hand side of the machine and may be altered to suit varying conditions, while the machine is in motion.

NOTE: When mowing slopes, keep drive pedal in forward or reverse, depending on direction of travel. The low gearing will prevent it from picking up excessive speed. If very steep it may be necessary to slow engine speed slightly and /or, apply light drive pedal pressure to the opposite drive direction. i.e. move drive pedal into reverse when going forward down slope or into forward when reversing down slope.

AVOID HOLDING MACHINE STATIONARY ON SLOPES USING DRIVE PEDAL WITH ENGINE RUNNING AS DAMAGE WILL OCCUR TO CLUTCH PLATES.

MAINTENANCE INSTRUCTIONS

carried out.

stopped rotating.

battery at negative terminal, to prevent accidental starting.

1. OIL CHANGING & FILTER REPLACEMENT (ENGINE): See Engine

SERVICING ENGINE AIR CLEANER FOAM PRE-CLEANER— See engine owners manual for correct method to check and service engine air deaner foam pre-cleaner.

- 2. LUBRICATION OF MACHINE: carried out every 25 hours of operation or once a month, whichever occurs first. More frequently when operated under adverse conditions.
- mechanism, pivot bolt and linkages on clutch arm and clutch pedal.
- **C. GREASE POINTS:** Grease nipples are located on top of the front wheel stub axle.

Under no circumstances allow grease or oil to come into contact with 12. the Drive Cone or Clutch Plates. Should this problem occur, clean off immediately with petrol whilst surface areas are cool and allow to dry before operating machine.

- Discharge Only, lift deflector and height adjustment control to highest position. If necessary simply remove the blade bolt and nut using a suitable spanner and replace worn parts.
- 4. ENGINE TO CLUTCH VEE BELT ADJUSTMENT: Loosen the four may cause damage to tyres and/or tubes. engine mounting bolts. Move engine forward and adjust belt firmly. Do not over tension belt. re-tighten bolts. Check belt tension at machine service period (25hrs) To make up for this loss, a boosting charge should be given once a or more frequently under heavy mowing conditions.
- 5. CLUTCH TO CUTTER VEE BELT ADJUSTMENT: Tension is automatically adjusted by the belt tensioning springs.
- **6. CUTTER HEIGHT ADJUSTMENT:** If the Mowing Attachment can not be positioned to give a satisfactory grass cut height using the available notches on the chassis the adjustable link can be used to raise the Mowing Attachment to the desired height. Position the mower on a smooth level surface and engage the mowing attachment, lock the park brake on, and lower the Mowing Attachment to the notch above the desired cut height. Place equal height spacers of the mowing attachments weight and lower the Mowing Attachment onto them. Loosen the 2 Screws located together on the front of the Rear Link located below the front of the left foot rest. Push the Rear Link rearwards until it stops and retighten the 2 screws. Adjust the rear lifting link located on the middle rear of the mowing attachment by tightening the nut until it just lifts the rear oif the mowing attachment park brake, install wheel and lower machine. of the spacers. Lift the Mowing attachment off the spacers and remove the spacers and check the cut height is as desired and the deck is level to slightly higher (3-5 mm) at the back. Adjust height again if required.
- 7. CUTTER BRAKE ADJUSTMENT: With disengagement handle in engaged position and mowing attachment in low cut, normal clearance approximately 3mm (1/8"). To adjust clearance, remove 'R' pin from brake pull rod, adjust to give required clearance, replace brake pull rod and 'R' pin. Check operation after adjustment.
- necessary to adjust the clutch plates as the clutch cone wears. Carry out this operation, with engine off and cutter in the engaged position. Engage and disengage the cutter lever a few times and leave in the of intended operators read safety section of this manual thoroughly. engaged position, this will centre the clutch arm assembly into the neutral position. Loosen the four square head set screws on the clutch plates 1/4" UNC BOLT/NUT using tube spanner (AM006C1) and tommy bar (AM007). Insert the clearance gauges supplied, one between the forward dutch plate and cone 3/8" UNC BOLT/NUT and the other between the reverse dutch plate and cone and hook them 7/16" UNF BOLT onto the intershaft. Slide both dutch plates against the clearance gauges 6mm BOLT/NUT and dutch cone, tighten the set screws firmly onto the flat on the 20mm NUT intershaft. Remove gauges.

It is the owner's responsibility to ensure that all-periodical 9. CUTTER DISENGAGING ADJUSTMENT: With the engine switched checks, necessary adjustments, services and repairs are off, engage the mowing attachment, then fully lower. Place a straight edge vertically against the front of the front axle beam and in line with the disengagement lever. Measure the distance between the straight STOP ENGINE - Never attempt any maintenance with the engine edge and the 8mm dia pin fitted with the small 'R' pin for the threaded running, remove spark plug lead and ensure the blades have adjuster. Disengage mowing attachment and using the same method, check the new distance. The difference should be 20 - 22mm. Engage Before servicing, disconnect spark plug wire and ground it, disconnect mowing attachment, remove 'R' pin and adjust threaded adjuster accordingly. Install 'R' pin and re-check measurement. Due to normal wear in clutch to cutter vee belt, the cutter disengagement lever will Maintenance/Instructions Sheet and carry out as per Engine Manufacturers move lower and touch the foot rest. When this occurs the amount of travel will need to be re-adjusted. If a new vee belt is installed the above settings will apply.

> Start engine and raise cutter to full height stop, cutter belt should not engage. If this occurs switch off engine, engage cutter then screw Lubrication of machine must be adjuster out 1-2 turns then retest.

- 10. DRIVE CHAIN: Machines are fitted with automatic chain adjusters. No adjustment is required. Replace chain when chain has **OILING:** A few drops of oil should be placed at the following sagged enough to expose half the depth of the teeth on the bottom of points: Steering linkage, disengaging linkages, height adjustment the large sprocket. Failure to replace worn chain will cause premature wear of sprockets.
 - CHAIN: Use only chain lube for lubrication of the drive and 11. TO ADJUST STEERING CHAIN: Adjust chain by loosening the four bolts which hold the steering idler shaft mounting brackets (AM255) in position, slide forward to tension chain then retighten bolts.
- TO REMOVE MOWING ATTACHMENT: Fully lower mowing attachment and engage, remove weight compensating spring, remove 'R' pin from rear lifting link and disconnect, remove 'R' pin from cutter brake adjusting rod and disconnect, disengage mowing attachment, 3. TO CHECK BLADES: Stop engine. Remove spark plug lead. Side remove belt, remove front pivot pin, Turn steering wheel to the left to slide out mowing attachment. To refit, reverse the above.
 - 13. TYRE PRESSURE: 140 Kpa (20.P.S.I.) approximately front and rear. Uneven pressure can give an uneven finish when mowing and
 - 14. BATTERY MAINTENANCE: When not in use, a battery While maintaining tension on the engine discharges by as much as 1% a day, more when the climate is warm. month. Disconnect battery terminals to charge, then allow to stand minimum 1/2hr before re-connecting (re-check electrolyte level). If a battery is not used for a period of more than three (3) months, the terminals should be disconnected and trickle charged at two (2) amps for two (2) hours once every three (3) months or before use.
 - 15. SEAT ADJUSTMENT: Loosen four seat mounting bolts and slide seat into desired position in slots and re-tighten bolts.
- 16. REPLACE DRIVE CHAIN: Engage park brake, jack up rear of machine, and remove L/H wheel. Push chain tensioner arms, one at a time, away from chain and using a suitable spanner tighten pivot bolt desired height under the mowing attachment that can support the lock nuts to hold them out. Release park brake then turn rear axle to bring chain into a suitable position for removal of the chain connecting link. Remove connecting link and chain. Inspect both sprockets for wear or damage, replace if necessary. Install new chain and connecting link with the link clip between the wheel and chain. Release pivot arm nuts until arm moves freely back to chain. Engage
- 17. CLEANING AND POLISHING POLYETHYLENE BONNET AND **REAR MUDGUARD:** To keep scratches on bonnet and mudguard to minimum, do not rub or brush off with bare hands, use a soft cloth or a light flow of compressed air. For dirt, wash with a steady stream of water only (no detergent), then blow off excess water with air. To polish remove excess dust or dirt. When surface is dry, spray on an between cutter head pulley and cutter head brake pad is automotive type plastic preservative and leave on for 30 to 60 seconds. Using a dry soft cloth (i.e. cheesecloth) wipe off to bring up lustre.

GENUINE SPARE PARTS: Always use Genuine Cox Factory Made 8. CLUTCH PLATE ADJUSTMENT: Periodically it will be found Spare Parts. Use of non-genuine COX spares will void your warranty. SAFETY FIRST: The use of any mechanical device can cause injury if

incorrect procedures are used. Please ensure that all family members

TORQUE SETTINGS

10Nm (84lbf in) 5/16" UNC BOLT/NUT 20Nm (180lbf in) 36Nm (27lbf ft) 68Nm (50lbf ft) 9Nm (80lbf in) 100Nm (74lbf ft) 100Nm (74lbf ft) 5/8" UNF NUT

MAINTENANCE SCHEDULE

BEFORE EACH USE

Check engine oil level, adjust if required Check engine air cleaner foam pre-cleaner, service if required Check engine rotating screen/finger guard, clean if required Check operation of safety switches, service if required Check foot brake operation, adjust if required. Check tyre pressures, adjust if required

Check for loose fasteners, tighten if required Lubricate stub axles Check mowing attachment cutter blades, bolts, nuts, disc/s, housing, and guards for wear or damage, replace if required

BEFORE STORAGE

Change engine oil - Clean machine Lubricate as per required

EVERY 5 HOURS

Check tyre pressures, adjust if required

and guards for damage, replace if required

Check engine oil level, adjust if required Check engine air cleaner foam pre-cleaner, service if req. Check engine rotating screen/finger guard, clean if required Check operation of safety switches, service if required Check foot brake operation, adjust if required.

Check for loose fasteners, tighten if required Lubricate stub axles Check mowing attachment cutter blades, bolts, nuts, disc/s, housing, and guards for wear or damage, replace if required

1 MONTH OR 5 HOURS WHICH EVER OCCURS FIRST

Change engine oil Check engine air cleaner foam pre-cleaner, service if required Check engine rotating screen/finger guard, clean if required Check foot brake operation, adjust if required Check operation of safety switches, service if required Check tyre pressures, adjust if required Lubricate stub axles Check mowing attachment cutter blades, bolts, nuts, disc/s, housing,

Check clutch arm action, adjust if required Check and adjust engine to clutch vee belt if required... Check for loose fasteners, tighten if required Check clutch to cutter vee belt and adjust cutter housing level if required

DATE	/	/	HOURSDEALER
------	---	---	-------------

3 MONTH OR 25 HOURS WHICH EVER OCCURS FIRST

Change engine oil if operating under heavy load or high ambient tem- Check mowing attachment cutter blades, bolts, nuts, disc/s, housing, peratureCheck engine air cleaner foam pre-cleaner, service if required * Check engine rotating screen/finger guard, clean if required * Check foot brake operation, adjust if required

Check operation of safety switches and replace if required Check tyre pressures, adjust if required

and guards for wear or damage, replace if required Check and adjust engine to clutch vee belt if required... Check battery condition, service if required Check clutch to cutter vee belt and adjust cutter housing level if required Check for loose fasteners, tighten if required

*Service more often under dusty conditions, or where air borne debris is present HOURS......CUSTOMER..... DATE

6 MONTH OR 50 HOURS WHICH EVER OCCURS FIRST

perature Check engine air cleaner foam pre-cleaner, service if required *

Check engine rotating screen/finger guard, clean if required * Check foot brake operation, adjust if required

Check operation of safety switches and replace if required

Check tyre pressures, adjust if required

Lubricate stub axles

DATE

Lubricate stub axles

Change engine oil if operating under heavy load or high ambient tem- Check mowing attachment cutter blades, bolts, nuts, disc/s, housing ,and guards for wear or damage, replace if required

Check for loose fasteners, tighten if required

Check and adjust engine to clutch vee belt if required...

Check battery condition, service if required

Check clutch to cutter vee belt and adjust cutter housing level if required

*Ser	ice more often under dusty conditions, or where air borne debris is present
/	HOURSDEALER

9 MONTHS OR 75 HOURS WHICH EVER OCCURS FIRST

Check for loose fasteners, tighten if required Change engine oil if operating under heavy load or high ambient Check battery condition, service if required temperature Check clutch to cutter vee belt and adjust cutter housing level if re-Check engine air cleaner foam pre-cleaner, service if required * Check engine rotating screen/finger guard, clean if required * quired Check and adjust engine to clutch vee belt if required.. Check foot brake operation, adjust if required Check operation of safety switches and replace if required Check tyre pressures, adjust if required Lubricate stub axles Check moving attachment cutter blades, bolts, nuts, disc/s, housing, and guards for wear or damage, replace if required *Service more often under dusty conditions, or where air borne debris is present HOURS.....CUSTOMER/DEALER..... DATE 12 MONTHS OR 100 HOURS WHICH EVER OCCURS FIRST Check drive chain and sprockets for wear, replace if required Change engine oil filter Check steering chain an sprockets or wear, adjust if required Change engine oil Check mowing attachment cutter blades, bolts, nuts, disc/s, housing, Check engine spark plug, clean, adjust, or replace if required If fitted clean engine exhaust spark arrester and guards for wear or damage, replace if required Check clutch arm action, adjust if required Check engine air cleaner foam pre-cleaner, service if required * Check engine air cleaner cartridge, service if required* Re-tension rear wheel retaining nut/s Check battery condition, service if required Clean engine cooling system* Check clutch arm action, adjust if required Check drive clutch plates and cone for wear or damage, adjust or service if required Replace in-line fuel filter Check belts for wear or damage, replace if required Check foot brake operation and lining for ware, adjust or replace if req Check and adjust engine to clutch vee belt if required... Lubricate stub axles Check clutch to cutter vee belt and adjust cutter housing level if Check for loose fasteners, tighten if required Check operation of safety switches, service if required Check tyre pressures, adjust if required *Service more often under dusty conditions, or where air borne debris is present HOURS.....DEALER..... DATE 15 MONTHS OR 125 HOURS WHICH EVER OCCURS FIRST Change engine oil if operating under heavy load or high ambient tem-Check moving attachment cutter blades, bolts, nuts, disc/s, housing, and guards for wear or damage, replace if required Check for loose fasteners, tighten if required . Check engine air cleaner foam pre-cleaner, service if required * Check clutch to cutter vee belt and adjust cutter housing level if required Check engine rotating screen/finger guard, clean if required ' Check operation of safety switches and replace if required Check and adjust engine to clutch vee belt if required. Check foot brake operation, adjust if required Lubricate stub axles Check tyre pressures, adjust if required Check battery condition, service if required *Service more often under dusty conditions, or where air borne debris is present HOURS.....CUSTOMER/DEALER.... DATE 18 MONTHS OR 150 HOURS WHICH EVER OCCURS FIRST Check drive clutch plates and cone for wear or damage, Change engine oil If fitted clean engine exhaust spark arrestor adjust or service if required Check clutch arm action, adjust if required Check engine air cleaner foam pre-cleaner, service if required * Check battery condition, service if required Check engine rotating screen/finger guard, clean if required * Check for loose fasteners, tighten if required Check foot brake operation and lining for ware, adjust or replace if Check and adjust engine to clutch vee belt if required... required Check clutch to cutter vee belt and adjust cutter housing level if required Check operation of safety switches, service if required Check tyre pressures, adjust if required Lubricate stub axles Check steering chain an sprockets or wear, adjust if required Check moving attachment cutter blades, bolts, nuts, disc/s, housing, and guards for wear or damage, replace if required Check belts for wear or damage, replace if required Check drive chain and sprockets for wear, replace if required If fitted check mowing attachment brake pad for wear, replace if re-

HOURS......DEALER.....

auired

DATE

*Service more often under dusty conditions, or where air borne debris is present

21 MONTHS OR 175 HOURS WHICH EVER OCCURS FIRST

Change engine oil if operating under heavy load or high ambient temperature

Check engine air cleaner foam pre-cleaner, service if required * Check engine rotating screen/finger guard, clean if required ' Check foot brake operation, adjust if required Check operation of safety switches and replace if required

Check tyre pressures, adjust if required

Lubricate stub axles

Check mowing attachment cutter blades, bolts, nuts, disc/s, housing, and guards for wear or damage, replace if required Check battery condition, service if required Check for loose fasteners, tighten if required Check clutch to cutter vee belt and adjust cutter housing level if required

*Service mor	re often u	ınder dusty	conditions, or where air borne debris is present
DATE	/	/	HOURSCUSTOMER/DEALER

24 MONTHS OR 200 HOURS WHICH EVER OCCURS FIRST

Replace engine oil filter

Change engine oil

Check engine spark plug, clean, adjust, or replace if required If fitted clean engine exhaust spark arrestor

Check engine air cleaner foam pre-cleaner, service if required * Check engine air cleaner cartridge, service if required

Clean engine cooling system*

Check foot brake operation and lining for ware, adjust or replace if required

Check operation of safety switches, service if required

Check tyre pressures, adjust if required

Lubricate stub axles

Check steering chain an sprockets or wear, adjust if required

Check mowing attachment cutter blades, bolts, nuts, disc/s, housing, and guards for wear or damage, replace if required

Check belts for wear or damage, replace if required

Check and adjust engine to clutch vee belt if required..

Check drive chain and sprockets for wear, replace if required

Check drive clutch plates and cone for wear or damage,

adjust or service if required

Check clutch arm action, adjust if required

Check battery condition, service if required

Check for loose fasteners, tighten if required

Check and adjust engine to clutch vee belt if required...

Check clutch to cutter vee belt and adjust cutter housing level if required

*Service more often under	dusty conditions.	or where air borne	debris is present

DATE	/	/	HOURSDEALER
------	---	---	-------------

27 MONTHS OR 225 HOURS WHICH EVER OCCURS FIRST

Change engine oil if operating under heavy load or high ambient temperature

Check engine air cleaner foam pre-cleaner, service if required *

Check engine rotating screen/finger guard, clean if required * Check foot brake operation, adjust if required

Check operation of safety switches and replace if required

Check tyre pressures, adjust if required

Lubricate stub axles

Check moving attachment cutter blades, bolts, nuts, disc/s, housing, and guards for wear or damage, replace if required

Check battery condition, service if required

Check for loose fasteners, tighten if required

Check clutch to cutter vee belt and adjust cutter housing level if required

Check and adjust engine to clutch vee belt if required...

↑Service more ofter	i unaer austy	Conditions, o	i where all	DOTTIE GEDTIS I	s present

DATE	/	/	HOURSCUSTOMER/DEALER
------	---	---	----------------------

30 MONTHS OR 250 HOURS WHICH EVER OCCURS FIRST

Change engine oil

If fitted clean engine exhaust spark arrestor

Check engine air cleaner foam pre-cleaner, service if required * Check engine rotating screen/finger guard, clean if required *

Check foot brake operation and lining for ware, adjust or replace if required

Check operation of safety switches, service if required Check tyre pressures, adjust if required

Lubricate stub axles

Check steering chain an sprockets or wear, adjust if required Check moving attachment cutter blades, bolts, nuts, disc/s, housing, and guards for wear or damage, replace if required

Check belts for wear or damage, replace if required

Check drive chain and sprockets for wear, replace if required

Check drive clutch plates and cone for wear or damage,

adjust or service if required

Check clutch arm action, adjust if required

Check battery condition, service if required Check for loose fasteners, tighten if required

Check and adjust engine to clutch vee belt if required...

Check clutch to cutter vee belt and adjust cutter housing level if required

DATE	/	/	HOURSDEALERDEALER
------	---	---	-------------------


^{*}Service more often under dusty conditions, or where air borne debris is present

33 MONTHS OR 275 HOURS WHICH EVER OCCURS FIRST

Check mowing attachment cutter blades, bolts, nuts, disc/s, hous-Change engine oil if operating under heavy load or high ambient ing , and guards for wear or damage, replace if required temperature Check battery condition, service if required Check engine air cleaner foam pre-cleaner, service if required * Check engine rotating screen/finger guard, clean if required * Check for loose fasteners, tighten if required Check foot brake operation, adjust if required Check clutch to cutter vee belt and adjust cutter housing level if Check operation of safety switches and replace if required Check and adjust engine to clutch vee belt if required... Check tyre pressures, adjust if required Lubricate stub axles *Service more often under dusty conditions, or where air borne debris is present HOURS......CUSTOMER/DEALER.... DATE **36 MONTHS OR 300 HOURS WHICH EVER OCCURS FIRST** Check mowing attachment cutter blades, bolts, nuts, disc/s, hous-Replace engine oil filter ing, and guards for wear or damage, replace if required Change engine oil Check belts for wear or damage, replace if required Check engine spark plug, clean, adjust, or replace if required Check drive chain and sprockets for wear, replace if required If fitted clean engine exhaust spark arrestor Check drive clutch plates and cone for wear or damage, Check engine air cleaner foam pre-cleaner, service if required * Check engine air cleaner cartridge, service if required adjust or service if required Check clutch arm action, adjust if required Clean engine cooling system* Check battery condition, service if required Check foot brake operation and lining for ware, adjust or replace if Check for loose fasteners, tighten if required Check and adjust engine to clutch vee belt if required... Check operation of safety switches, service if required Check clutch to cutter vee belt and adjust cutter housing level if Check tyre pressures, adjust if required Lubricate stub axles required Check steering chain an sprockets or wear, adjust if required *Service more often under dusty conditions, or where air borne debris is present HOURS.....DEALER..... DATE

NOTES:	


Model A12208G, A12308G, A12408G:- Body Components B&S and 13HP Honda Only (side discharge only)

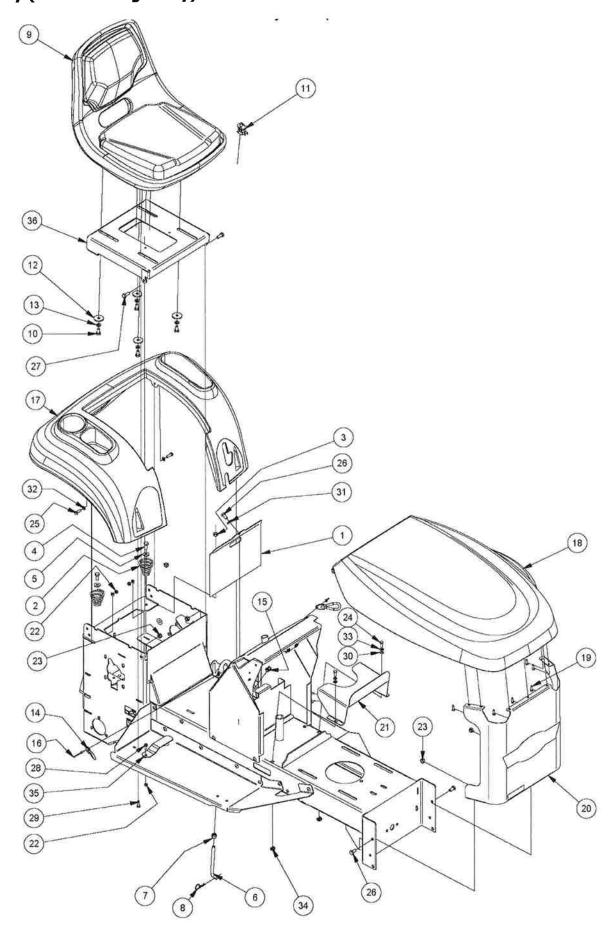

Model A12208G, A12308G, A12408G:- Body Components B&S and 13HP Honda Only (side discharge only)

ITEM	PART NUMBER	DESCRIPTION	QTY
1	95021	Door, Console	1
2	13060	Seat Spring	2
3	NM8NT	Nut	2
4	SH0820M	Screw	2
5	W05M202	Washer, Flat	2
6	AM185B0	Cutter Lifting Link	1
7	NF06CN	Nut	1
8	RP03	Pin, 'R'	1
9	A122110	Seat	1
10	SH0816M	Screw	4
11	SP1PNCSM	Switch, Plunger	1
	9011208G	Mounting Plate, Seat Switch	1
	SPST04CX0.37	Screw, Pan	3
12	W052003	Washer, Flat	4
13	W\$050216	Washer, Lock, Spring	4
14	96114	Strap, Bonnet	2
15	NCM8X3.2	Nut, Cage	1
16	PR04M4.8	Rivet	2
17	95044	Mudguard	1
18	95043	Cowl, Bonnet	1
19	SPPK5X16	Screw, Pan	7
	W030820	Washer	7
	WSR12	Washer, Seal	7
20	A110073R	Nose, Bonnet 13HP HONDA ONLY	1
	A108073R	Nose, Bonnet 13.5HP B&S ONLY	1
	A109073R	Nose, Bonnet 15.5HP & 17.5HP B&S ONLY	1
21	A107014R08L	Stand, Tank, Fuel, Red 13HP HONDA ONLY	1
22	NM6NT	Nut	3
23	NM8NT	Nut	4
24	SH0616M	Screw 13HP HONDA ONLY	2
25	SH0620M	Screw	2
26	SH0816M	Screw	3
27	SH0820M	Screw	2
28	SPM6X16	Screw, Pan	1
29	SPPK6X20	Screw, Pan	2
30	W040818	Washer, Flat 13HP HONDA ONLY	2
31	W051218	Washer, Flat	1
32	W06MN	Washer, Flat	4
33	WS040816	Washer, Lock, Spring 13HP HONDA ONLY	2
34	NCM6X2.6X9.5	Nut, Cage 13HP HONDA ONLY	2
35	13096	Depressor, Foot Switch	1
36	A122009R	Mount, Seat	1


Model A13109G, A13209G, A13309G:- Body Components B&S and 13HP Honda Only (side discharge only)

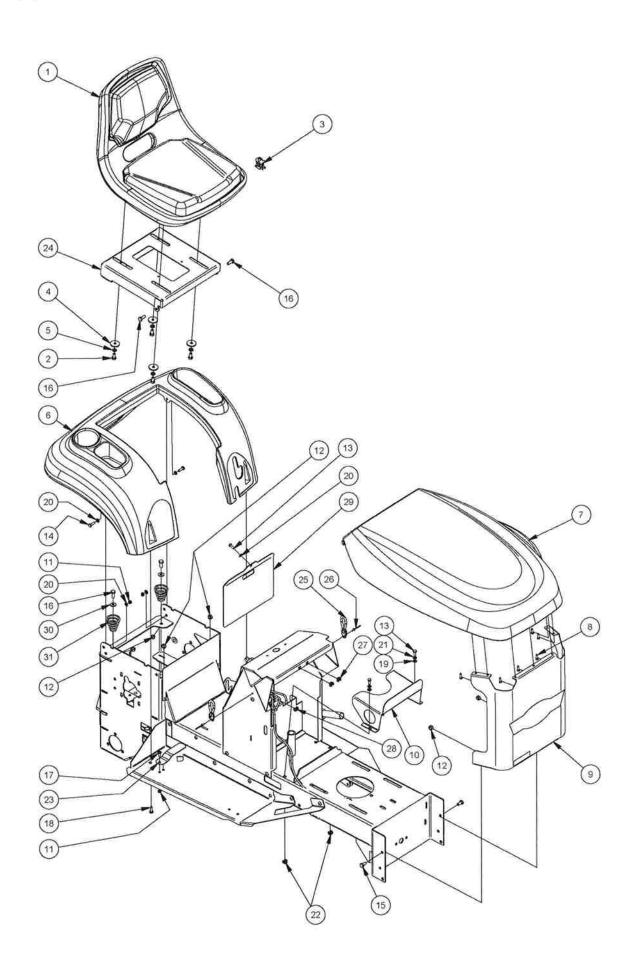

Model A13109G, A13209G, A13309G:- Body Components B&S and 13HP Honda Only (side discharge only)

ITEM	PART NUMBER	DESCRIPTION	QTY
1	A122110	Seat, Medium	1
2	SH0816M	Screw	4
3	SP1PNCSM	Switch, Plunger	1
	9011208G	Mounting Plate, Seat Switch	1
	SPST04CX0.37	Screw	3
4	W052003	Washer, Flat	4
5	WS050216	Washer, Lock, Spring	4
6	95044	Mudguard	1
7	95043	Cowl, Bonnet	1
8	SPPK5X16	Screw	7
	W030820	Washer	7
	WSR12	Washer, Seal	7
9	A110073R	Nose, Bonnet, 13 Hp Honda Only	1
	A108073R	Nose, Bonnet, 13.5hp B&S Only	1
	A109073R	Nose, Bonnet, 15.5hp, 16.5hp, 17.5hp & 18.5hp B&S Only	1
10	A107014R08L	Stand, Tank, Fuel, Red 13 Hp Honda Only	1
11	NM6NT	Nut	3
12	NM8NT	Nut	4
13	SH0616M	Screw, 13hp Honda Only	3
14	SH0620M	Screw	2
15	SH0816M	Screw	2
16	SH0820M	Screw	4
17	SPM6X16	Screw, Pan	1
18	SPPK6X20	Screw, Pan	2
19	W040818	Washer, Flat, 13hp Honda Only	2
20	W06MN	Washer, Flat	5
21	WS040816	Washer, Lock, Spring, 13hp Honda Only	2
22	NCM6x2.6x9.5	Nut, Cage, 13 Hp Honda Only	2
23	13096	Depressor, Foot Switch	1
24	A122009R	Mount, Seat, Medium, Red	1
25	96114	Strap, Bonnet	2
26	PR04M4.8	Rivet	2
27	NCM5X2.5X9.5	Nut, Cage 13 Hp Honda Only	2
28	NCM6X1.6X9.5	Nut, Cage	1
29	A131021R	Door, Console	1
30	W05M202	Washer, Flat	2
31	13060	Seat Spring	2


Model A14310K, A14410K, A14510K:- Body Components 16.5HP, 18.5HP B&S & 13HP Honda Only (not rear discharge C1632BRBS)

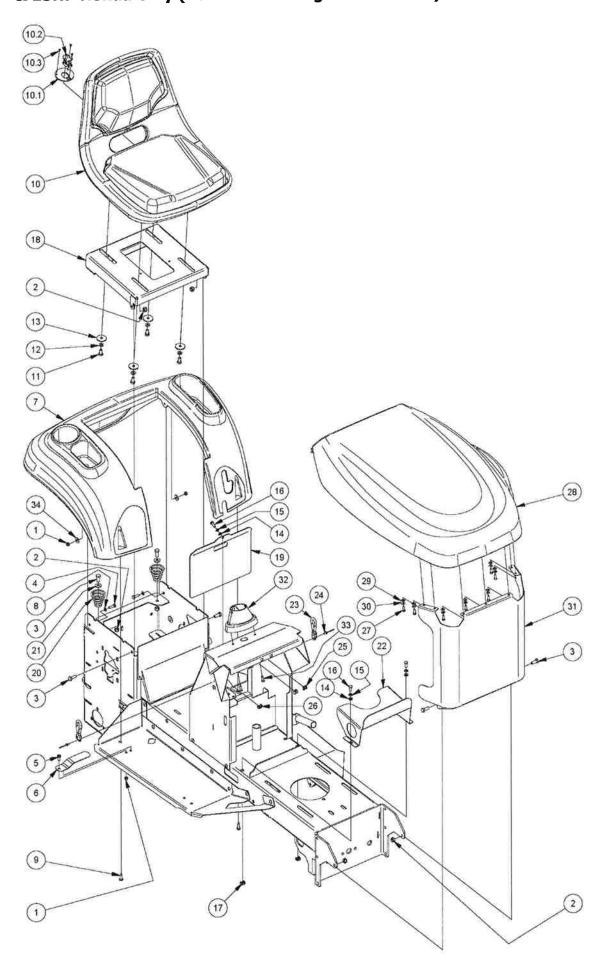

Model A14310K, A14410K, A14510K:- Body Components 16.5HP, 18.5HP B&S & 13HP Honda Only (not rear discharge C1632BRBS)

ITEM	PART NUMBER	DESCRIPTION	QTY
1	NM6NT	Nut	10
2	NM8NT	Nut	7
3	SH0820M	Screw	6
4	SH0620M	Screw	3
5	SPM6X16	Screw, Pan	1
6	13096	Depressor, Foot Switch	1
7	95044	Mudguard	1
8	W06MN	Washer	3
9	SPPK6X20	Screw, Pan	2
10	A122110	Seat	1
10.1	90112	Seat Switch Mounting Plate	1
10.2	SP1PNCSM	Switch, Plunger	1
10.3	SPST04CX0.37	Screw, Pan	3
11	SH0816M	Screw	4
12	WS050216	Washer, Lock, Spring	4
13	W052003	Washer	4
14	W040818	Washer	2
15	WS040816	Washer, Lock, Spring	3
16	SH0616M	Screw,	5
17	NCM6x2.6x9.5	Nut, Cage (13.0 Hp Honda Only)	2
18	A122009R	Mount, Seat	1
19	A131021R	Door, Console	1
20	13060	Spring, Seat	2
21	W05M202	Washer	2
22	A107014R08L	Stand, Tank, Fuel (13.0 Hp Honda Only)	1
23	96114	Strap, Bonnet, Bunji_Loop	2
24	PR04M4.8	Rivet	2
25	NCM5X2.5X9.5	Nut, Cage	2
26	NCM6X1.6X9.5	Nut, Cage	1
27	SPPK5X16	Screw, Pan	7
28	95043	Cowl, Bonnet, Red	1
29	WSR12	Washer, Seal, Epdm Rubber	7
30	W030820	Washer	7
31	A145073R	Nose, Bonnet (13.0 Hp Honda Only)	1
	A143073R	Nose,	1
32	A131009	Cover, Shaft, Steering	1
33	SPPK5X16	Screw, Pan	2
34	W041216	Washer	6


Model A12308G:- Body Components 16HP Honda Only

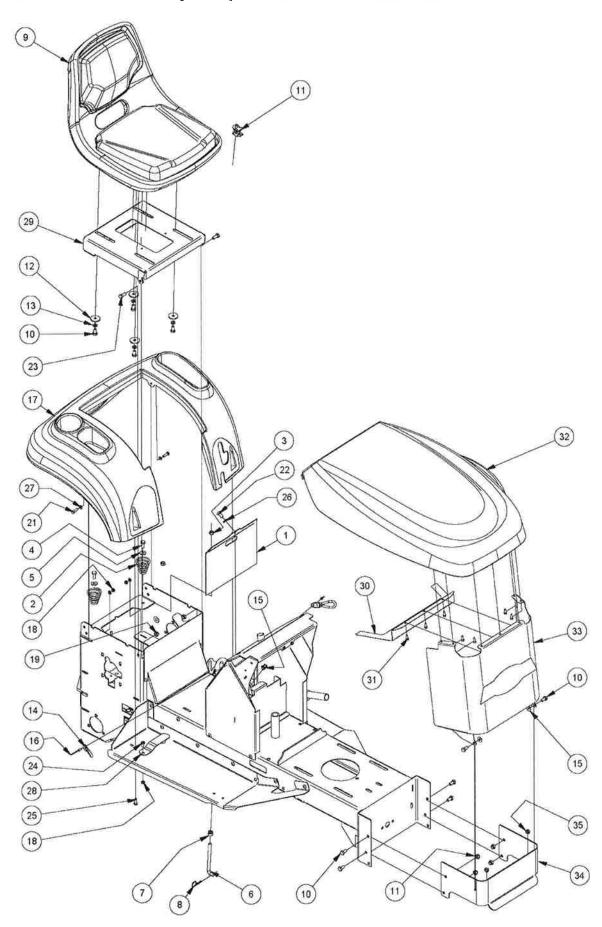

Model A12308G:- Body Components 16HP Honda Only

ITEM	PART NUMBER	DESCRIPTION	QTY
1	95021	Door, Console	1
2	13060	Seat Spring	2
3	NM8NT	Nut	2
4	SH0820M	Screw	2
5	W05M202	Washer, Flat	2
6	AM185B0	Cutter Lifting Link	1
7	NF06CN	Nut	1
8	RP03	Pin, 'R'	1
9	A122110	Seat	1
10	SH0816M	Screw	4
11	SP1PNCSM	Switch, Plunger	1
	9011208G	Mounting Plate, Seat Switch	1
	SPST04CX0.37	Screw, Pan	3
12	W052003	Washer, Flat	4
13	WS050216	Washer, Lock, Spring	4
14	96114	Strap, Bonnet	2
15	NCM8X3.2	Nut, Cage	1
16	PR04M4.8	Rivet	2
17	95044	Mudguard	1
18	NM6NT	Nut	3
19	NM8NT	Nut	4
20	SH0616M	Screw	2
21	SH0620M	Screw	2
22	SH0816M	Screw	7
23	SH0820M	Screw	2
24	SPM6X16	Screw, Pan	1
25	SPPK6X20	Screw, Pan	2
26	W051218	Washer, Flat	1
27	W06MN	Washer, Flat	4
28	13096	Depressor, Foot Switch	1
29	A122009R	Mount, Seat	1
30	A119075B	Baffle, Hot Air, Bonnet, Front	1
31	SPPK5X16	Screw, Pan	7
	W030820	Washer	7
	WSR12	Washer, Seal	7
32	95043	Cowl, Bonnet	1
33	A123073R	Nose, Bonnet, Sloping	1
34	A123040R	Bumper, Front	1
35	NHCM8	Nut, Hex, Conelok	2


Model A13309G:- Body Components 16HP Honda Only

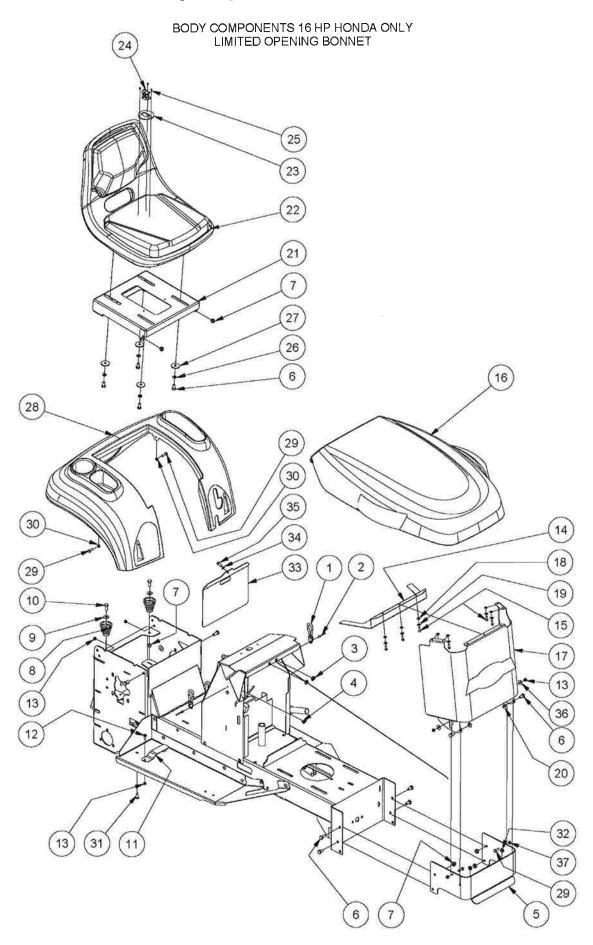

Model A13309G:- Body Components 16HP Honda Only

ITEM	PART NUMBER	DESCRIPTION	QTY
1	96114	Strap, Bonnet, Bunji Loop	2
2	PR04M4.8	Rivet	2
3	NCM5X2.5X9.5	Nut, Cage	2
4	NCM6X1.6X9.5	Nut, Cage	1
5	A123040R10G	Bumper, Front	1
6	SH0816M	Screw	10
7	NM8NT	Nut	8
8	13060	Spring, Seat	2
9	W05M202	Washer, Flat	2
10	SH0820M	Screw	2
11	13096	Depressor, Foot Switch	1
12	SPM6X16	Screw, Pan	1
13	NM6NT	Nut	5
14	A119075B	Baffle, Hot Air, Bonnet, Front	1
15	SPPK5X16	Screw, Pan	7
16	95043	Cowl, Bonnet	1
17	A123073R10G	Nose, Bonnet	1
18	WSR12	Washer, Seal	7
19	W030820	Washer, Flat	7
20	W051216	Washer, Flat	2
21	A122009R	Mount, Seat, Medium	1
22	A122110	Seat, Medium	1
23	9011208G	Mounting, Switch, Seat	1
24	SP1PNCSM	Switch, Plunger, 1 Pole, NC, Snap Mtg	1
25	SPST04CX0.37	Screw, Pan	3
26	WS050216	Washer, Lock, Spring	4
27	W052003	Washer, Flat	4
28	95044	Mudguard	1
29	SH0620M	Screw	4
30	W06MN	Washer, Flat	2
31	SPPK6X20	Screw, Pan	2
32	NHCM8	Nut, Hex, Conelok	2
33	A131021R	Door, Console	1
34	W040816	Washer, Flat	1
35	SH0616M	Screw	1
36	W041216	Washer, Flat	2
37	NHM6	Nut	2


Model A14510K:- Body Components 16HP Honda Only

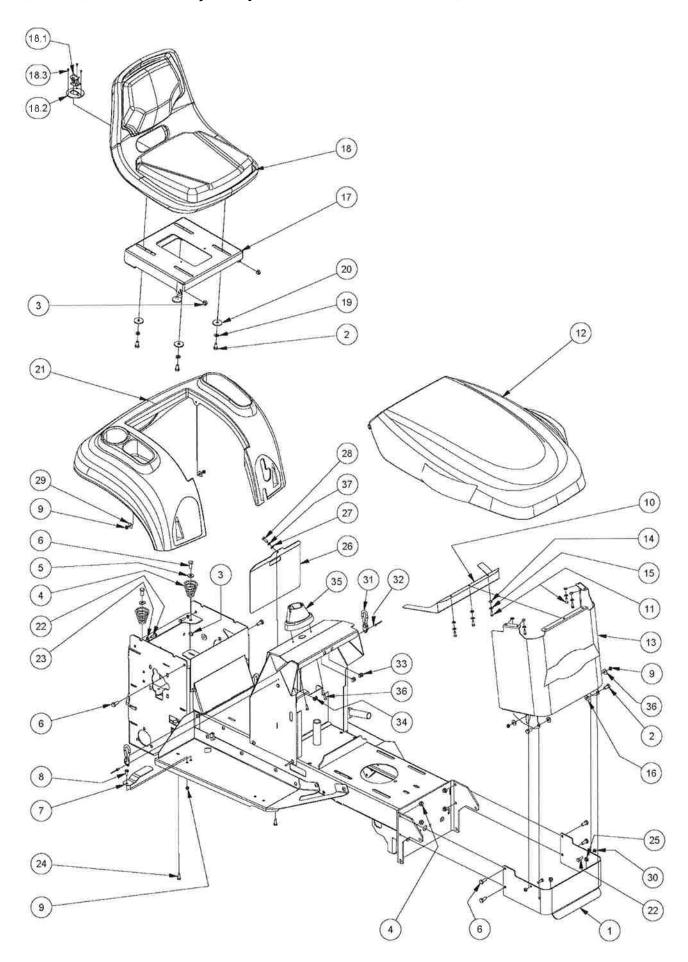

Model A14510K:- Body Components 16HP Honda Only

ITEM	PART NUMBER	DESCRIPTION	QTY
1	A145040R	Bumper, Front, Red	1
2	SH0816M	Screw	6
3	NM8NT	Nut	8
4	13060	Spring, Seat	2
5	W05M202	Washer	2
6	SH0820M	Screw	2
7	13096	Depressor, Foot Switch	1
8	SPM6X16	Screw, Pan	1
9	NM6NT	Nut	5
10	A119075B	Baffle, Hot Air, Bonnet, Front	1
11	SPPK5X16	Screw, Pan	7
12	95043	Cowl, Bonnet	1
13	A123073R10G	Nose, Bonnet, Sloping	1
14	WSR12	Washer, Seal, Epdm Rubber	7
15	W030820	Washer	7
16	W051216	Washer	2
17	A122009R11D	Mount, Seat	1
18	A122110	Seat, Medium	1
18.1	SP1PNCSM	Switch, Plunger	1
18.2	9011208G	Mounting, Switch, Seat	1
18.3	SPST04CX0.37	Screw, Pan, Self Tap	3
19	WS050216	Washer, Lock, Spring	4
20	W052003	Washer	4
21	95044	Mudguard	1
22	SH0620M	Screw	4
23	W06MN	Washer	2
24	SPPK6X20	Screw, Pan	2
25	NHCM8	Nut, Hex, Conelok	2
26	A131021R	Door, Console	1
27	W040816	Washer	1
28	SH0616M	Screw	1
29	W041216	Washer	4
30	NHM6	Nut	2
31	96114	Strap, Bonnet, Bunji_Loop	2
32	PR04M4.8	Rivet	2
33	NCM5X2.5X9.5	Nut, Cage	2
34	NCM6X1.6X9.5	Nut, Cage	1
35	A131009	Cover, Shaft, Steering	1
36	SPPK5X16	Screw, Pan	2
37	WS040816	Washer, Lock, Spring	1


Model A12508L, A13409G:- Body Components Rear Discharge Only

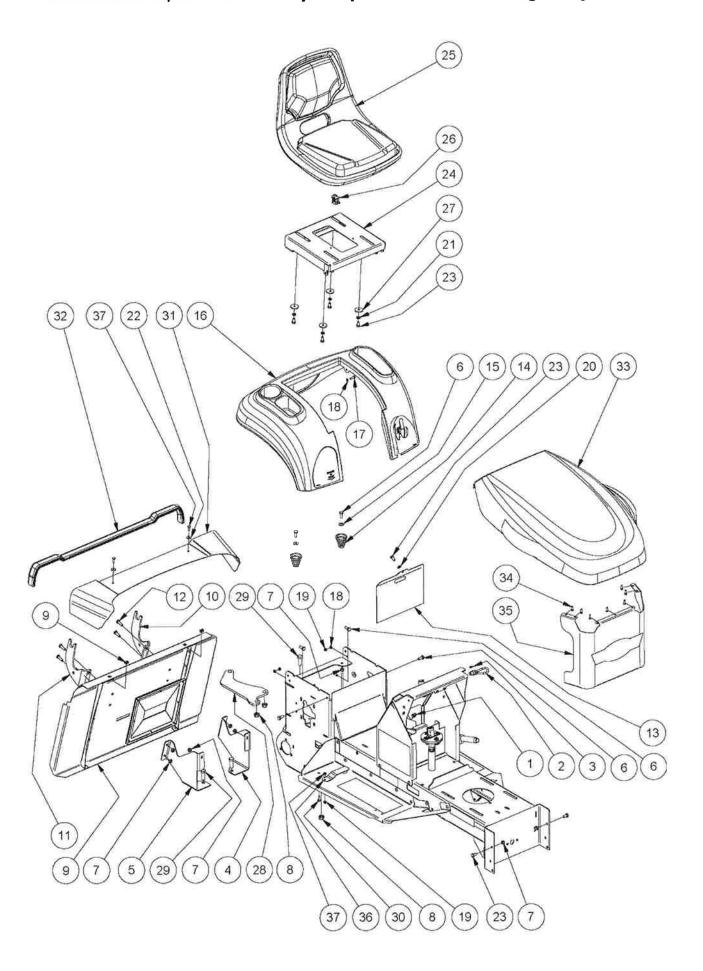

Model A12508L, A13409G:- Body Components Rear Discharge Only

ITEM	PART NUMBER	DESCRIPTION	QTY
1	NCM8X3.2	Nut, Cage Model A12508L	1
	NCM6X1.6X9.5	Nut, Cage Model A13409G	1
2	96114	Strap, Bonnet	2
3	PR04M4.8	Rivet	2
4	A128031B	Bracket, Wall, Left, Black	1
5	A128033B	Bracket, Wall, Right, Black	1
6	SH0820M	Screw	6
7	NM8NT	Nut	10
8	NM12NT	Nut	3
9	A128020	Sub-Assy, Wall, Catcher	1
10	A129035B	Bracket, Catcher, Left, Black	1
11	A129037B	Bracket, Catcher, Right, Black	1
12	SH0825M	Screw	4
13	95021	Door, Console Model A12508L	1
	A131021R	Door, Console Model A13409G	
14	13060	Spring, Seat	2
15	W05M202	Washer, Flat	2
16	95044	Mudguard	1
17	SH0620M	Screw	2
18	W06MN	Washer, Flat	4
19	NM6NT	Nut	3
20	W051218	Washer, Flat Model A12508L	1
	W06MN	Washer, Flat Model A13409G	
21	WS050216	Washer, Lock, Spring	4
22	W041216	Washer, Flat	2
23	SH0816M	Screw	7
24	A122009R	Mount, Seat	1
25	A122110	Seat	1
26	SP1PNCSM	Switch, Plunger	1
27	W052003	Washer, Flat	4
28	A125203R	Extension, Towbar	1
29	SH1235M	Screw	3
30	SPPK6X20	Screw, Pan	2
31	A128051R	Infill, Mudguard-Catcher	1
32	A102128	Seal, Mudguard, Catcher Cover	1
33	95043	Cowl, Bonnet	1
34	SPPK5X16	Screw, Pan	7
	W030820	Washer	7
	WSR12	Washer, Seal	7
35	A109073R	Nose, Bonnet	1
36	13096	Depressor, Foot Switch	1
37	SH0616M	Screw	3


Model A14410K:- Body Components Rear Discharge Only

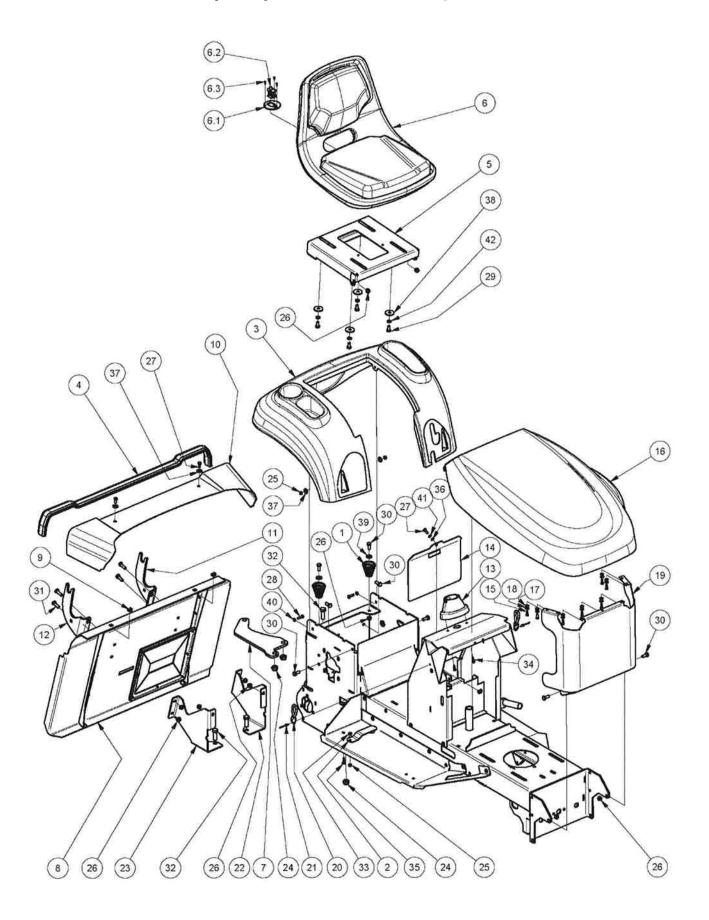

Model A14410K:- Body Components Rear Discharge Only

ITEM	PART NUMBER	DESCRIPTION	QTY
1	13060	Spring, Seat	2
2	13096	Depressor, Foot Switch	1
3	95044	Mudguard	1
4	A102128	Seal, Mudguard, Catcher Cover	1
5	A122009R11D	Mount, Seat, Medium	1
6	A122110	Seat, Medium	1
6.1	9011208G	Mounting, Switch, Seat	1
6.2	SP1PNCSM	Switch, Plunger	1
6.3	SPST04CX0.37	Screw, Pan	3
7	A125203R	Extension, Towbar	1
8		Sub-Assy, Wall, Catcher	1
9	NCM6X1.6X9.5	Nut, Cage	2
10	A128051R	Infill, Mudguard-Catcher	1
11	A129035B	Bracket, Catcher, Left	1
12	A129037B	Bracket, Catcher, Right	1
13	A131009	Cover, Shaft, Steering	1
14	A131021R	Door, Console	1
15	SPPK5X16	Screw, Pan	7
16	95043	Cowl, Bonnet	1
17	WSR12	Washer, Seal, Epdm Rubber	7
18	W030820	Washer	7
19	A143073R	Nose, Bonnet	1
20	96114	Strap, Bonnet, Bunji_Loop	2
21	PR04M4.8	Rivet	2
22	A144031B	Bracket, Chassis, Left	1
23	A144033B	Bracket, Chassis, Right	1
24	NM12NT	Nut	3
25	NM6NT	Nut	3
26	NM8NT	Nut	10
27	SH0616M	Screw	3
28	SH0620M	Screw	2
29	SH0816M	Screw	4
30	SH0820M	Screw	8
31	SH0825M	Screw,	4
32	SH1235M	Screw	3
33	SPM6X16	Screw, Pan	1
34	SPPK5X16	Screw, Pan	2
35	SPPK6X20	Screw, Pan	2
36	W040818	Washer	1
37	W041216	Washer	2
38	W052003	Washer	4
39	W05M202	Washer	2
40	W06MN	Washer	2
41	WS040816	Washer, Lock, Spring	1
42	WS050216	Washer, Lock, Spring	4


Model A12208G, A12408G, A12508L, A13109G, A13209G, A13409G, A14310K, A14410K:- Engine Ancillary Components B&S Engines Only

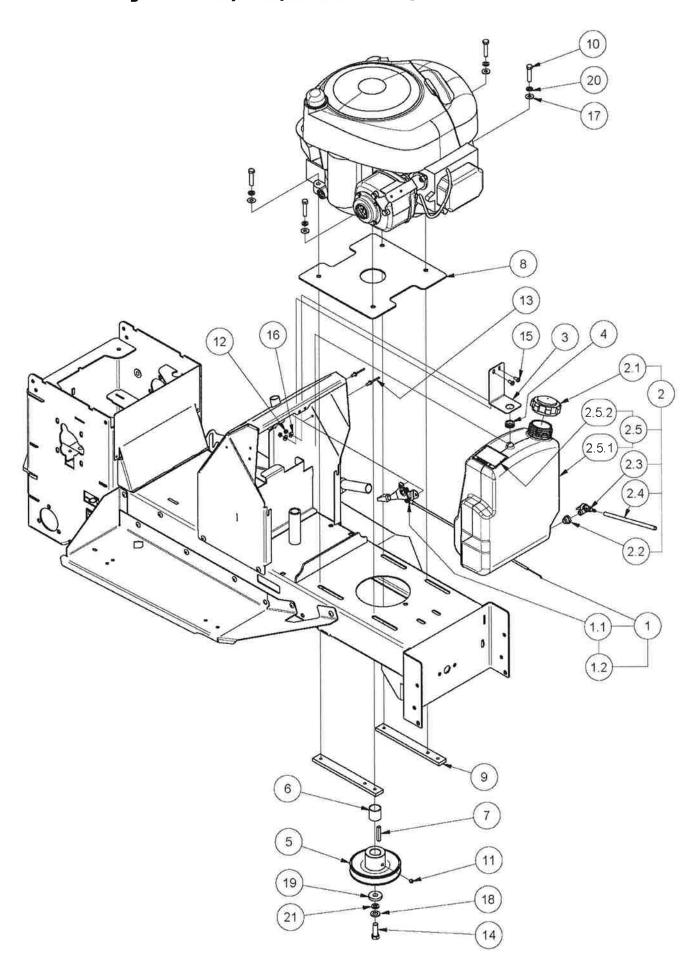

Model A12208G, A12408G, A12508L, A13109G, A13209G, A13409G, A14310K, A14410K:- Engine Ancillary Components B&S Engines Only

ITEM	PART NUMBER	DESCRIPTION	QTY
1	13101	Assy, Control, Throttle Model A12208G, A12408G, A12508L	1
	A131101	Assy, Control, Throttle Model A13109G, A13209G, A13409G, A14310K, A14410K	1
1.1	AM088	Lever, Control	1
1.2	W040818	Washer	1
2		Sub-Assy, Tank	1
2.1	CF01	Cap, Fuel	1
2.2	AM294	Grommet, Fuel Tap	1
2.3	AM293	Petrol Tap	1
2.4	14107	Line, Fuel	1
2.5.1	80033	Tank, Fuel	1
2.5.2	DEC08505K	Decal, Warning, Fuel	1
3	A131007B	Bracket, Restrain, Fuel Tank, Black	1
4	80037	Grommet	1
5	A108101	Pulley, Engine	1
6	A108103	Spacer, Pulley, Engine	1
7	A108104	Key	1
8	A108109B09H	Plate, Base, Engine	1
9	AM078B0	Engine Mount Bolt Plate	2
10	B0524C	Bolt, Hex	4
11	GS0505C	Screw, Set	1
12	NM5NT	Nut, Hex	2
13	BHSSM5X12	Screw, Control, Throttle	2
	NM5NT	Nut, Control, Throttle	2
14	SH0724F	Bolt, Hex	1
15	SPM5X12	Screw, Pan	2
16	W030820	Washer, Flat	2
17	W051218	Washer, Flat	4
18	W071416	Washer, Flat	1
19	W072004	Washer, Flat	1
20	WS050216	Washer, Lock, Spring	4
21	WS071006	Washer, Lock, Spring	1
	AM295	Spark Plug Spanner	1


Model A12308G, A13309G, A14510K:- Engine Ancillary Components 13HP Honda

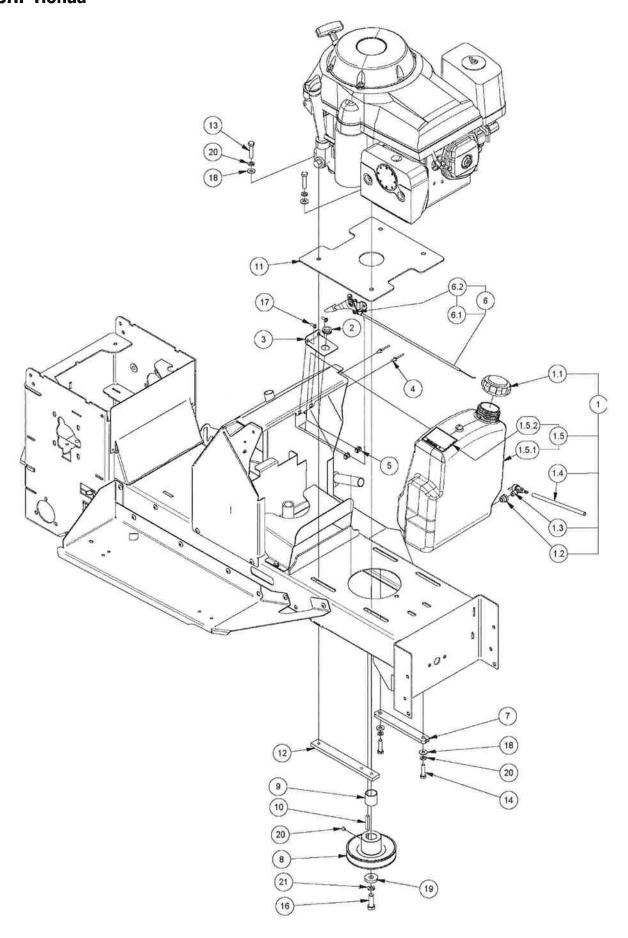

Model A12308G, A13309G, A14510K:- Engine Ancillary Components 13HP Honda

ITEM	PART NUMBER	DESCRIPTION	QTY
1		Sub-Assy, Tank, Fuel	1
1.1	CF01	Cap, Fuel	1
1.2	AM294	Grommet, Fuel Tap	1
1.3	AM293	Petrol Tap	1
1.4	14107	Line, Fuel	1
1.5.1	80033	Tank, Fuel	1
1.5.2	DEC08505K	Decal, Warning, Fuel	1
2	80037	Grommet	1
3	A107007B	Bracket, Restrain	1
4	BHSSM5X12	Screw, Control, Throttle	2
	NM5NT	Nut, Control, Throttle	2
5	NCM5X2.5X9.5	Nut, Cage	2
6	A107037	Control, Speed, Engine Model A12308G	1
	A133033	Control, Speed, Engine Model A13309G, A14510K	1
6.1	W040818	Washer, Flat	1
6.2	AM088	Lever, Control, Speed, Engine, 13.0h	1
7	A107114Z	Plate, Mount, Engine, 13.0 Hon, Left	1
8	A108101	Pulley, Engine	1
9	A108103	Spacer, Pulley, Engine	1
10	A108104	Кеу	1
11	A108109B09H	Plate, Base, Engine	1
	CP07	Clip	1
	BHSSM5X12	Screw	1
	NM5N	Nut	1
12	AM078B0	Engine Mount Bolt Plate	1
13	B0524C	Bolt	2
14	B0520F	Bolt	2
15	DEC203	Decal, Lawn Boss Console, Lower	1
16	SH0724F	Bolt	1
	W071416	Washer, Flat	2
17	SPM5X12	Screw, Pan	2
18	W051218	Washer, Flat	6
19	W072004	Washer, Flat	1
20	WS050216	Washer, Lock, Spring	4
21	WS071006	Washer, Lock, Spring	1
	AM295	Spark Plug Spanner	1

Model A12308G, A13309G, A14510K:- Engine Ancillary Components 16HP Honda

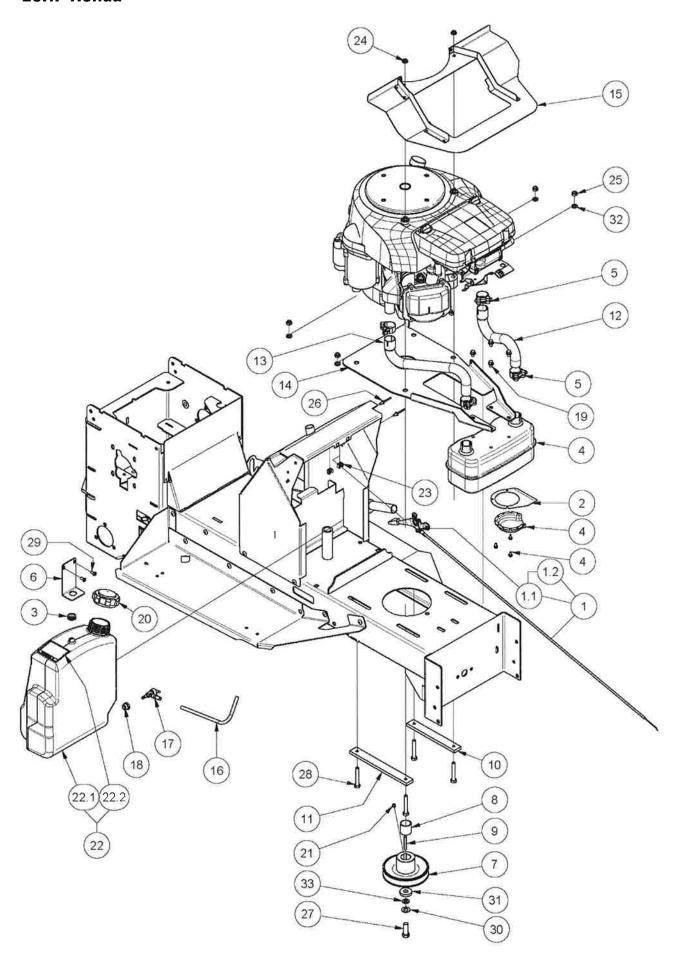


Model A12308G, A13309G, A14510K:- Engine Ancillary Components 16HP Honda

ITEM	PART NUMBER	DESCRIPTION	QTY
1	15033	Control, Speed, Engine Model A12308G	
	A133133	Control, Speed, Engine Model A13309G, A14510K	1
	A119135	Clamp, Cable	1
	NM8NT	Nut	1
	SH0616M	Screw	1
	W041216	Washer	1
2	80025	Deflector, Exhaust Gas	1
3	80037	Grommet	1
4	90167	Muffler, Exhaust	1
5	90168	Clamp, Hose, T-Bolt	4
6	A131007B	Bracket, Restrain, Fuel Tank	1
7	A108101	Pulley, Engine	1
8	A108103	Spacer, Pulley, Engine	1
9	A108104	Key	1
10	A116207Z	Plate, Mounting, Engine, Left	1
11	A116208Z	Plate, Mounting, Engine, Right	1
12	A119121C	Pipe, Exhaust, Hon	1
13	A119123C	Pipe, Exhaust, Hon	1
14	A119125Z	Bracket, Muffler	1
15	A119127B09G	Baffle, Hot Air, Engine, Front	1
16	A119129	Fuel Line, 240l	1
17	AM293	Petrol Tap	1
18	AM294	Grommet	1
19	B0408TFS	Screw	4
20	CF01	Cap, Fuel	1
21	GS0505C	Screw, Set	1
22		Kit, Tank, Fuel	1
22.1	80033	Tank, Fuel	1
22.2	DEC08505K	Decal, Warning, Fuel	1
23	NCM5X2.5X9.5	Nut, Cage	2
24	NFM6	Nut, Hex, Flange	2
25	NHCM8	Nut, Hex, Conelok	4
26	BHSSM5X12	Bolt	2
	NM5NT	Nut	2
27	SH0724F	Bolt	1
28	SH0850M	Screw	4
29	SPM5X12	Screw, Pan	2
30	W071416	Washer, Flat	1
31	W072004	Washer, Flat	1
32	WS050216	Washer, Lock, Spring	4
33	WS071006	Washer, Lock, Spring	1
	AM005G0	Spark Plug Spanner	1

Model A12208G, A13109G, A13209G:- Front Axle Components

For 13HP, 13.5HP & 16.5HP(C1632B) B&S Machines Only With Pressed Metal Rims

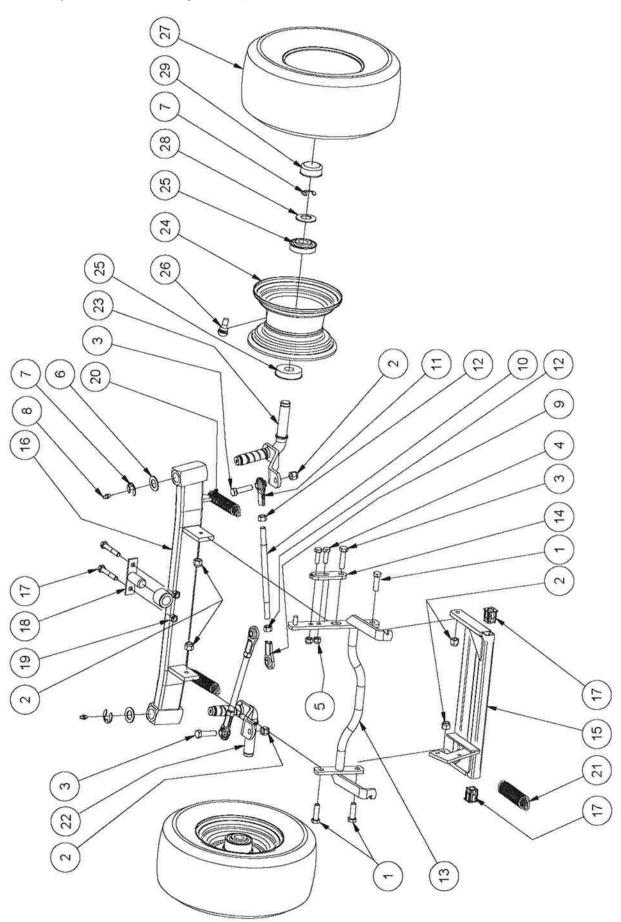

Model A12208G, A13109G, A13209G:- Front Axle Components

For 13HP, 13.5HP & 16.5HP(C1632B) B&S Machines Only With Pressed Metal Rims

ITEM	PART NUMBER	DESCRIPTION	QTY
1	B0620C	Bolt	3
2	NF06CN	Nut	6
3	B0624C	Bolt	3
4	SH0516C	Screw	2
5	N05CN	Nut	2
6	AM336	Washer, Sealing, Shaft	2
7	C02	Circlip	4
8	GNTF3	Nipple, Grease	2
9	AM020	End, Rod, Stamp, Unf, 3/8"Int	2
10	AM256	Tie Rod Inc. Nuts	2
11	AM337	End, Rod, Stamp, Unf, 3/8"Int, Shoulder Ball	2
12	N06F	Nut	4
13	8909905C	Link, Connect, Axle, Adjust	1
14	89098	Link, Adjust	1
15	AM342	Link, Connect, Cutter	1
16	AM332	Beam, Axle, Front	1
17	B0850M	Bolt	2
18	13242	Pin, Pivot, Front Axle	1
19	NM8NT	Nut	2
20	AM040	Spring Extension	2
21	AM145	Spring, Extension	1
22	A116057Z	Axle, Stub	1
23	A116050Z	Axle, Stub	1
24	89032	Wheel incl Tyre (Round Profile)	2
	89032TPC	Wheel incl Tyre (Flat Profile)	2
25	BBLB	Bearing, Ball (Round Profile Tyre Only)	4
	KITBBLB	Kit, Bearing, Ball (2 Bearings and optional washers supplied)	
26	VSS	Valve, Tubeless, Snap-In & Cap	2
27	TT13x 500-6SS	Tyre (Round Profile Only)	2
	STU13x500-6SS	Tube (Optional)	
28	KITSHIM	Kit, Shim	2
29	A116060	Cap, Hub	2




Round profile tyre suit P/n 89032



Flat profile tyre suit P/n 89032TPC


Model A12308G, A12408G, A12508L, A13309G, A13209G, A13409G:-Front Axle Components (Cast Alloy Wheel Rims) 13HP & 16HP Honda, 15.5HP, 16.5HP Rear Bagger, 17.5HP & 18.5HP B&S Only

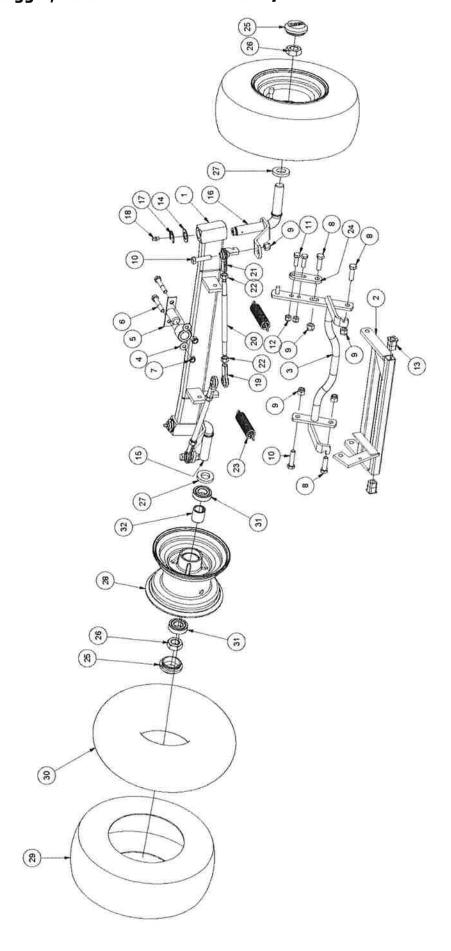

Model A12308G, A12408G, A12508L, A13309G, A13209G, A13409G:-Front Axle Components (Cast Alloy Wheel Rims) 13HP & 16HP Honda, 15.5HP, 16.5HP Rear Bagger, 17.5HP & 18.5HP B&S Only

ITEM	PART NUMBER	DESCRIPTION	QTY
1	AM332	Beam, Front Axle	1
2	AM342	Link Connecting Cutter	1
3	8909905C	Link, Connect, Axle	1
4	W051218	Washer, Flat	2
5	13242	Pin, Pivot, Front Axle	1
6	B0850M	Bolt	2
7	NM8NT	Nut	2
8	B0620C	Bolt	3
9	NF06CN	Nut	6
10	B0624C	Bolt	3
11	SH0516C	Screw	2
12	N05CN	Nut	2
13	AM230	Bush - Plastic	2
14	AM336	Washer, Sealing, Shaft	2
15	AM333	Axle Stub L/H	1
16	AM334	Axle Stub R/H	1
17	C02	Circlip, Ext, "E" Type	2
18	GNTF3	Nipple, Grease	2
19	AM020	End, Rod, Stamp	2
20	AM256	Tie Rod	2
21	AM337	End, Rod, Stamp	2
22	N06F	Nut	4
23	AM040	Spring Extension, Cutter Belt	2
24	89098	Link, Adjust	1
25	AM07099C	Cap, Hub	2
26	NHM20X1.5T	Nut	2
27	W203806	Washer, Flat	2
28	AM193M9	Rim	2
29	TT500X6	Tyre & Tube	2
30	STU500X6	Tube	2
31	BB204212N	Bearing, Ball	4
32	AM021	Sleeve, Spacer, Bearing	2


Model A12208G, A12308G, A12408G, A12508L:- Steering Components

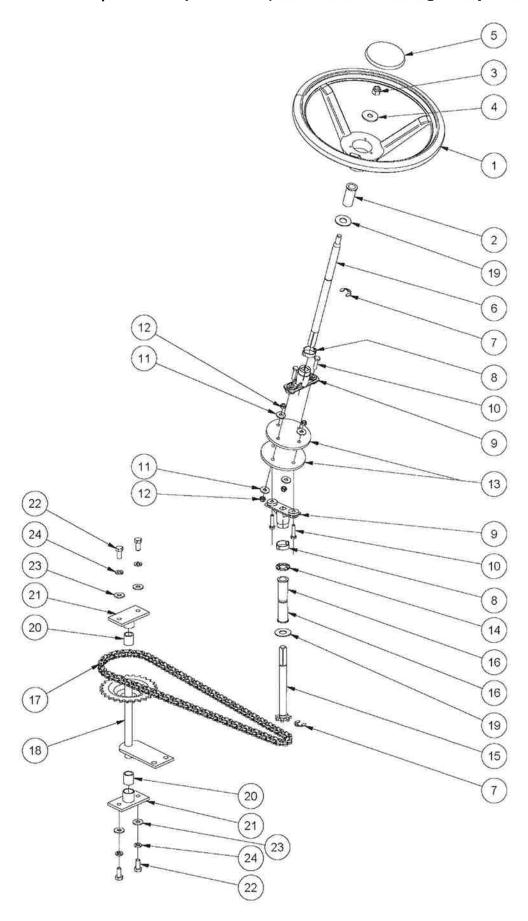

Model A12208G, A12308G, A12408G, A12508L:- Steering Components

ITEM	PART NUMBER	DESCRIPTION	QTY
1	AM167M8	Steering Wheel	1
2	AM017C1	Steering Shaft Bush With Collar	1
3	NF06CN	Nut	1
4	W0620HD	Washer, Flat	1
5	AM225	Steering Wheel, Cover, Cap	1
6	89087	Steering Shaft Upper	1
7	C05	Circlip, Ext, "E"Type	2
8	OC21	"O" Clip	2
9	89097	Steering Shaft Yoke	2
10	B0625M	Bolt	4
11	W041216	Washer, Flat	4
12	NM6NT	Nut	4
13	AM25399J	Universal, Steering Joint	1
14	89100	Fastener, Pushon, Round	1
15	95006	Shaft, Steering, Lower	1
16	AM017C1	Steering Shaft Bush With Collar	2
17	AM018	Chain, Steering	1
18	95007	Idler, Steering	1
19	W092016	Washer, Flat	2
20	AM215	Idler Bush	2
21	AM255	Steering Idler Shaft Mtg Brkt	2
22	SH0512C	Screw	4
23	W05M202	Washer, Flat	4
24	WS050216	Washer, Lock, Spring	4


Model A13109G, A13209G, A13309G, A13409G:-Steering Components—Roll Pin Type Steering Wheel

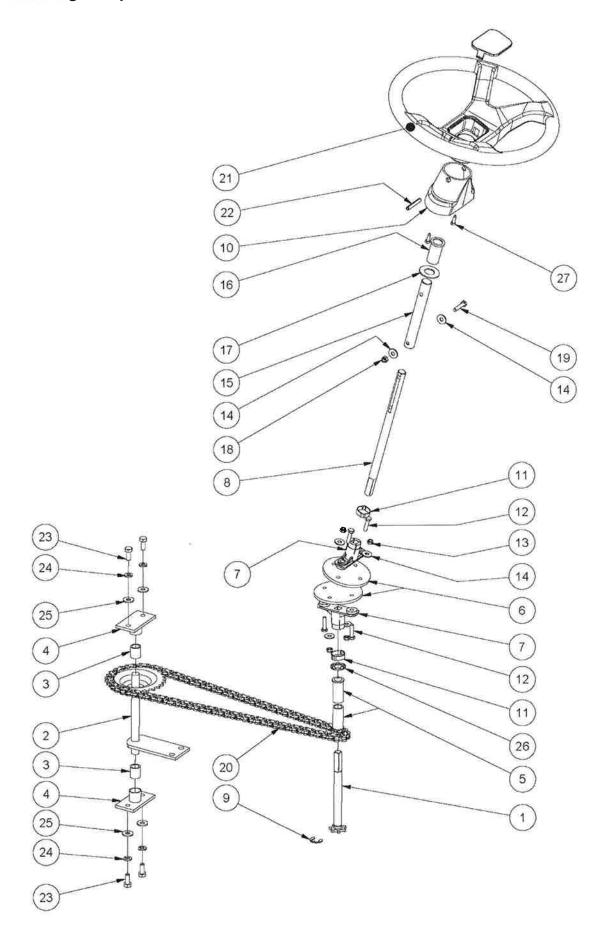

Model A13109G, A13209G, A13309G, A13409G:-Steering Components—Roll Pin Type Steering Wheel

ITEM	PART NUMBER	DESCRIPTION	QTY
1	95006	Shaft, Steering, Lower	1
2	95007	Idler, Steering	1
3	AM215	Idler Bush	2
4	AM255	Steering Idler Shaft Mtg Brkt	2
5	AM017C1	Steering Shaft Bush With Collar	2
6	AM25399J	Disc, Universal Joint	1
7	89097	Steering Shaft Yoke	2
8	A131087Z	Shaft, Steering, Upper	1
9	C05	Circlip	1
10	A131009	Cover, Shaft, Steering	1
11	OC21	"O" Clip	2
12	B0625M	Bolt	4
13	NM6NT	Nut	4
14	W041216	Washer	6
15	A131089Z	Shaft, Steering	1
16	13012	Bush	1
17	W122414	Washer	1
18	NM6N	Nut	1
19	B0630M	Bolt	1
20	AM018	Chain, Steering	1
21	SW13	Wheel, Steering Incl Cover	1
22	DP10	Pin, Roll	1
23	SH0512C	Screw	4
24	WS050216	Washer, Lock, Spring	4
25	W05M202	Washer	4
26	89100	Fastener, Pushon	1
27	SPPK5X16	Screw	2


Model A13109G, A13209G, A13309G, A13409G:-Steering Components - Taper Hub (Keyed) Steering Wheel

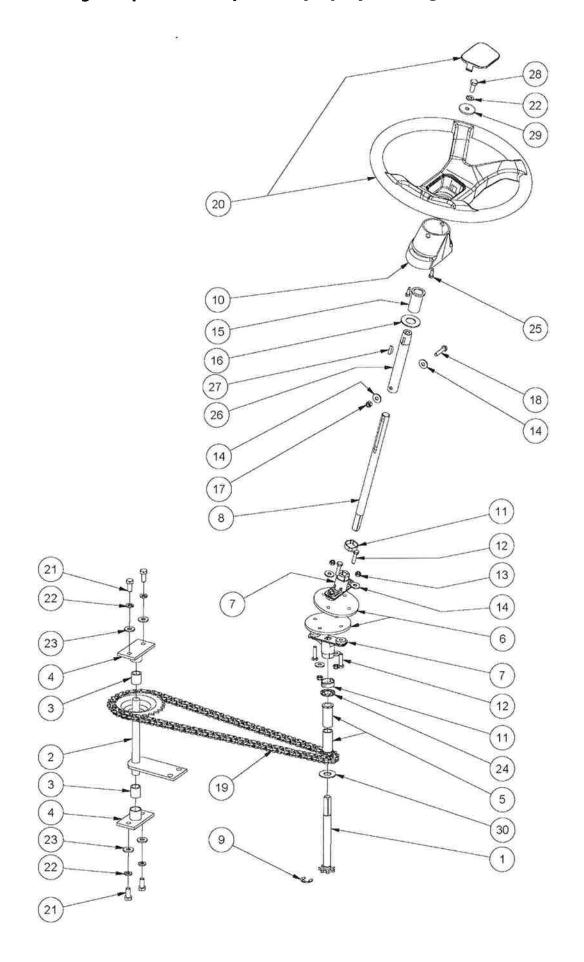

Model A13109G, A13209G, A13309G, A13409G:-Steering Components - Taper Hub (Keyed) Steering Wheel

ITEM	PART NUMBER	DESCRIPTION	QTY
1	95006	Shaft, Steering, Lower	1
2	95007	Idler, Steering	1
3	AM215	Idler Bush	2
4	AM255	Steering Idler Shaft Mtg Brkt	2
5	AM017C1	Steering Shaft Bush With Collar	2
6	AM25399J	Disc, Universal Joint	1
7	89097	Steering Shaft Yoke	2
8	A131087Z	Shaft, Steering, Upper	1
9	C05	Circlip, Ext, "E"Type	1
10	A131009	Cover, Shaft, Steering	1
11	OC21	"O" Clip	2
12	B0625M	Bolt	4
13	NM6NT	Nut	4
14	W041216	Washer	6
15	13012	Bush, Flanged, Nylon	1
16	W122414	Washer	1
17	NM6N	Nut	1
18	B0630M	Bolt	1
19	AM018	Chain, Steering	1
20	SW13T	Wheel, Steering, 13", 3/4" Taper Hub+ Cover	1
21	SH0512C	Screw	4
22	WS050216	Washer, Lock, Spring	5
23	W05M202	WASHER	4
24	89100	Fastener, Pushon, Round	1
25	SPPK5X16	Screw, Pan	2
26	A131109Z	Shaft, Steering, Top, 3/4" Taper	1
27	SK09	Key, Woodruff	1
28	SH0512F	Screw	1
29	W052003	Washer	1
30	W092016	Washer	1


Model A14310K, A14410K, A14510K:- Steering Components

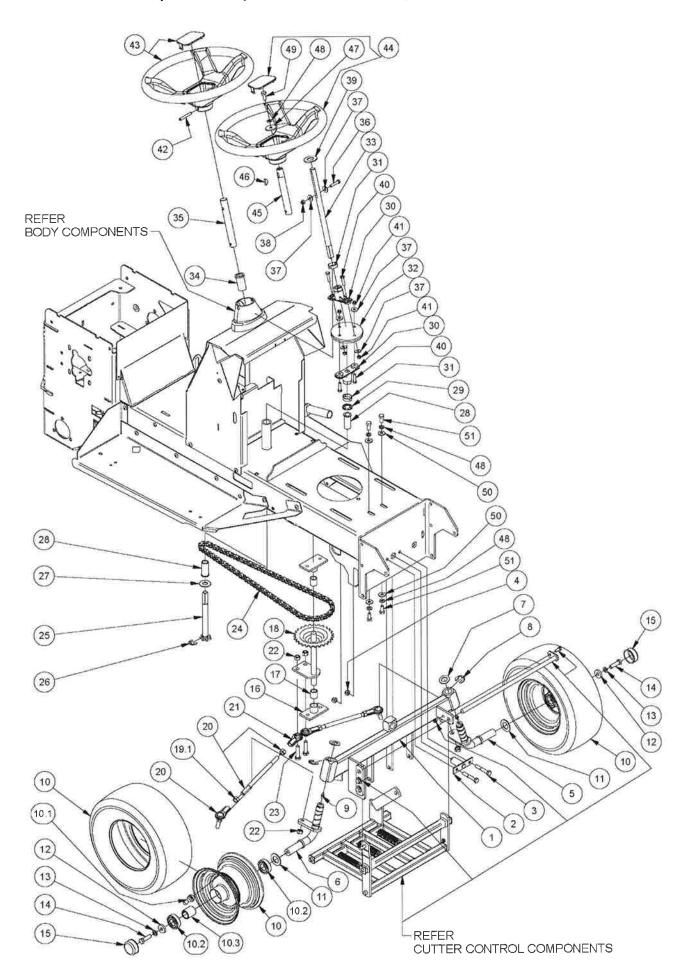

Model A14310K, A14410K, A14510K:- Steering Components

ITEM	PART NUM-	DESCRIPTION	OTY	ITEM	PART NUM-	DESCRIPTION	QTY
1	A142103R	Beam, Axle, Front, Red	1	40	B0625M	Bolt	4
2	13242	Pin, Pivot, Front Axle	1	41	NM6NT	Nut	6
3	B0850M	Bolt	2	42	DP10	Pin, Roll, Spring	1
4	NM8NT	Nut	4	43	SW13	Wheel, Steering (Roll Pin Type)	1
5	13203	Axle, Stub, Left	1	44	SW13T	Wheel, Steering (Keyed Type)	1
6	13204	Axle, Stub, Right	1	45	A131109Z	Shaft, Steering, Top	1
7	AM336	Washer, Sealing, Shaft	2	46	SK09	Key	1
8	C02	Circlip, Ext, 'E' Type	2	47	W052003	Washer	1
9	GNTF3	Nipple, Grease	2	48	WS050216	Washer, Lock, Spring	5
10	A139032	Wheel	2	49	SH0512F	Screw	1
10.1	VSS	Valve, Tubeless, Snap-In	1	50	W05M202	Washer	6
10.2	BB204212N	Bearing, Ball	2	51	SH0512C	Screw	4
10.3	AM021	Sleeve, Spacer, Bearing	1				
11	W20MN	Washer	2				
12	13107	Washer	2				
13	WS06081.5	Washer, Lock, Spring	2				
14	SH0620F	Screw	2				
15	A116060	Cap, Hub	2				
16	AM255	Steering Idler Shaft Mtg Brkt	2				
17	AM215	Idler Bush	2				
18	90271	Idler, Steering	1				
19	AM256	Tie Rod Inc. Nuts	2				
19.1	N06F	Nut	2				
20	RE38INTSTUD	End, Rod, Stamp, Unf, 3/8"Int, Stud Ball	2				
21	AM337	End, Rod, Stamp, 3/8"Int, Shoulder Ball	2				
22	N06FC	Nut, Hex, Conelok	4				
23	B0624F	Bolt	2				
24	AM018	Chain, Steering Incl Link	1				
	SAM019	Connecting Link					
25	95006	Shaft, Steering, Lower	1				
26	C05	Circlip, Ext, "E"Type	1				
27	W092016	Washer	1				
28	AM017C1	Steering Shaft Bush With Collar	2				
29	89100	Fastener, Push on, Round	1				
30	89097	Steering Shaft Yoke	2				
31	OC21	"O" Clip	2				
32	AM25399J	Disc, Universal Joint	1				
33	A131087Z	Shaft, Steering, Upper	1				
34	13012	Bush, Flanged, Nylon	1				
35	A131089Z	Shaft, Steering, Top	1				
36	B0630M	Bolt	1				
37	W041216	Washer	6				
38	NM6N	Nut	1				
39	W122414	Washer	1				


Model A12208G, A12308G, A12408G: Rear Axle Drive Components

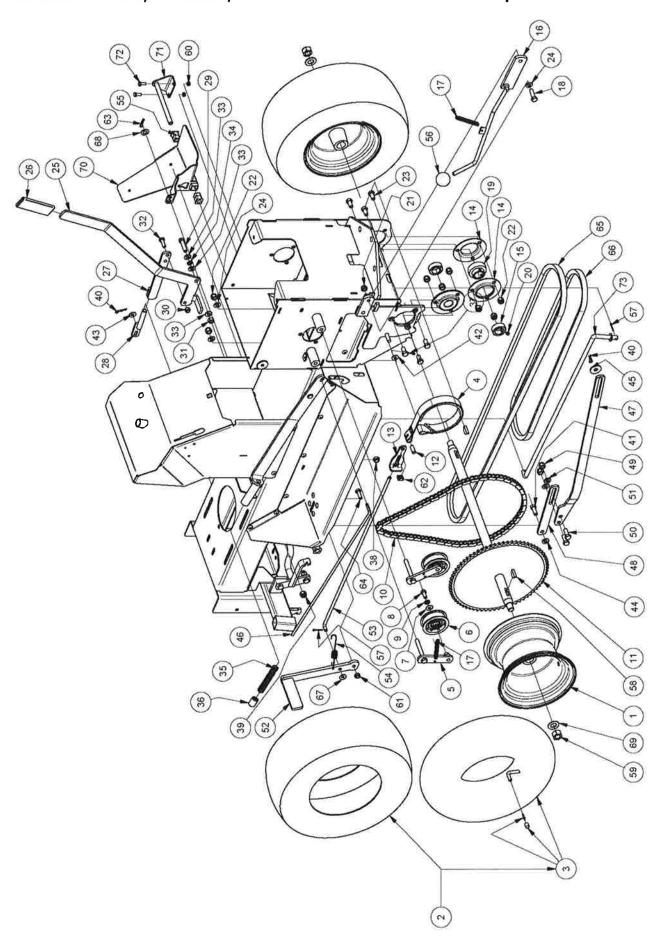

Model A12208G, A12308G, A12408G :- Rear Axle Drive Components

1. MM194 RIm 2 40 RP01 Pin, 'R' 2 1 2 TifoS0X8 Tube 1 42 W041216 Washer, Flat 1 4 130230SE Brake, Ext, Drum Type 1 43 W051218 Washer, Flat 1 5 M362 Arm, Chain Tensioner 2 45 W050218 Washer, Flat 1 6 PIFBB126598A Idler, Flat 2 46 A108003Z Rod, Adjust, Height, Cut 1 7 W051218 Washer, Flat 2 47 A108009Z Link, Float 32" 1 8 N5112C Screw 2 48 95120 Link, Float 38" 1 10 231901 Drive Chain Incl Con Link 1 49 NF06CN Nut 5 11 231903081 Rear Axle 1 50 SH016C Screw 2 48 95120 Link, Float 32" 1 12 31903081 Rear Axle 1 53 95106 Wsber, Flat 2 50 NH061216	ITEN	ITEM PART NUMBER DESCRIPTION			ITEM PART NUMBER DESCRIPTION			
3 STU650X8 Tube 1 42 W041216 Washer, Flat 1 4 1302305E Brake, Ext, Drum Type 1 43 W051218 Washer, Flat 1 5 AM362 Lining 4 W061216 Washer, Flat 1 6 PIFBB126598A Idler, Flat 2 45 A108003Z Red, Adjust, Height, Cut 1 7 W05121B Washer, Flat 2 47 A108003Z Link, Float 32° 1 8 SH0512C Screw 2 47 A109009Z Link, Float 32° 1 9 WS050216 Washer, Lock, Spring 2 48 95120 Link, Adjust, Front 1 10 231901 Drive Chain Con Link 1 49 NF06CN Nut 2 11 231903081 Rear Axle 1 53 95106 Brack Actuator 1 52 95103 Pedal, Brake 1 12 231903 Plante, Brake, Actuator	1	AM194	Rim	2	40	RP01	Pin, 'R'	2
1 1302305E Brake, Ext, Drum Type 1 43 W051218 Washer, Flat 1 1 1 1 1 1 1 1 1	2	TT650X8	Tyre & Tube	2	41	SH0616C	Screw	1
13023-02	3	STU650X8	Tube	1	42	W041216	Washer, Flat	1
5 AM362 Arm. Chain Tensioner 2 45 W0620HD Washer, Flat 1 6 PIFBB126598A Idler, Flat 2 45 A108003Z Rod, Adjust, Height, Cut 1 7 W05121B Washer, Ibat 2 47 A108003Z Rod, Adjust, Height, Cut 1 8 SH0512C Screw 2 48 95120 Link, Float 38" 1 9 WS050216 Washer, Lock, Spring 2 48 95120 Link, Float 38" 1 10 231901 Drive Chain Cnot Link 1 51 W061216 Washer, Flat 2 11 231903081 Rear Axle 1 51 W061216 Washer, Flat 2 12 95104 Pin, Brake, Actuator 1 52 95103 Pedal, Brake 1 1 13 95106 Pin, Brake, Actuator 1 52 95103 Drum Brake, Rod after 08/08 1 1 1 1 1 1	4	1302305E	Brake, Ext, Drum Type	1	43	W051218	Washer, Flat	1
6 PIFBB1265981 Idler, Flat 2 46 A1080032 Rod, Adjust, Height, Cut 1 7 W051218 Washer, Flat 2 47 A1080092 Link, Float 32" 1 8 S10512C Screw 2 418 95120 Link, Float 38" 1 10 231901 Drive Chain Incl Con Link 1 49 NF06CN Nut 2 11 23190308 Rear Axle 1 51 W061216 Washer, Flat 2 12 23190308 Rear Axle 1 51 W061216 Washer, Flat 2 13 95106 Bracket, Brake Actuator 1 52 95103 Pedal, Brake 1 14 AM024 Flangette 1 53 95105 Drum Brake, Rod after 08/08 1 15 AM025 Lock Collar 2 54 AM183 Spring, Extension, Park Brake after 08/08 1 56 AM230 Bush - Plastic 2 16 AM284G05 Seve		13023-02	Lining		44	W061216	Washer, Flat	1
7 W051218 Washer, Flat 2 47 A1080092 Link, Float 32" 1 8 SH0512C Screw 2 48 91100 Link, Float 38" 1 9 W5050216 Washer, Lock, Spring 2 48 91200 Link, Float 38" 1 1 231901 Drive Chain Incl Con Link 50 SH0616C Screw 2 11 231903083 Rear Axle 1 51 W061216 Washer, Flat 2 12 95104 Pin, Brake, Actuator 1 52 95103 Pedal, Brake 1 13 95106 Bracket, Brake Actuator 1 52 95105 Drum Brake, Rod before 08/08 1 15 AM025 Lock Collar 2 54 AM183 Spring, Extension, Park Brake 1 16 AM2840 Lever, Park Brake after 08/08 1 55 AM230 Bush - Plastic 2 18 B6620C Bolt 8 861 8	5	AM362	Arm, Chain Tensioner	2	45	W0620HD	Washer, Flat	1
8 SHOS12C Screw 2 48 9512O Link, Float 38" 1 9 WSOS0216 Washer, Lock, Spring 2 48 9512O Link, Adjust, Front 1 10 231901 Drive Chain Incl Con Link 1 49 NFO6CN Nut 2 11 231904 Drive Chain Con Link 1 51 W961216 Washer, Flat 2 11 23190308 Rear Axle 1 51 W061216 Washer, Flat 2 12 95104 Pin, Brake, Actuator 1 53 95103 Pedal, Brake 1 13 95106 Bracket, Brake Actuator 1 53 95103 Drum Brake, Rod before 08/08 1 14 AM024 Flangette 4 - AM183 Spring, Extension 1 55 AM230 Bush - Plastic 1 16 AM284G05 Lever, Park Brake after 08/08 1 56 AM290 Hand Brake Knob 1 17	6	PIFBB126598A	Idler, Flat	2	46	A108003Z	Rod, Adjust, Height, Cut	1
9 WSOS0216 Washer, Lock, Spring 2 48 95120 Link, Adjust, Front 1 10 231901 Drive Chain Incl Con Link 1 49 NFOGCN Nut 2 23190303 Rear Axle 1 50 SH0616C Screw 2 12 23190303 Rear Axle 1 52 95103 Pedal, Brake 1 12 295104 Pin, Brake, Actuator 1 53 95105 Drum Brake, Rod before 08/08 1 14 AM024 Flangette 4 A122105Z Drum Brake, Rod after 08/08 1 15 AM025 Lever, Park Brake before 08/08 1 55 AM230 Bush - Plastic 2 A1 M288 Spring, Extension 2 57 CP3-220 Pin, Split 2 18 B0620C Bolt 1 58 K18 Key 2 19 BB25SAN Bearing, Ball 2 59 N10F Nut 3 <td>7</td> <td>W051218</td> <td>Washer, Flat</td> <td>2</td> <td>47</td> <td>A108009Z</td> <td>Link, Float 32"</td> <td>1</td>	7	W051218	Washer, Flat	2	47	A108009Z	Link, Float 32"	1
10 231901 Drive Chain Incl Con Link 1 49 NF6CN Nut 2 11 231904 Drive Chain Con Link 50 SH0616C Screw 2 11 231903081 Rear Axle 1 51 W061216 Washer, Flat 2 12 95104 Pin, Brake, Actuator 1 52 95103 Pedal, Brake 1 13 95106 Bracket, Brake Actuator 1 53 95105 Drum Brake, Rod before 08/08 1 14 AM024 Flangette 4 A122105Z Drum Brake, Rod after 08/08 1 16 AM284055 Lever, Park Brake before 08/08 1 55 AM230 Bush - Plastic 2 17 AM288 Spring, Extension 2 57 CP3-220 Pin, Split 2 18 B0620C Bolt 1 58 K18 Key 2 19 B825SAN Bearing, Ball 2 59 N10F Nut 3 <td>8</td> <td>SH0512C</td> <td>Screw</td> <td>2</td> <td></td> <td>A119018Z</td> <td>Link, Float 38"</td> <td>1</td>	8	SH0512C	Screw	2		A119018Z	Link, Float 38"	1
S231904 Drive Chain Con Link 50 SH0616C Screw 2 11 23190308J Rear Axle 1 51 W061216 Washer, Flat 2 12 95104 Pin, Brake, Actuator 1 52 95103 Pedal, Brake 1 13 95106 Bracket, Brake Actuator 1 52 95105 Drum Brake, Rod before 08/08 1 14 AM024 Flangette 4 A122105Z Drum Brake, Rod after 08/08 1 15 AM284G05 Lever, Park Brake before 08/08 1 55 AM230 Bush - Plastic 2 17 AM288 Spring, Extension 2 57 CP3-220 Pin, Split 2 18 B0620C Bolt 1 58 K18 Key 2 19 BB25SAN Bearing, Ball 2 59 N10F Nut 2 20 GS0505C Screw, Set 2 60 NM6NT Nut 1	9	WS050216	Washer, Lock, Spring	2	48	95120	Link, Adjust, Front	1
11 231903081 Rear Axle 1 51 W061216 Washer, Flat 2 12 95104 Pin, Brake, Actuator 1 52 95103 Pedal, Brake 1 13 95106 Bracket, Brake Actuator 1 53 95105 Drum Brake, Rod before 08/08 1 14 AM024 Flangette 4 - A1221052 Drum Brake, Rod after 08/08 1 15 AM025 Lock Collar 2 54 AM183 Spring, Extension, Park Brake 1 16 AM284G05 Lever, Park Brake after 08/08 1 55 AM230 Bush - Plastic 2 17 AM288 Spring, Extension 2 57 CP3-220 Plan, Split 2 18 B0620C Bolt 1 58 K18 Key 2 19 BB25SAN Bearing, Ball 2 59 N10F Nut 1 20 GS050SC Screw, Set 2 60 NM6NT	10	231901	Drive Chain Incl Con Link	1	49	NF06CN	Nut	2
12 95104 Pin, Brake, Actuator 1 52 95103 Pedal, Brake 1 13 95106 Bracket, Brake Actuator 1 53 95105 Drum Brake, Rod before 08/08 1 14 AM024 Flangette 4 A122105Z Drum Brake, Rod after 08/08 1 15 AM025 Lock Collar 2 54 AM183 Spring, Extension, Park Brake 1 16 AM284G05 Lever, Park Brake before 08/08 1 56 AM290 Hand Brake Knob 1 17 AM288 Spring, Extension 2 57 CP3-220 Pin, Split 2 18 B0620C Bolt 1 58 K18 Key 2 19 B825SAN Bearing, Ball 2 59 N10F Nut 2 20 GS050SC Screw, Set 2 60 NM6NT Nut 1 21 N06CN Nut 1 61 NM8NT Nut, Sqr 1 </td <td></td> <td>S231904</td> <td>Drive Chain Con Link</td> <td></td> <td>50</td> <td>SH0616C</td> <td>Screw</td> <td>2</td>		S231904	Drive Chain Con Link		50	SH0616C	Screw	2
13 95106 Bracket, Brake Actuator 1 53 95105 Drum Brake, Rod before 08/08 1 14 AM024 Flangette 4 A122105Z Drum Brake, Rod after 08/08 1 15 AM025 Lock Collar 2 54 AM183 Spring, Extension, Park Brake 1 16 AM284G05 Lever, Park Brake before 08/08 1 55 AM230 Bush - Plastic 2 A122109Z Lever, Park Brake after 08/08 1 56 AM290 Hand Brake Knob 1 17 AM288 Spring, Extension 2 57 CP3-220 Pin, Split 2 18 B0620C Bolt 1 58 K18 Key 2 19 BB25SAN Bearing, Ball 2 59 N10F Nut 2 20 GS050SC Screw, Set 2 60 NM6NT Nut 1 21 N60CN Nut Nut 8 62 NS05C Nut, Sqr	11	23190308J	Rear Axle	1	51	W061216	Washer, Flat	2
144 AM024 Flangette 4 A122105Z Drum Brake, Rod after 08/08 1 15 AM025 Lock Collar 2 54 AM183 Spring, Extension, Park Brake 1 16 AM284G05 Lever, Park Brake before 08/08 1 55 AM230 Bush - Plastic 2 17 AM288 Spring, Extension 2 57 CP3-220 Pin, Split 2 18 B0620C Bolt 1 58 K18 Key 2 20 GS050SC Screw, Set 2 60 NM6NT Nut 2 21 N06CN Nut 1 61 NM8NT Nut 1 22 NF06CN Nut 8 62 NS05C Nut, Sqr 1 23 SH0612C Screw, Set 6 63 RP01 Pin, 'R' 1 24 W061216 Washer, Flat 3 64 SH0825M Screw 1 25 <t< td=""><td>12</td><td>95104</td><td>Pin, Brake, Actuator</td><td>1</td><td>52</td><td>95103</td><td>Pedal, Brake</td><td>1</td></t<>	12	95104	Pin, Brake, Actuator	1	52	95103	Pedal, Brake	1
15 AM025 Lock Collar 2 54 AM183 Spring, Extension, Park Brake 1 16 AM284G05 Lever, Park Brake before 08/08 1 55 AM230 Bush - Plastic 2 17 AM288 Spring, Extension 2 57 CP3-220 Pin, Split 2 18 B0620C Bolt 1 58 K18 Key 2 19 B825SAN Bearing, Ball 2 59 N10F Nut 2 20 GS0505C Screw, Set 2 60 NM6NT Nut 2 21 N06CN Nut 1 61 NM8NT Nut 1 22 NF06CN Nut 1 61 NM8NT Nut 1 23 SH0612C Screw, Set 6 63 RP01 Pin, 'R' 1 24 W061216 Washer, Flat 3 64 SH0825M Screw 25 A116106Z <td< td=""><td>13</td><td>95106</td><td>Bracket, Brake Actuator</td><td>1</td><td>53</td><td>95105</td><td>Drum Brake, Rod before 08/08</td><td>1</td></td<>	13	95106	Bracket, Brake Actuator	1	53	95105	Drum Brake, Rod before 08/08	1
16 AM284G05 Lever, Park Brake before 08/08 1 55 AM230 Bush - Plastic 2 A122109Z Lever, Park Brake after 08/08 1 56 AM290 Hand Brake Knob 1 17 AM288 Spring, Extension 2 57 CP3-220 Pin, Split 2 18 B0620C Bolt 1 58 K18 Key 2 19 BB25SAN Bearing, Ball 2 59 N10F Nut 2 20 GS0505C Screw, Set 2 60 NM6NT Nut 2 21 N06CN Nut 1 61 NM8NT Nut 1 22 NF06CN Nut 8 62 NS05C Nut, Sqr 1 23 SH0612C Screw, Set 6 63 RP01 Pin, 'R' 1 24 W061216 Washer, Flat 3 64 SH0825M Screw 1 25 A116106Z Disengaging Adj Bushed 1 65 V42 Belt, V 1	14	AM024	Flangette	4		A122105Z	Drum Brake, Rod after 08/08	1
A122109Z Lever, Park Brake after 08/08 1 56 AM290 Hand Brake Knob 1 17 AM288 Spring, Extension 2 57 CP3-220 Pin, Split 2 18 B0620C Bolt 1 58 K18 Key 2 19 BB25SAN Bearing, Ball 2 59 N10F Nut 2 20 GS0505C Screw, Set 2 60 NM6NT Nut 2 21 N06CN Nut 1 61 NM8NT Nut 1 22 NF06CN Nut 8 62 NS05C Nut, Sqr 1 23 SH0612C Screw, Set 6 63 RP01 Pin, 'R' 1 24 W061216 Washer, Flat 3 64 SH0825M Screw 1 25 A116106Z Disengaging Handle 1 65 V42 Belt, V 1 26 AM029 Hand Grip 1 66 V44 Belt, V 38" Cut 28 AM24	15	AM025	Lock Collar	2	54	AM183	Spring, Extension, Park Brake	1
17 AM288 Spring, Extension 2 57 CP3-220 Pin, Split 2 18 B0620C Bolt 1 58 K18 Key 2 19 BB25SAN Bearing, Ball 2 59 N10F Nut 2 20 GS0505C Screw, Set 2 60 NM6NT Nut 2 21 N06CN Nut 1 61 NM8NT Nut 1 22 NF06CN Nut 8 62 NS05C Nut, Sqr 1 23 SH0612C Screw, Set 6 63 RP01 Pin, 'R' 1 24 W061216 Washer, Flat 3 64 SH0825M Screw 1 25 A116106Z Disengaging Handle 1 65 V42 Belt, V 1 26 AM009 Hand Grip 1 66 V44 Belt, V 32" Cut 1 27 AM240 Disengaging Adj B	16	AM284G05	Lever, Park Brake before 08/08	1	55	AM230	Bush - Plastic	2
18 B0620C Bolt 1 58 K18 Key 2 19 BB25SAN Bearing, Ball 2 59 N10F Nut 2 20 GS0505C Screw, Set 2 60 NM6NT Nut 2 21 N06CN Nut 1 61 NM8NT Nut 1 22 NF06CN Nut 8 62 N505C Nut, Sqr 1 23 SH0612C Screw, Set 6 63 RP01 Pin, 'R' 1 24 W061216 Washer, Flat 3 64 SH0825M Screw 1 25 A116106Z Disengaging Handle 1 65 V42 Belt, V 1 26 A8009 Hand Grip 1 66 V44 Belt, V 32" Cut 1 27 AM240 Disengaging Adj Threaded 1 67 W051218 Washer, Flat 1 29 B1040M Bolt <td></td> <td>A122109Z</td> <td>Lever, Park Brake after 08/08</td> <td>1</td> <td>56</td> <td>AM290</td> <td>Hand Brake Knob</td> <td>1</td>		A122109Z	Lever, Park Brake after 08/08	1	56	AM290	Hand Brake Knob	1
19 BB25SAN Bearing, Ball 2 59 N10F Nut 2 20 GS0505C Screw, Set 2 60 NM6NT Nut 2 21 N06CN Nut 1 61 NM8NT Nut 1 22 NF06CN Nut 8 62 NS05C Nut, Sqr 1 23 SH0612C Screw, Set 6 63 RP01 Pin, 'R' 1 24 W061216 Washer, Flat 3 64 SH0825M Screw 1 25 A116106Z Disengaging Handle 1 65 V42 Belt, V 32" Cut 1 26 AM009 Hand Grip 1 66 V44 Belt, V 32" Cut 1 27 AM240 Disengaging Adj Bushed 1 67 W051218 Washer, Flat 1 29 B1040M Bolt 1 68 W071416 Washer, Flat 1 <t< td=""><td>17</td><td>AM288</td><td>Spring, Extension</td><td>2</td><td>57</td><td>CP3-220</td><td>Pin, Split</td><td>2</td></t<>	17	AM288	Spring, Extension	2	57	CP3-220	Pin, Split	2
20 GS050SC Screw, Set 2 60 NM6NT Nut 2 21 N06CN Nut 1 61 NM8NT Nut 1 22 NF06CN Nut 8 62 NS05C Nut, Sqr 1 23 SH0612C Screw, Set 6 63 RP01 Pin, 'R' 1 24 W061216 Washer, Flat 3 64 SH0825M Screw 1 25 A116106Z Disengaging Handle 1 65 V42 Belt, V 32" Cut 1 26 AM009 Hand Grip 1 66 V44 Belt, V 32" Cut 1 27 AM240 Disengaging Adj Bushed 1 V51 Belt, V 38" Cut 1 28 AM24105C Disengaging Adj Threaded 1 67 W051218 Washer, Flat 1 30 NM8NT Nut 1 68 W071416 Washer, Flat 2	18	B0620C	Bolt	1	58	K18	Key	2
21 N06CN Nut 1 61 NM8NT Nut 1 22 NF06CN Nut 8 62 NS05C Nut, Sqr 1 23 SH0612C Screw, Set 6 63 RP01 Pin, 'R' 1 24 W061216 Washer, Flat 3 64 SH0825M Screw 1 25 A116106Z Disengaging Handle 1 65 V42 Belt, V 32" Cut 1 26 AM009 Hand Grip 1 66 V44 Belt, V 32" Cut 1 27 AM240 Disengaging Adj Bushed 1 V51 Belt, V 38" Cut 28 AM24105C Disengaging Adj Threaded 1 67 W051218 Washer, Flat 1 29 B1040M Bolt 1 68 W071416 Washer, Flat 1 30 NM8NT Nut 1 70 A108013R Pedal, Drive 1 31 NM10NT Nut 3 72 SH0616M Screw 2	19	BB25SAN	Bearing, Ball	2	59	N10F	Nut	2
22 NF06CN Nut 8 62 NS05C Nut, Sqr 1 23 SH0612C Screw, Set 6 63 RP01 Pin, 'R' 1 24 W061216 Washer, Flat 3 64 SH0825M Screw 1 25 A116106Z Disengaging Handle 1 65 V42 Belt, V 1 26 AM009 Hand Grip 1 66 V44 Belt, V 32" Cut 1 27 AM240 Disengaging Adj Bushed 1 V51 Belt, V 38" Cut 1 28 AM24105C Disengaging Adj Threaded 1 67 W051218 Washer, Flat 1 29 B1040M Bolt 1 68 W071416 Washer, Flat 1 30 NM8NT Nut 1 70 A108013R Pedal, Drive 1 31 WSM10X3.7X2.5 Washer, Flat 3 72 SH0616M Screw 2 34	20	GS0505C	Screw, Set	2	60	NM6NT	Nut	2
23 SH0612C Screw, Set 6 63 RP01 Pin, 'R' 1 24 W061216 Washer, Flat 3 64 SH0825M Screw 1 25 A116106Z Disengaging Handle 1 65 V42 Belt, V 32" Cut 1 26 AM009 Hand Grip 1 66 V44 Belt, V 32" Cut 1 27 AM240 Disengaging Adj Bushed 1 V51 Belt, V 38" Cut 1 28 AM24105C Disengaging Adj Threaded 1 67 W051218 Washer, Flat 1 29 B1040M Bolt 1 68 W071416 Washer, Flat 1 30 NM8NT Nut 1 69 W102015 Washer, Flat 2 31 NM10NT Nut 1 70 A108013R Pedal, Drive 1 32 SH0825M Screw 2 2 34 WSM10X3.7X2.5 Washer, Flat 3	21	N06CN	Nut	1	61	NM8NT	Nut	1
24 W061216 Washer, Flat 3 64 SH0825M Screw 1 25 A116106Z Disengaging Handle 1 65 V42 Belt, V 1 26 AM009 Hand Grip 1 66 V44 Belt, V 32" Cut 1 27 AM240 Disengaging Adj Bushed 1 V51 Belt, V 38" Cut 1 28 AM24105C Disengaging Adj Threaded 1 67 W051218 Washer, Flat 1 29 B1040M Bolt 1 68 W071416 Washer, Flat 1 30 NM8NT Nut 1 69 W102015 Washer, Flat 2 31 NM10NT Nut 1 70 A108013R Pedal, Drive 1 32 SH0825M Screw 1 71 A116015Z Pivot, Pedal, Drive 1 33 W10MN Washer, Flat 3 72 SH0616M Screw 2 34 WSM10X3.7X2.5 Washer, Flat 3 73 A108011Z Link, Drive, Long <td>22</td> <td>NF06CN</td> <td>Nut</td> <td>8</td> <td>62</td> <td>NS05C</td> <td>Nut, Sqr</td> <td>1</td>	22	NF06CN	Nut	8	62	NS05C	Nut, Sqr	1
25 A116106Z Disengaging Handle 1 65 V42 Belt, V 1 26 AM009 Hand Grip 1 66 V44 Belt, V 32" Cut 1 27 AM240 Disengaging Adj Bushed 1 V51 Belt, V 38" Cut 28 AM24105C Disengaging Adj Threaded 1 67 W051218 Washer, Flat 1 29 B1040M Bolt 1 68 W071416 Washer, Flat 1 30 NM8NT Nut 1 69 W102015 Washer, Flat 2 31 NM10NT Nut 1 70 A108013R Pedal, Drive 1 32 SH0825M Screw 1 71 A116015Z Pivot, Pedal, Drive 1 33 W10MN Washer, Flat 3 72 SH0616M Screw 2 34 WSM10X3.7X2.5 Washer, Lock, Spring 1 73 A108011Z Link, Drive, Long 1 36 AM013Q2 Ht Adj Pawl Push Rod Button 1 3 3 4	23	SH0612C	Screw, Set	6	63	RP01	Pin, 'R'	1
26 AM009 Hand Grip 1 66 V44 Belt, V 32" Cut 1 27 AM240 Disengaging Adj Bushed 1 V51 Belt, V 38" Cut 28 AM24105C Disengaging Adj Threaded 1 67 W051218 Washer, Flat 1 29 B1040M Bolt 1 68 W071416 Washer, Flat 1 30 NM8NT Nut 1 69 W102015 Washer, Flat 2 31 NM10NT Nut 1 70 A108013R Pedal, Drive 1 32 SH0825M Screw 1 71 A116015Z Pivot, Pedal, Drive 1 33 W10MN Washer, Flat 3 72 SH0616M Screw 2 34 WSM10X3.7X2.5 Washer, Lock, Spring 1 73 A108011Z Link, Drive, Long 1 35 AM012 Ht Adj Pawl Push Rod Button 1 3 4 4 4 4 4 4 4 4 4 4 4 4 4 <	24	W061216	Washer, Flat	3	64	SH0825M	Screw	1
27 AM240 Disengaging Adj Bushed 1 V51 Belt, V 38" Cut 28 AM24105C Disengaging Adj Threaded 1 67 W051218 Washer, Flat 1 29 B1040M Bolt 1 68 W071416 Washer, Flat 1 30 NM8NT Nut 1 69 W102015 Washer, Flat 2 31 NM10NT Nut 1 70 A108013R Pedal, Drive 1 32 SH0825M Screw 1 71 A116015Z Pivot, Pedal, Drive 1 33 W10MN Washer, Flat 3 72 SH0616M Screw 2 34 WSM10X3.7X2.5 Washer, Lock, Spring 1 73 A108011Z Link, Drive, Long 1 35 AM012 Ht Adj Pawl Push Rod Spring 1 73 A108011Z Link, Drive, Long 1 36 AM013Q2 Ht Adj Pawl Push Rod Button 1 3 72 Yasher, Lock, Spring 1 73 Yasher, Lock, Spring 1 73 Yasher, Lock, Spring	25	A116106Z	Disengaging Handle	1	65	V42	Belt, V	1
28 AM24105C Disengaging Adj Threaded 1 67 W051218 Washer, Flat 1 29 B1040M Bolt 1 68 W071416 Washer, Flat 1 30 NM8NT Nut 1 69 W102015 Washer, Flat 2 31 NM10NT Nut 1 70 A108013R Pedal, Drive 1 32 SH0825M Screw 1 71 A116015Z Pivot, Pedal, Drive 1 33 W10MN Washer, Flat 3 72 SH0616M Screw 2 34 WSM10X3.7X2.5 Washer, Lock, Spring 1 73 A108011Z Link, Drive, Long 1 35 AM012 Ht Adj Pawl Push Rod Spring 1 73 A108011Z Link, Drive, Long 1 36 AM013Q2 Ht Adj Pawl Push Rod Button 1 3 74 A108011Z Link, Drive, Long 1 37 CP3-220 Pin, Split 3 74 A108011Z A108011Z A108011Z A108011Z A108011Z A108011Z <	26	AM009	Hand Grip	1	66	V44	Belt, V 32" Cut	1
29 B1040M Bolt 1 68 W071416 Washer, Flat 1 30 NM8NT Nut 1 69 W102015 Washer, Flat 2 31 NM10NT Nut 1 70 A108013R Pedal, Drive 1 32 SH0825M Screw 1 71 A116015Z Pivot, Pedal, Drive 1 33 W10MN Washer, Flat 3 72 SH0616M Screw 2 34 WSM10X3.7X2.5 Washer, Lock, Spring 1 73 A108011Z Link, Drive, Long 1 35 AM012 Ht Adj Pawl Push Rod Spring 1 <td>27</td> <td>AM240</td> <td>Disengaging Adj Bushed</td> <td>1</td> <td></td> <td>V51</td> <td>Belt, V 38" Cut</td> <td></td>	27	AM240	Disengaging Adj Bushed	1		V51	Belt, V 38" Cut	
30 NM8NT Nut 1 69 W102015 Washer, Flat 2 31 NM10NT Nut 1 70 A108013R Pedal, Drive 1 32 SH0825M Screw 1 71 A116015Z Pivot, Pedal, Drive 1 33 W10MN Washer, Flat 3 72 SH0616M Screw 2 34 WSM10X3.7X2.5 Washer, Lock, Spring 1 73 A108011Z Link, Drive, Long 1 35 AM012 Ht Adj Pawl Push Rod Spring 1 4	28	AM24105C	Disengaging Adj Threaded	1	67	W051218	Washer, Flat	1
31 NM10NT Nut 1 70 A108013R Pedal, Drive 1 32 SH0825M Screw 1 71 A116015Z Pivot, Pedal, Drive 1 33 W10MN Washer, Flat 3 72 SH0616M Screw 2 34 WSM10X3.7X2.5 Washer, Lock, Spring 1 73 A108011Z Link, Drive, Long 1 35 AM012 Ht Adj Pawl Push Rod Spring 1 4	29	B1040M	Bolt	1	68	W071416	Washer, Flat	1
32 SH0825M Screw 1 71 A116015Z Pivot, Pedal, Drive 1 33 W10MN Washer, Flat 3 72 SH0616M Screw 2 34 WSM10X3.7X2.5 Washer, Lock, Spring 1 73 A108011Z Link, Drive, Long 1 35 AM012 Ht Adj Pawl Push Rod Spring 1 4 4 4 36 AM013Q2 Ht Adj Pawl Push Rod Button 1 4 <td>30</td> <td>NM8NT</td> <td>Nut</td> <td>1</td> <td>69</td> <td>W102015</td> <td>Washer, Flat</td> <td>2</td>	30	NM8NT	Nut	1	69	W102015	Washer, Flat	2
33 W10MN Washer, Flat 3 72 SH0616M Screw 2 34 WSM10X3.7X2.5 Washer, Lock, Spring 1 73 A108011Z Link, Drive, Long 1 35 AM012 Ht Adj Pawl Push Rod Spring 1	31	NM10NT	Nut	1	70	A108013R	Pedal, Drive	1
34 WSM10X3.7X2.5 Washer, Lock, Spring 1 73 A108011Z Link, Drive, Long 1 35 AM012 Ht Adj Pawl Push Rod Spring 1	32	SH0825M	Screw	1	71	A116015Z	Pivot, Pedal, Drive	1
35 AM012 Ht Adj Pawl Push Rod Spring 1 36 AM013Q2 Ht Adj Pawl Push Rod Button 1 37 CP3-220 Pin, Split 3 38 NFM10 Nut 1	33	W10MN	Washer, Flat	3	72	SH0616M	Screw	2
36 AM013Q2 Ht Adj Pawl Push Rod Button 1 37 CP3-220 Pin, Split 3 38 NFM10 Nut 1	34	WSM10X3.7X2.5	Washer, Lock, Spring	1	73	A108011Z	Link, Drive, Long	1
37 CP3-220 Pin, Split 3 38 NFM10 Nut 1	35	AM012	Ht Adj Pawl Push Rod Spring	1				
38 NFM10 Nut 1	36	AM013Q2	Ht Adj Pawl Push Rod Button	1				
	37	CP3-220	Pin, Split	3				
20 NEOCON Nut 1	38	NFM10	Nut	1				
א אורחסרוא ואמר ד	39	NF06CN	Nut	1				


Model A13109G, A13209G, A13309G:- Rear Axle Drive Components

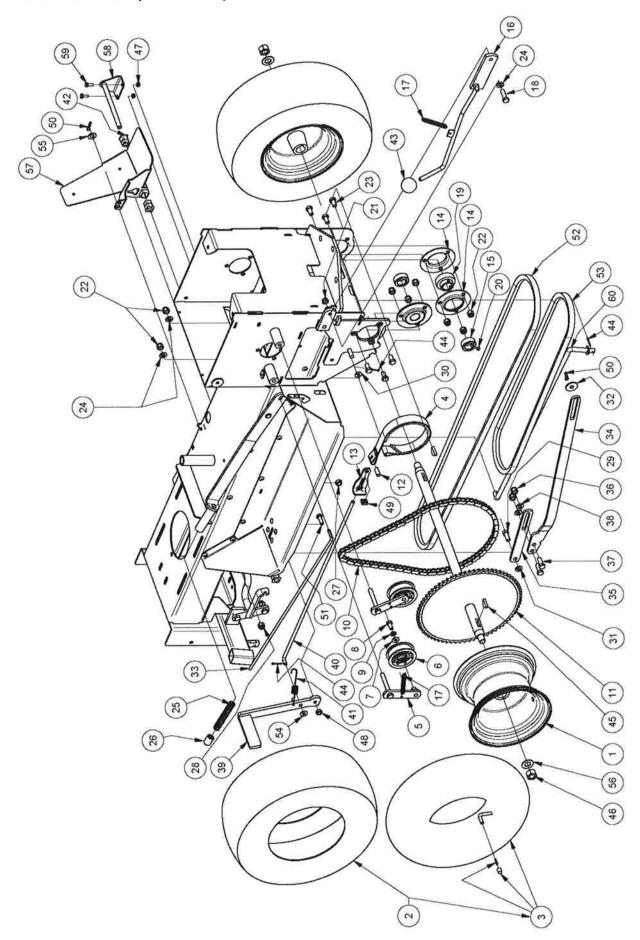

Model A13109G, A13209G, A13309G :- Rear Axle Drive Components

ITEM	PART NUMBER	DESCRIPTION	QTY
1	AM194	Rim	2
2	TT650X8	Tyre & Tube	2
3	STU650X8	Tube	1
4	1302305E	Brake, Ext, Drum Type	1
	13023-02	Lining	1
5	AM362	Arm, Chain Tensioner	2
6	PIFBB126598A	Idler, Flat	2
7	W051218	Washer, Flat	2
8	SH0512C	Screw	2
9	WS050216	Washer, Lock, Spring	2
10	231901	Drive Chain Incl Con Link	1
4201	S231904	Drive Chain Con Link	1
11	23190308J	Rear Axle	1
12	95104	Pin, Brake, Actuator	1
13	95106	Bracket, Brake Actuator	1 4
14	AM024	Flangette Lock Collar	2
15 16	AM025 A122109Z	Lever, Park Brake	1
17	AM288	Spring, Extension, Park Brake/Chain Adjust	2
18	B0620C	Bolt	1
19	BB25SAN	Bearing, Ball	2
20	GS0505C	Screw	2
21	N06CN	Nut	1
22	NF06CN	Nut	8
23	SH0612C	Screw	6
24	W061216	Washer	3
25	AM012	Height Adjustment Pawl Push Rod Spring	1
26	AM013Q2	Height Adjustment Pawl Push Rod Button	1
27	N06CN	Nut	1
28	NF06CN	Nut	1
29	SH0616C	Screw	1
30	W041216	Washer	1
31	W061216	Washer	1
32	W0620HD	Washer	1
33	A108003Z	Rod, Adjust, Height, Cut	1
34	A108009Z	Link, Float, Rear	1
35	95120	Link, Adjust, Front	1
36	NF06CN	Nut	2
37	SH0616C	Screw	2
38	W061216	Washer	2
39	95103	Pedal, Brake	1 1
40	A122105Z	Drum Brake, Rod	1
41 42	AM183 AM230	Spring, Extension, Park Brake Bush - Plastic	2
43	AM290	Hand Brake Knob	1
44	CP3-220	Pin	2
45	K18	Key	2
46	N10F	Nut	2
47	NM6NT	Nut	2
48	NM8NT	Nut	1
49	NS05C	Nut, Sqr	1
50	RP01	Pin, 'R'	1
51	SH0825M	Screw	1
52	V42	Belt, V	1
53	V44	Belt, V 32" Cut only	1
54	W051218	Washer	1
55	W071416	Washer	1
56	W102015	Washer	2
57	A108013R	Pedal, Drive, Red	1
58	A108015Z	Pivot, Pedal, Drive	1
59	SH0616M	Screw	2
60	A108011Z	Link, Drive, Long	1


Model A14310K, A14510K:- Rear Axle Drive Components

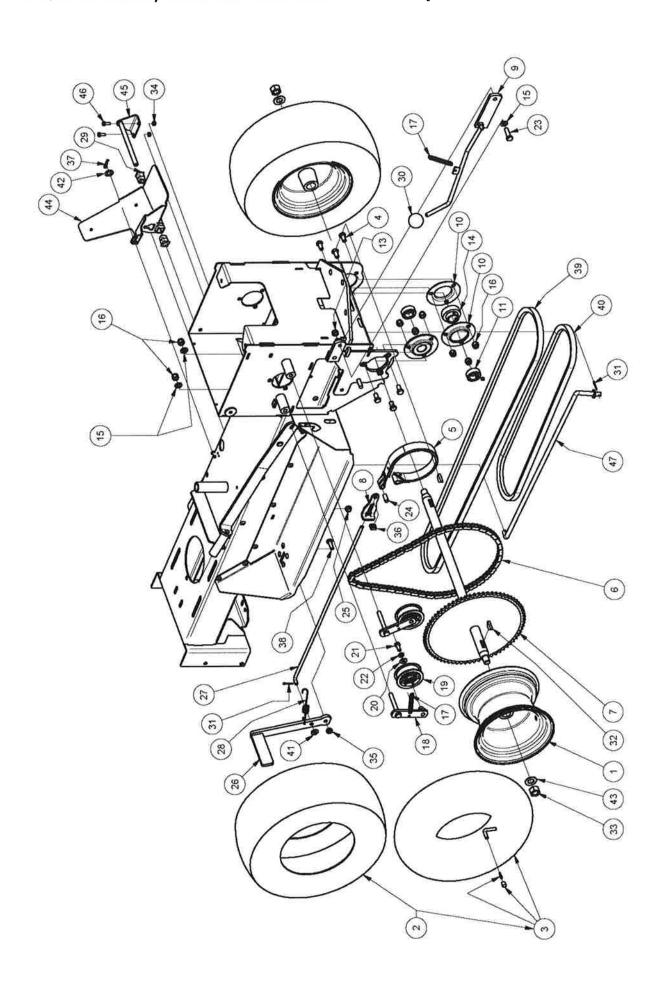

Model A14310K, A14510K:- Rear Axle Drive Components

ITEM	PART NUMBER	DESCRIPTION	QTY
1	AM194	Rim	2
2	TT650X8	Tyre & Tube	2
3	STU650X8	Tube	1
4	SH0612C	Screw, Set	12
5	1302305E	Brake, Ext, Drum Type	1
	13023-02	Lining	1
	PR0207ALCSK	Rivet	2
6	231901	Drive Chain Incl Con Link	1
	S231904	Connecting Link	1
7	23190308J	Rear Axle	1
8	95106	Bracket, Brake Actuator	1
9	A122109Z11B	Lever, Brake, Park	1
10	AM024	Flangette 25mm	4
11	AM0251	Lock Collar 25mm	2
13	N06CN	Nut	1
14	BB25SAN	Bearing, Ball	2
15	W061216	Washer	8
16	NF06CN	Nut	6
17	AM288	Spring, Extension	3
18	A142362Z	Arm, Chain Tensioner	2
19	PIFBB126598A	Idler, Flat	2
20	W051218	Washer	2
21	SH0512C	Screw	2
22	WS050216	Washer, Lock, Spring	2
23	B0620C	Bolt	1
24	95104	Pin, Brake, Actuator	1
25	N06CN	Nut	1
26	95103	Pedal, Brake	1
27	A122105Z	Drum Brake, Rod	1
28	AM183	Spring, Extension, Park Brake	1
29	AM230	Bush - Plastic	2
30	AM290	Hand Brake Knob	1
31	CP3-220	Pin, Split	2
32	K18	Key	2
33	N10F	Nut	2
34	NM6NT	Nut	2
35	NM8NT	Nut	1
36	NS05C	Nut, Sqr	1
37	RP01	Pin, 'R'	1
38	SH0825M	Screw	1
39	V42	Belt, V	1
40	V44	Belt, V	1
41	W051218	Washer	1
42	W071416	Washer	1
43	W102015	Washer	2
44	A108013R	Pedal, Drive	1
45	A116015Z	Pivot, Pedal, Drive	1
46	SH0616M	Screw	2
47	A108011Z	Link, Drive, Long	1


Model A12508L, A13409G, A14410K:-Rear Bagger—Control and Drive Components

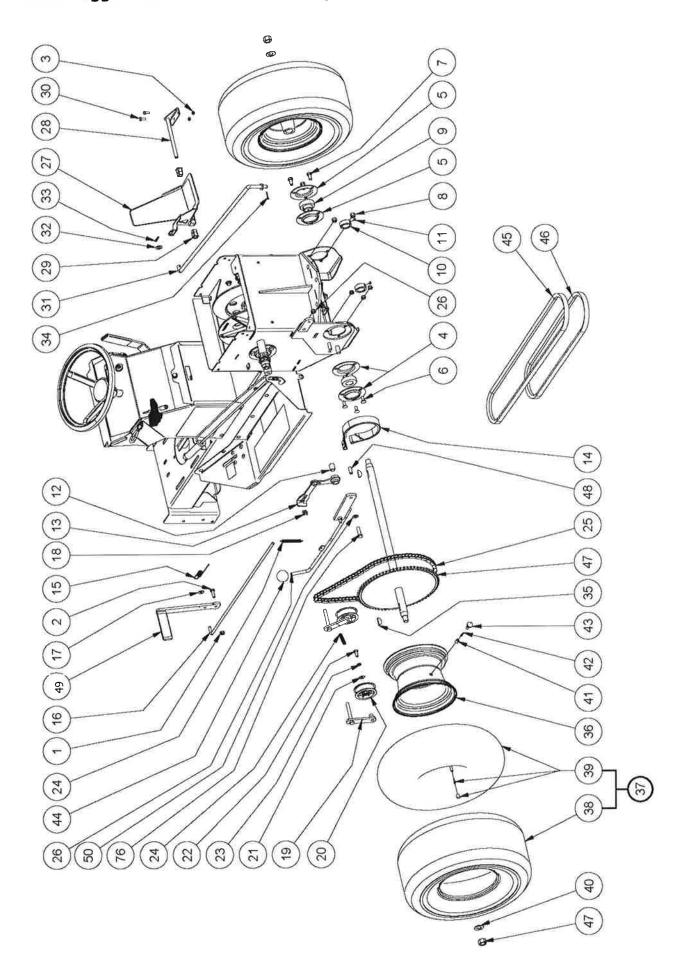

Model A12508L, A13409G, A14410K:-Rear Bagger—Control and Drive Components

ITEM	PART NUMBER	DESCRIPTION	QTY
1	NM8NT	Nut	1
2	SH0825M	Screw	1
3	NM6NT	Nut	2
4	A125010	Flangette 25mm	2
5	AM024	Flangette 25mm	2
6	BCHSNM8X20	Bolt	3
7	SH0612C	Screw	3
8	NF06CN	Nut	6
9	BB25SAN	Bearing	2
10	AM025	Lock Collar	2
11	GS0505C	Screw	2
12	13025	Nylon Bush, Brake Lever	1
13	A125007Z	Lever, Brake Actuator	1
14	1302305E	Brake, Ext, Drum Type c/w Lining	1
	13023-02	Lining	1
15	AM183	Spring, Extension, Park Brake	1
16	A122105Z	Drum Brake Rod	1
17	W051218	Washer	1
18	NS05C	Nut, Sqr	1
19	A142362Z	Arm, Chain Tensioner	2
20	PIFBB126598A	Idler, Flat, Flg, Brg, Sealed	2
21	W051218	Washer, Flat	2
22	SH0512C	Screw	2
23	WS050216	Washer, Lock, Spring	2
24	AM288	Spring	2
25	231901	Drive Chain Incl Con Link	1
	S231904	Chain Connecting Link	
26	A125109Z	Lever, Brake, Park	1
27	A108013R	Pedal, Drive	1
28	A116015Z	Pivot, Pedal, Drive	1
29	AM230	Bush - Plastic	2
30	SH0616M	Screw	2
31	A108011Z	Link	1
32	W071416	Washer, Flat	1
33	RP01	Pin, 'R'	5
34	CP3-220	Pin, Split	2
35	K18	Key	2
36	AM194	Rim	2
37	TT850X8	Tyre And Tube	1
39	STU850X8	Tube	2
40	W102015	Washer, Flat	2
44	AM290	Hand Brake Knob	1
45	V42	Belt, V	1
46	V44	Belt, V 32" Cut only	1
47	231903B08J	Axle, Rear, Inc Nuts	1
48	95104	Pin, Brake, Actuator	1
49	95103	Pedal, Brake	1


Model A12208G, A12308G, A12408G, A12508L, A13109G, A13209G, A13309G, A13409G:- Transmission Components

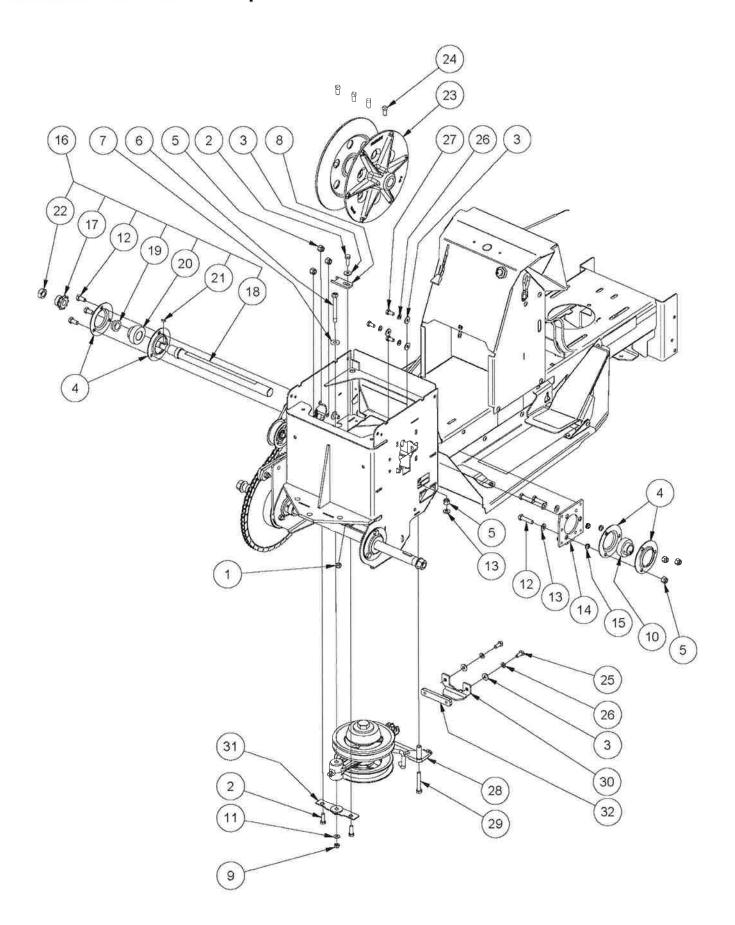

Model A12208G, A12308G, A12408G, A12508L, A13109G, A13209G, A13309G, A13409G:- Transmission Components

ITEM	PART NUMBER	DESCRIPTION	QTY
1	NM8NT	Nut	1
2	SH0825M	Screw	3
3	W05M202	Washer, Flat	4
4	AM024	Flangette	4
5	NF06CN	Nut	7
6	90276	Bolt, Pivot, Arm, Clutch	1
7	WW0616	Washer, Wave	1
8	90297	Keeper, Bolt, Pivot	1
9	NHCM8	Nut, Hex, Conelok	1
10	BB25SAN	Bearing	1
11	W08MN	Washer	1
12	B0624C	Bolt	3
13	W061216	Washer	3
14	9029808H	Mount, Adjust, Alignment	1
15	WG06X08	Grommet	3
16	13259	Sub-Assy, Intershaft	1
17	SKIT65	Intershaft Sprocket c/w Key	1
18	AM363	Shaft, Mounting, Clutch Plate	1
19	AM364	Sleeve, Spacer, Shaft	1
20	BB25SAN	Bearing	1
21	SK03	Key Woodruff	1
22	N10FT	Nut	1
23	AM197	Clutch Plate	2
24	SS0612W	Screw, Set	4
25	SH0820M	Screw	2
26	WS050216	Washer, Lock, Spring	5
27	SH0816M	Screw	3
28	AM182E94	Clutch Rod Pivot Lever	1
29	B0636C	Bolt	1
30	A108107Z08D	Bracket, Adjust, Support, Tang	1
31	A125005Z	Mount, Pivot, Lower, Rear Bagger Only	1
	90289	Mount, Pivot, Lower	1
32	A132023Z	Restraint, Tang, Used With A132012 Only	1
	AM246	Clutch Brkt Wear Plate Used With 9028508J Only	1


Model A14310K, A14410K, A14510K:-Transmission Components

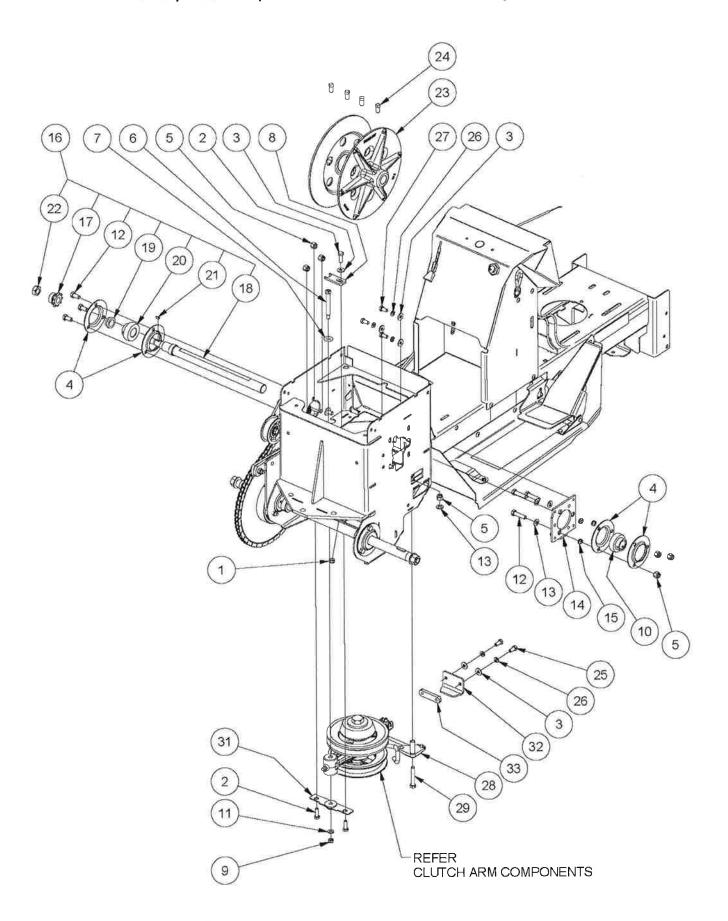

Model A14310K, A14410K, A14510K:-Transmission Components


ITEM	PART NUMBER	DESCRIPTION	QTY
1	NM8NT	Nut	1
2	SH0825M	Screw	3
3	W05M202	Washer	4
4	AM024	Flangette	4
5	NF06CN	Nut	7
6	90276	Bolt, Pivot, Arm, Clutch	1
7	WW0616	Washer, Wave	1
8	90297	Keeper, Bolt, Pivot	1
9	NHCM8	Nut, Hex, Conelok	1
10	BB25SAN	Bearing	1
11	W08MN	Washer	1
12	B0624C	Bolt	3
13	W061216	Washer	3
14	9029808H	Mount, Adjust, Alignment	1
15	WG06x08	Grommet, Wiring	3
16		Sub-Assy, Intershaft	1
17	SKIT65	Intershaft Sprocket Incl Key	1
18	AM363	Shaft, Mounting, Clutch Plate	1
19	AM364	Sleeve, Spacer, Shaft	1
20	BB25SAN	Bearing, Ball	1
21	SK03	Key	1
22	N10FT	Nut	1
23	AM197	Clutch Plate	2
24	SS0612W	Screw, Set, Sq Hd	4
25	SH0820M	Screw	2
26	WS050216	Washer, Lock, Spring	5
27	SH0816M	Screw	3
28	AM182	Clutch Rod Pivot Lever	1
29	B0636C	Bolt	1
31	A125005Z	Mount, Pivot, Lower, Rear Bagger Only	1
	90289	Mount, Pivot, Lower	1
32	A126038Z10G	Bracket, Adjust, Support, Tang	1
33	A126170Z	Restraint, Tang	1
	A126040Z	Restraint, Tang, Used With 9028510G Only	1

Model A12208G, A12508L, A13109G, A13409G:- Clutch Arm Components 13.5HP & 16.5HP B&S

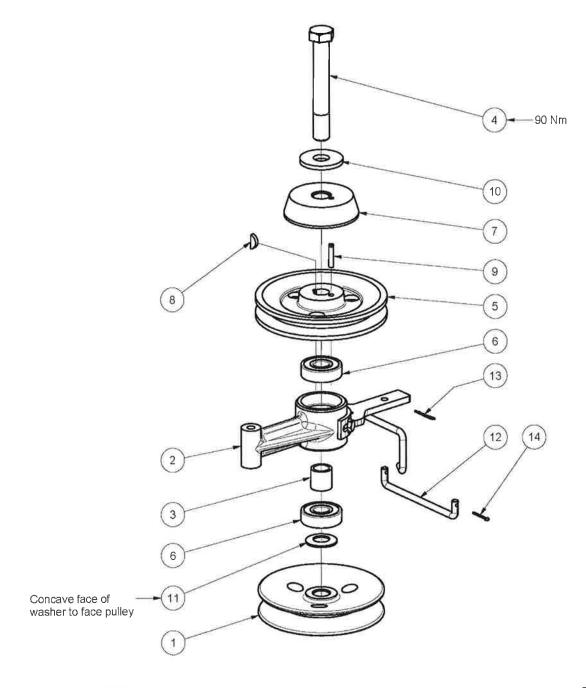


ITEM	PART NUMBER	DESCRIPTION	QTY
1	252001	Clutch Pulley Lower	1
2	9028608J	Arm, Clutch	1
3	AM072	Sleeve, Spacer, Bearing	1
4	AM204J3	Clutch Shaft	1
5	AM326	Clutch Pulley	1
6	BB205215NS	Bearing	2
7	CC2095L	Cone, Drive	1
8	SK09	Key	1
9	PDM0630	Pin	1
10	W205505B	Washer,	1
11	WSCM20402.0	Washer, Spring, Conical	1
12	AM238	Rod, Clutch, Short	1
13	RP01	Pin, 'R'	1
14	CP3-220	Pin, Split	1

Model A13209G, A13309G, A13409G, A14310K, A14410K, A14510K:- Clutch Arm Components (15.5HP, 16.5HP Rear Bagger, 17.5HP & 18.5HP B&S & 13HP & 16HP Honda) (NOT C1632BS)

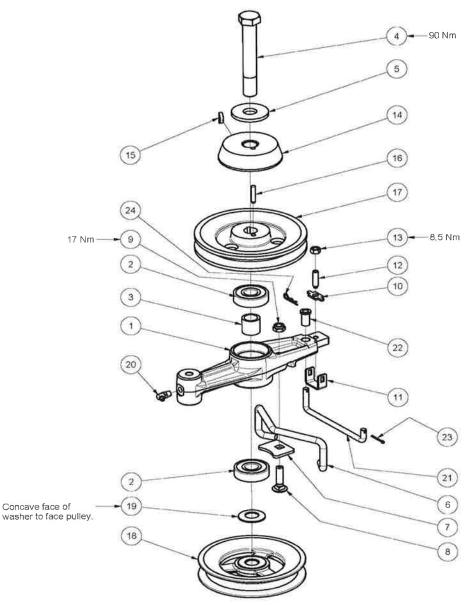

TTEM	PART NUMBER	DESCRIPTION	QTY
ITEM			1
1	A132013B	Arm, Clutch	2
2	BB205215NS	Bearing	1
3	AM072	Sleeve, Spacer, Bearing	1
4	AM204J3	Clutch Shaft	1
5	W205505B	Washer	1
6	A132015Z	Guide, Belt	1
7	A132017Z	Clamp, Guide, Belt	1
8	BCHSNM10X40	Bolt	1
9	NM10NT	Nut	1
10	A132021Z	Retainer, Shoe	1
11	A132019H	Shoe	1
12	GS0830M	Screw	1
13	NHM8	Nut	1
14	CC2095L	Cone, Drive	1
15	SK09	Key	1
16	PDM0630	Pin	1
17	AM326	Clutch Pulley	1
18	25200109B	Pulley, Pto	1
19	WSCM20402.0	Washer, Spring, Conical	1
20	GNTF7	Nipple, Grease	1
21	A132025Z	Link, Drive, Short	1
22	A132027Z	Sleeve, Withdrawal, Link	1
23	CP3-220	Pin, Split	1
24	RP01	Pin, 'R'	1
۷.	141 01	ray is	


Model A14310K:- Clutch Arm Components (C1632BS Only)

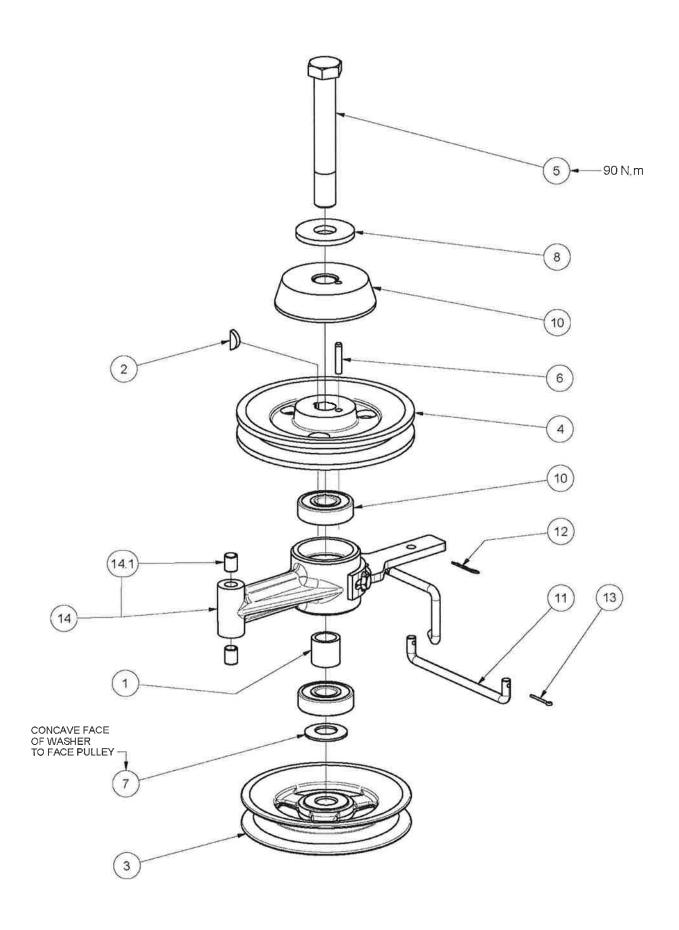

Model A14310K:- Clutch Arm Components (C1632BS Only)


ITEM	PART NUMBER	DESCRIPTION	QTY
1	AM072	Sleeve, Spacer, Bearing	1
2	SK09	Key	1
3	25200109B	Clutch Pulley Lower	1
4	AM326	Clutch Pulley	1
5	AM204J3	Clutch Shaft	1
6	PDM0630	Pin	1
7	WSCM20402.0	Washer, Spring, Conical	1
8	W205505B	Washer	1
9	BB205215NS	Bearing, Ball	2
10	CC2095L	Cone, Clutch	1
11	AM238	Rod, Clutch, Short	1
12	RP01	Pin, 'R'	1
13	CP3-220	Pin, Split	1
14	9028610G	Arm, Clutch, Inc Bushes	1
14.1	BBC101215	Bearing, Bush	2

Model A12208G, A12308G, A12408G, A12508L, A13109G, A13209G, A13309G, A13409G, A14310K, A14410K, A14510K:- All Briggs & Stratton and 13HP HONDA Electrical Components Schematic

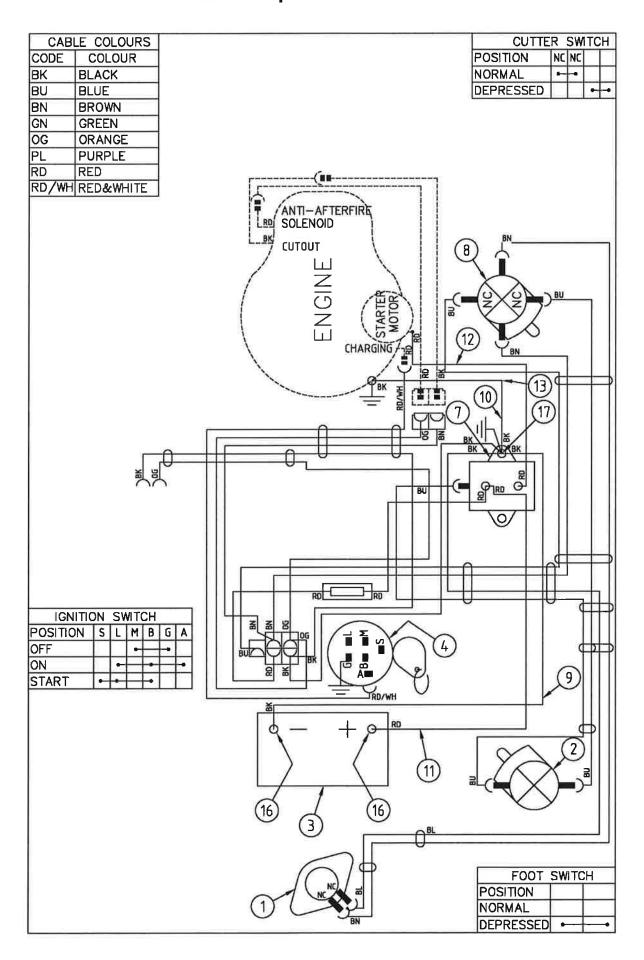


Model A12208G, A12308G, A12408G, A12508L, A13109G, A13209G, A13309G, A13409G, A14310K, A14410K, A14510K:- All Briggs & Stratton and 13HP HONDA Electrical Components Schematic

ITEM	PART NUMBER	DESCRIPTION	QTY
1	SP1PNCSM	Seat Switch	1
2	SKIT132	Foot Switch	1
3		Battery Switch, Key, 6 Term 13.5HP,15.5HP,16.5HP,17.5HP,18.5HP B&S & 13HP HONDA	1
4	13125	ONLY	1
	AM014	Switch, Key 13HP B&S Only	1
5	AM015	Ignition Key	1
6	SH0616M	Screw	2
7	AM159	Solenoid	1
8	SKIT133	Disengaging Switch .	1
9	NM6NT	Nut	2
10	A123026	Harness, Wiring, Main 13.5HP,15.5HP,16.5HP,17.5HP,18.5HP B&S & 13HP HONDA ONLY	1
	80008	Harness, Wiring, Main 13HP B&S ONLY	1
11	89082	Lead, Battery To Solenoid	1
12	AM265	Lead, Battery, Red	1
13	15235	Lead, Battery, Black, 3 term	1
14	N04C	Nut	2
15	W040818	Washer, Flat	2
	A133037	Tube, Wiring, Starter 13HP Honda Only	1
	13111	Harness, Engine 13HP HONDA ONLY	1
	A116113	Harness, Engine 13.5HP B&S ONLY	1
	13112	Harness, Engine 15.5HP,16.5HP,17.5HP,18.5HP B&S	1

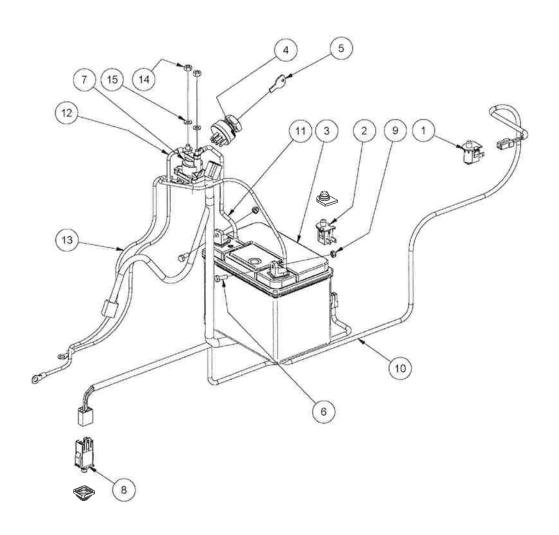


Model A12308G, A13309G, A14510K:- 16HP Honda Only Electrical Components Schematic

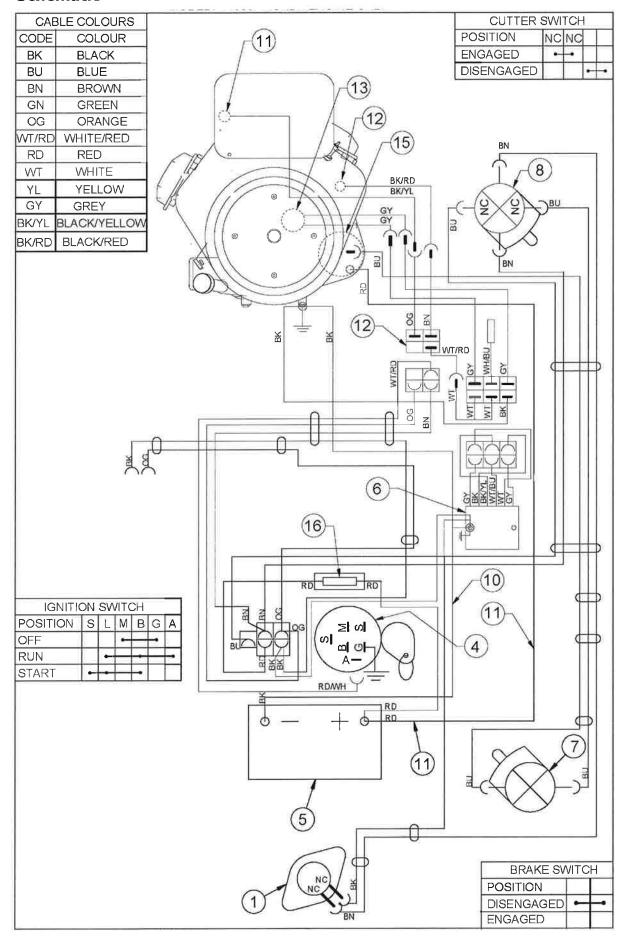


Model A12308G, A13309G,A14510K:- 16HP Honda Only Electrical Components Schematic

ITEM	PART NUMBER	DESCRIPTION	QTY
1	SP1PNCSM	Switch, Plunger	1
2	A123026	Harness, Wiring, Main	1
3	13369	Lead, Battery, Black, 3 Term	1
4	13125	Switch, Key, 6 Term	1
5		Battery	1
6		Regulator/Rectifier	1
7	SKIT132	Brake Switch Incl Cover	1
8	SKIT133	Cutter Switch Incl Cover	1
9	A123113	Harness, Wiring, Engine, 16.0 Hon	1
10	AM015	Ignition Key	1
11		Fuel Cut Solenoid	1
12		Engine Stop	1
13		12a Charge Coil	1
14	84132	Lead, Battery	1
15		Starter Motor Solenoid	1
16		Fuse 15a	1
17	NHM8	Nut	2
18	B0630M	Bolt	2
19	NM6NT	Nut	4
20	SH0616M	Screw	2

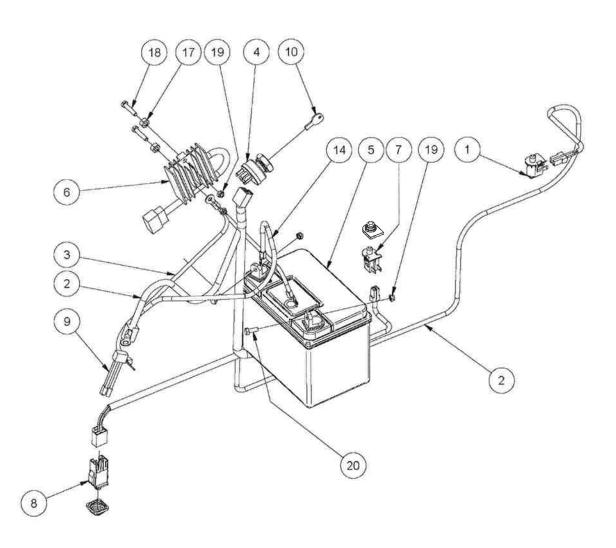


Model A12508L:- Rear Discharge—Cutter Control Components

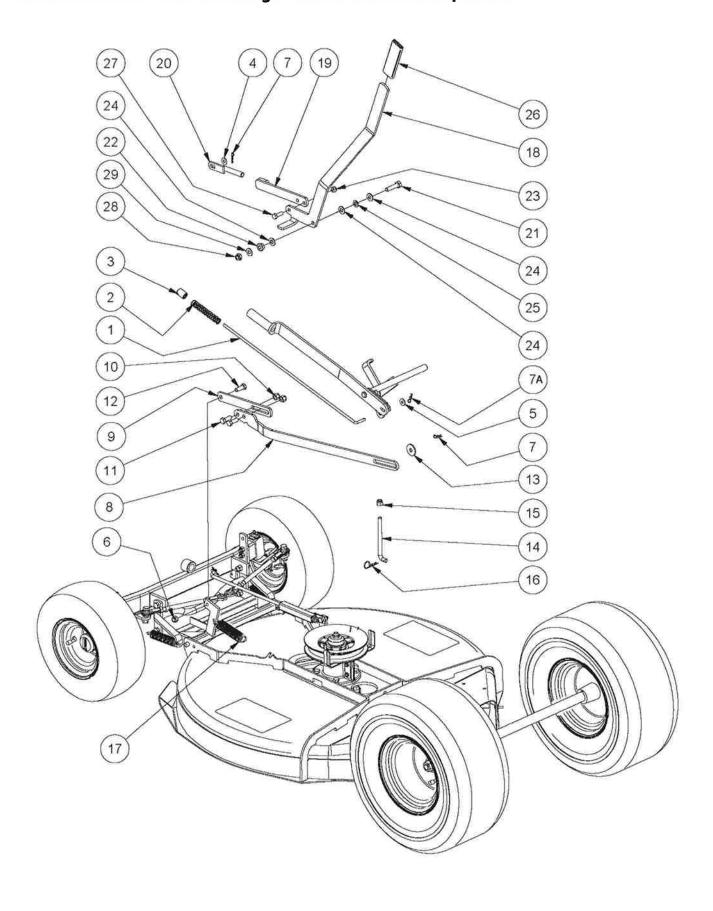

Model A12508L:- 15.5HP Rear Discharge—Cutter Control Components

ITEM	PART NUMBER	DESCRIPTION	Q Т Y
1	A108003Z	Rod, Adjust, Height, Cut	1
2	AM012	Height Adjustment Pawl Push Rod Spring	1
3	AM013Q2	Height Adjustment Pawl Push Rod Button	1
4	W051218	Washer, Flat	1
5	W041216	Washer, Flat	1
6	N06CN	Nut	1
7	RP01	Pin, 'R'	2
7 A	RP04	Pin, 'R'	1
8	A108009Z	Link, Float, Rear 32"	1
9	95120	Link, Adjust, Front	1
10	NF06CN	Nut	2
11	SH0616C	Screw	2
12	SH0616C	Screw	1
13	W0620HD	Washer, Flat	1
14	AM185B0	Cutter Lifting Link	1
15	NF06CN	Nut	1
16	RP03	Pin, 'R'	1
17	AM145	Spring, Extension, Weight Compensating 32"	1
18	A116106Z	Lever, Disengage, Cutter	1
19	AM240	Disengaging Adjuster Bushed	1
20	AM24105C	Disengaging Adjuster Threaded	1
21	B1040M	Bolt	1
22	NFM10	Nut, Hex, Flange	1
23	NM8NT	Nut	1
24	W10MN	Washer, Flat	3
25	WSM10X3.7X2.5	Washer, Lock, Spring	1
26	AM009	Hand Grip	1
27	SH0825M	Screw	1
28	NM10NT	Nut	1
29	W10MN	Washer, Flat	1


Model A13109G, A13209G, A13309G, A13409G:-Cutter Control Components

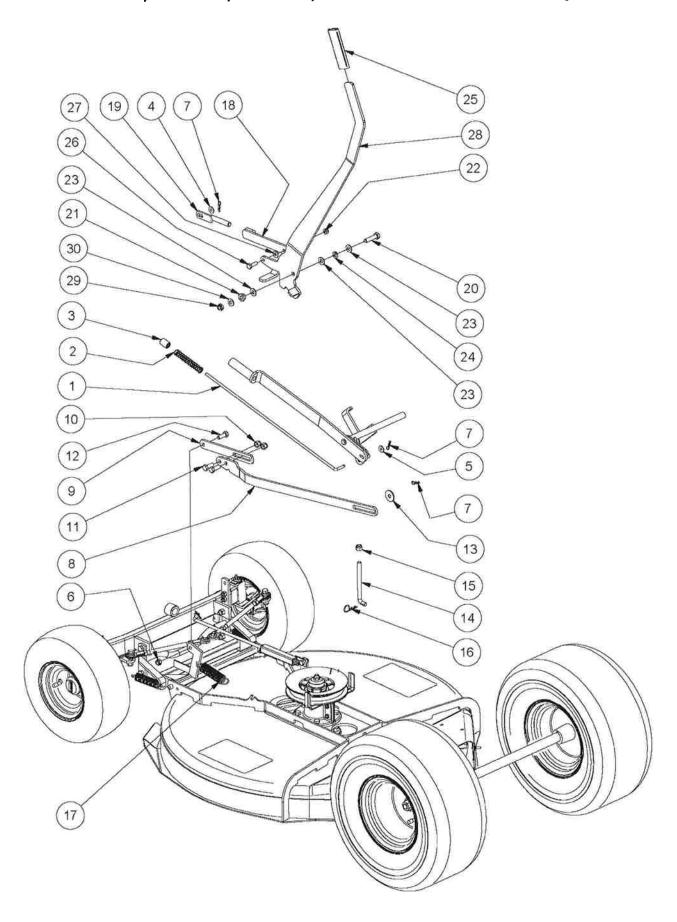

Model A13109G, A13209G, A13309G, A13409G:-Cutter Control Components

ITEM	PART NUMBER	DESCRIPTION	QTY
1	A108003Z	Rod, Adjust, Height, Cut	1
2	AM012	Height Adjustment Pawl Push Rod Spring	1
3	AM013Q2	Height Adjustment Pawl Push Rod Button	1
4	W051218	Washer	1
5	W041216	Washer	1
6	N06CN	Nut	1
7	RP01	Pin, 'R'	3
8	A108009Z	Link, Float, Rear	1
9	95120	Link, Adjust, Front	1
10	NF06CN	Nut	2
11	SH0616C	Screw	2
12	SH0616C	Screw	1
13	W0620HD	Washer	1
14	AM185B0	Cutter Lifting Link	1
15	NF06CN	Nut	1
16	RP03	Pin, 'R'	1
17	AM145	Spring, Extension, Weight Compensating	1
18	AM240	Disengaging Adjuster Bushed	1
19	AM24105C	Disengaging Adjuster Threaded	1
20	B1040M	Bolt	1
21	NFM10	Nut	1
22	NM8NT	Nut	1
23	W10M	Washer	3
24	WSM10X3.7X2.5	Washer, Lock, Spring	1
25	AM009	Hand Grip	1
26	SH0825M	Screw	1
27	W051218	Washer	1
28	A131105R	Lever, Disengage, Cutter	1
29	NM10NT	Nut	1
30	W10MN	Washer	1

Model A14310K, A14410K, A14510K:- Cutter Control Components

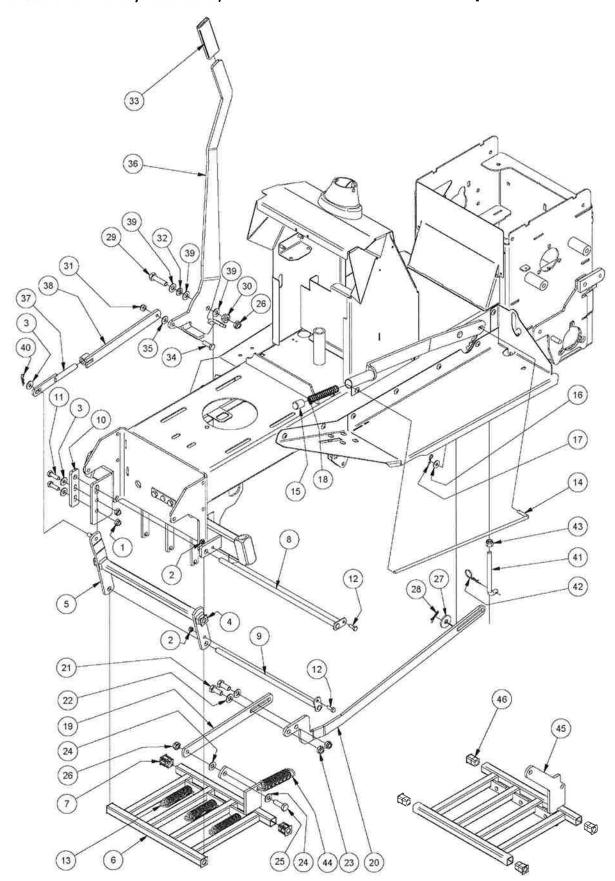


Model A14310K, A14410K, A14510K:- Cutter Control Components

ITEM	PART NUMBER	DESCRIPTION	QTY
1	NM8NT	Nut	4
2	NM6NT	Nut	3
3	W05M202	Washer	3
4	AM369	Bush	2
5	A142104R	Link, Drop, Disengagement, Cutter	1
6	KIT234	Kit, Link, Drag, Attachment, Mowing, Red, Inc Bushes	1
7	AM369	Bush	4
8	90022	Pin, Pivot	1
9	13016	Pin	2
10	90012	Connecting Link Adjuster Bracket	1
11	SH0825M	Screw	2
12	SH0616M	Screw	3
13	AM040	Spring, Extension, Cutter Belt	3
14	A108003Z	Rod, Adjust, Height, Cut	1
15	AM013Q2	Height Adjustment Pawl Push Rod Button	1
16	W041216	Washer	1.
17	RP04	Pin, 'R'	1
18	AM012	Height Adjustment Pawl Push Rod Spring	1
19	A139008Z	Link, Adjust, Suspend, Front	1
20	A139010Z	Link, Float, Suspend, Rear	1
21	SH1025M	Screw	2
22	W10MN	Washer	2
23	NM10NT	Nut	2
24	W10MN	Washer	2
25	SH1030M	Screw	1
26	NM10NT	Nut	2
27	W0620HD	Washer	1
28	CP3-220	Pin, Split	1
29	B1040M	Bolt	1
30	NFM10	Nut, Hex, Flange	1
31	NM8NT	Nut	1
32	WSM10X3.7X2.5	Washer, Lock, Spring	1
33	AM009	Hand Grip	1
34	SH0825M	Screw	1
35	W051218	Washer	1
36	A131105R	Lever, Disengage, Cutter	1
37	A139020Z	Link, Adjust, Disengagement	1
38	A139018Z	Link, Disengagement	1
39	W10M	Washer	3
40	RP01	Pin, 'R'	1
41	AM185BO	Cutter Lifting Link	1
42	RP03	Pin, 'R'	1
43	NF06CN	Nut	1
44	AM145	Spring, Extension	1
	A118039	Spring, Extension, 38" Mowing Attachment	1
45	A142107R	Link, Drag, Attachment, Mowing	1
46	AM230	Bush	4

Model A12208G, A12308G, A12408G:- C918004J 805 mm (32") Mowing Attachment Side Discharge

			_
C1332HON	A12308G	before	s/n1570
C1532B	A12408G	before	s/n1100
C1332B	A12208G	before	s/n3220
C1532BRB	A12508K	before	s/n9001
C1732B	A12408G	before	s/n2501

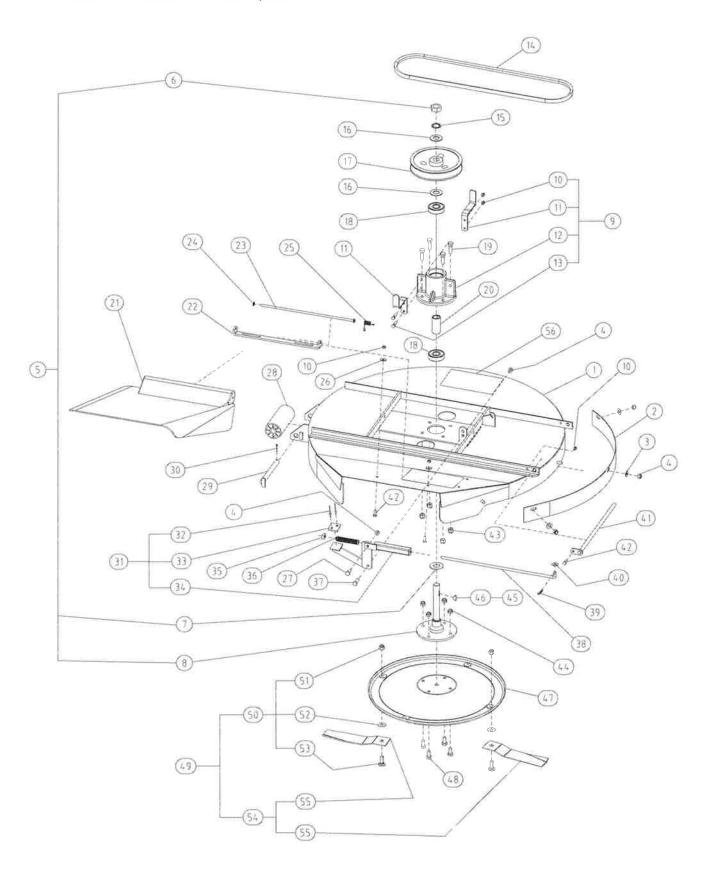


** Optional Accessory—C94 Mulching Kit

Model A12208G, A12308G, A12408G:- C918004J 805 mm (32") Mowing Attachment Side Discharge

C1332HON	A12308G	before	s/n1570
C1532B	A12408G	before	s/n1100
C1332B	A12208G	before	s/n3220
C1532BRB	A12508K	before	s/n9001
C1732B	A12408G	before	s/n2501

C1732B	A12408G	before	s/n2501	
ITEM	PART NO		DESCRIPTION	QTY
1	91001		Cutter Housing 32"	1
2	91002		Cutter Guard 32"	1
	BCHSNM8X20)	32" Cutter Guard Ret Bolt	3
3	W051216		Washer	3
4	NM8NT		Nut	5
5	13181		Cutter Spindle Inc Washer & Nut	1
6	NHM20X1.5T		Nut	1
7,8	13128		Washer	1
9,12	SKIT08		Bearing Housing Inc Belt Guides	1
10	NM6NT		Nut	5
11	AM073		Belt Guide	2
13	B0625M		Bolt	2
14	V44		Vee Belt	1
15	WM20S		Washer	1
16	W203902		Washer	2
17	AM030		Pulley	1
18	BB205215NS		Ball Bearing	2
19	B0620C		Bolt	4
20	AM029		Bearing Spacer Sleeve	1
21	AM259		Deflector	1
22	AM052E1		Deflector Bracket	1
23	AM273		Deflector Pivot Rod	1
24	AM274		Push On Fastener	1
25	AM272		Deflector Spring	1
26	W041216		Washer	2
27	SH0820M		Screw	1
28	AM036		Roller	1
29	AM037		Cutter Housing Roller Shaft	1
30	CP3-220		Split Pin	1
31	KIT15		Cutter Brake incl Pad	1
32	PR0205		Rivet	2
33	AM033I95		Cutter Brake Pad	1
34	AM034H0		Cutter Brake Adjust Bracket	. 1
35	NS05C		Nut—Square	1
36	AM035		Cutter Brake Compression Spring	1
37	SH0825M		Screw	1
38	251301		Cutter Brake Adj Rod	1
39	RP01		`R' Pin	1
40	W051218		Washer	1
41	13016		Pivot Pin	1
42	SH0616M		Screw	3
43	NF06CN		Nut	4
44	N06CN		Nut	4
45,46	SK09		Woodruff Key	2
47	AM07604A		Cutter Disc	1
48	SH0612C		Screw	4
49	SKIT54N		Blade, Bolt, Nut, Washer Set 32" Stepped Low Lift	1
	SKIT55N		Blade, Bolt, Nut, Washer Set 32" Stepped High Lift	1
50,51,52,53	SKIT01D1		Bolt, Nut, Washer Set	1
54,55	SMB198S		Blade Set Stepped Low Lift	1
	SMB198A		Blade Set Stepped High Lift	2
56	DEC116		Decal—Danger Mower Attachment	1

Model A12208G, A12308G, A12408G, A13109G, A13209G, A13309G, A14310K, A14510K:- CA11308F 805 mm (32") Mowing Attachment

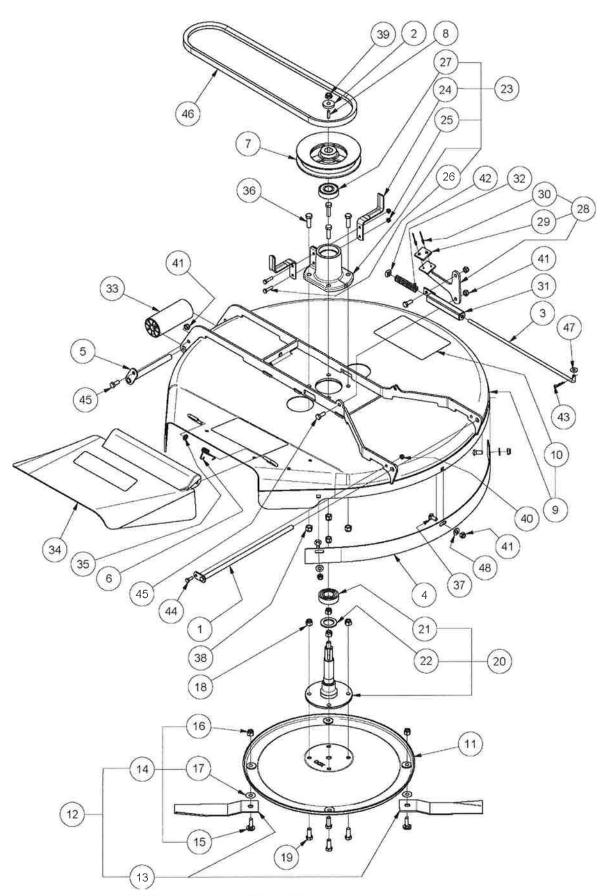


** Optional Accessory—C94 Mulching Kit

Model A12208G, A12308G, A12408G, A13109G, A13209G, A13309G, A14310K, A14510K:- CA11308F 805 mm (32") Mowing Attachment Side Discharge

C1332HON	A12308G	s/n1570 onwards	Built	25.09.08
C1532B	A12408G	s/n1100		19.08.08
C1332B	A12208G	s/n3220		21.08.08
C1532BRB	A12508K	s/n9001		24.11.08
C1732B	A12408G	s/n2501		14.08.08

ITEM	PART NUMBER	DESCRIPTION	QTY
1	13016	Pin	1
2	13247	Washer, Flat	1
3	251301	Rod, Adj, Cutter Brake	1
4	91002	Guard, Cutter	1
5	92102	Pin, Roller, Rear	1
6	A100003	Spring, Torsion, Deflector	1
7	A100017	Pulley, Cutter	1
8	A100025	Key	1
9	KIT212	Kit, Deck, Cutter	1
10	DEC116	Decal, Danger, Mowing Attachment	2
11	AM07604A	Disk, Cutter	1
12	SKIT54N	32" Hd Stepped Blade/Bolt/Nut Set	1
13	SMB198S	Set, Blade, Heavy Duty, Stepped	2
14	SKIT01D1	Blade Bolt & Nut Set	1
18	N06CN	Nut	4
19	SH0612C	Screw, Hex	4
20	A113007	Sub-Assy, Spindle, Flanged	1
21	BB255215NN	Bearing, Ball	1
22	A100021Z	Washer, Flat	1
23	A113009	Sub-Assy, Housing, Bearing Cutter	1
24	AM073	Belt Guides	2
25	NM6NT	Nut	2
26	B0625M	Bolt	2
27	BB205215NS	Bearing, Ball	1
28	A113010	Lever, Brake, Cutter	1
29	AM033I95	Pad, Brake, Cutter	1
30	PR0205	Rivet	2
31	AM034H0	Cutter Head Brake Adj Brkt	1
32	AM035	Spring, Compression, Cutter Brake	1
33	AM036D9	Roller Plastic	1
34	AM259	Deflector, Cox Logo	1
35	AM274	Fastener, Push on, Round	1
36	B0620C	Bolt	4
37	BCHSNM8X20	Bolt, Cup, Sq Neck	3
38	NF06CN	Nut	4
39	NHCM10	Nut	1
40	NM6NT	Nut	1
41	NM8NT	Nut	6
42	NS05C	Nut, Sqr	1
43	RP01	Pin, 'R'	1
44	SH0616M	Screw	1
45	SH0820M	Screw	3
46	V44	Belt, V	1
47	W051218	Washer	1
48	W061216	Washer	3


Model A12508L, A13409G, A14410K:- 32" Rear Discharge Mowing Attachment

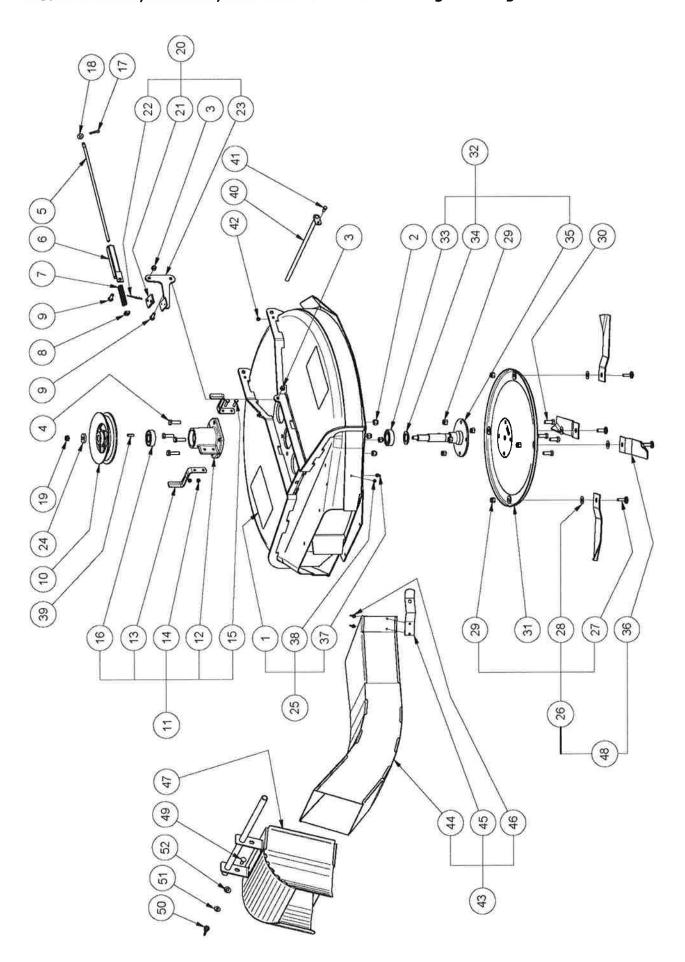

Model A12508L, A13409G, A14410K:- 32" Rear Discharge Mowing Attachment

ITEM	PART NUMBER	DESCRIPTION	QТY
1	DEC116	Decal, Danger, Mowing Attachment	2
2	NF06CN	Nut	4
3	NM8NT	Nut	2
4	B0620C	Bolt	4
5	251301	Rod, Adj, Cutter Brake	1
6	AM034H0	Cutter Head Brake Adj Brkt	1
7	AM035	Spring, Compression, Cutter Brake	1
8	NS05C	Nut, Square	1
9	SH0820M	Screw	2
10	A100017	Pulley, Cutter	1
11	A113009	Sub-Assy, Housing, Bearing Cutter	1
12	A100015B	Housing, Bearing, Flange, Guide Mount, Black	1
13	AM073	Belt Guides	2
14	NM6NT	Nut	2
15	B0625M	Bolt	2
16	BB205215NS	Bearing, Ball, 6304, Seal, Contact, Axial, X2	1
17	RP01	Pin, 'R'	1
18	W051218	Washer, Flat	1
19	NHCM10	Nut	1
20	A113010	Lever, Brake, Cutter	1
21	AM033I95	Pad, Brake, Cutter	1
22	PR0205	Rivet	2
23	A113011Z	Arm, Lever, Brake Cutter	1
24	13247	Washer, Flat	1
25	KIT213	Kit, Deck, Cutter	1
26	SKIT01D1	Bolt, Nut, Washer Set	1
29	N06CN	Nut	8
30	SH0612C	Screw	4
31	AM07604A	Disk, Cutter	1
32	A113007	Sub-Assy, Spindle, Flanged	1
33	BB255215NN	Bearing, Ball	1
34	A100021Z	Washer, Flat	1
35	A113019	Spindle, Flanged, Cutter	1
36	SMB198A	Blade Heavy Duty - Air Flow	2
	SKIT55N	Blade, Bolt, Nut & Washer Set	2
37	SPM5X20	Screw, Pan	1
38	NM5NT	Nut	1
39	A100025	Key	1
40	13016	Pin	1
41	SH0616M	Screw	1
42	NM6NT	Nut	1
43	A128010	Chute, Discharge, Rear	1
44	A128011B	Chute, Deflector, Black	1
45	AM080	Plate, Lock, Catcher Chute	1
46	PR0306	Rivet	2
47	A128060	Deflector, Discharge, Rear	1
48	SKIT55N	Blade, Bolt, Nut, Washer Set 32" Stepped High Lift	1
49	BCHSNM8X20	Bolt, Cup, Sq Neck	1
50	NW08M	Nut, Wing	1
51	W051218	Washer, Flat	1
52	W10102225	Washer, Flat, Nylon	1
	V44	Belt	1


Model A12508L, A13409G, A14410K:- A12908K REAR CATCHER COMPONENTS

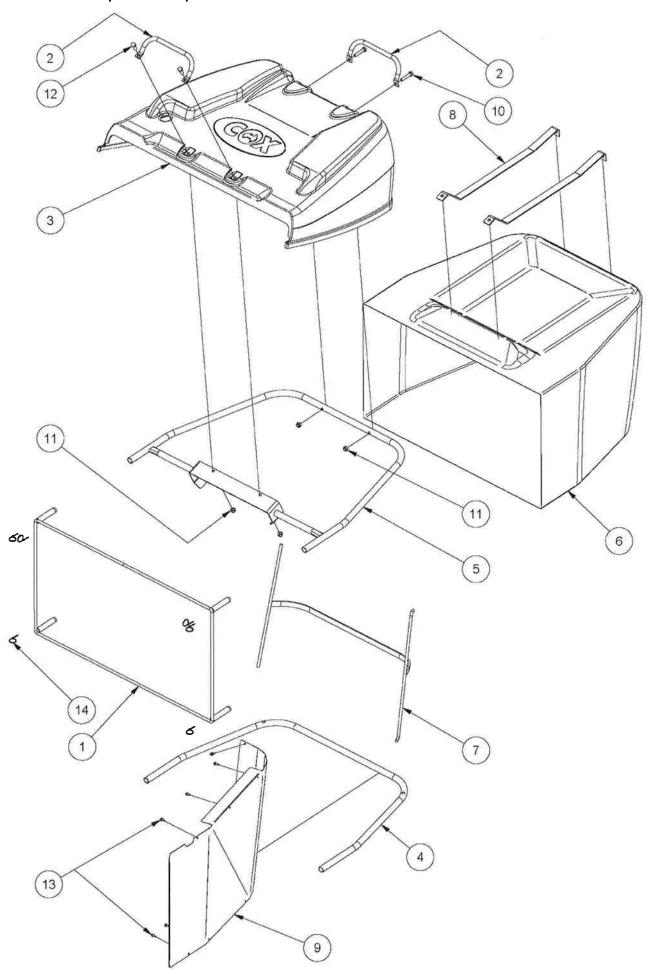

Model A12508L, A13409G, A14410K:- A12908K REAR CATCHER COMPONENTS

ITEM	PART NUMBER	DESCRIPTION	QTY
1	13312	Front, Catcher Frame	1
2	14154	Handle, Front, Grass Catcher,	2
3	A102003	Cover, Catcher, Plastic, Red	1
4	A129002B	Frame, Lower	1
5	A129005B	Frame, Upper	1
6	A129014	Bag, Catcher, Grass, Rear	1
7	A129018	Frame, Rear	1
8	A129021B	Bar, Tunnel, Top	2
9	A129061B	Deflector, Inner, Side	1
10	B0840M	Bolt,	2
11	NM8NT	Nut	4
12	SH0825M	Screw	2
13	ST0808D	Screw	8
14	CABLETIES	Cable Ties	6


Model A12308G, A13309G, A14510K:- 935 mm (38") Mowing Attachment

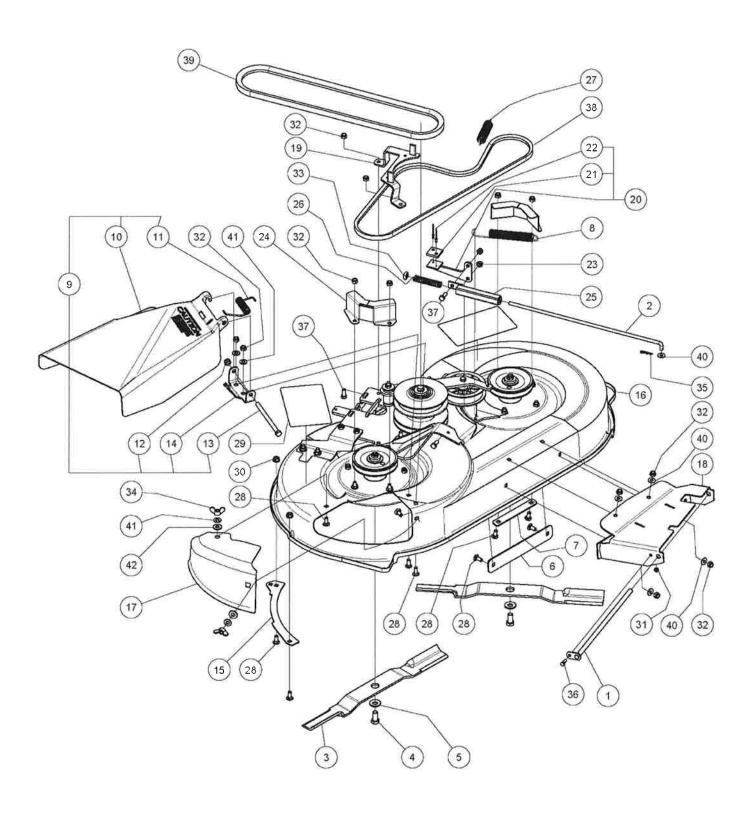

Model A12308G, A13309G, A14510K:- 935 mm (38") Mowing Attachment

1 13016 Pin 1 2 90136 Cutter Brake Adjuster Rod 1 3 A118040 Blade, Mower, Bar 2 4 SH1225M Screw 2 5 WSCM12293.0 Washer, Spring, Conical 2 6 A118034Z Plate, Reinforcement, Front 1 7 A118036Z Plate, Reinforcement, Upper 1 8 A118039 Spring, Extension, Cutter Belt 1
3 A118040 Blade, Mower, Bar 2 4 SH1225M Screw 2 5 WSCM12293.0 Washer, Spring, Conical 2 6 A118034Z Plate, Reinforcement, Front 1 7 A118036Z Plate, Reinforcement, Upper 1 8 A118039 Spring, Extension, Cutter Belt 1
4 SH1225M Screw 2 5 WSCM12293.0 Washer, Spring, Conical 2 6 A118034Z Plate, Reinforcement, Front 1 7 A118036Z Plate, Reinforcement, Upper 1 8 A118039 Spring, Extension, Cutter Belt 1
5 WSCM12293.0 Washer, Spring, Conical 2 6 A118034Z Plate, Reinforcement, Front 1 7 A118036Z Plate, Reinforcement, Upper 1 8 A118039 Spring, Extension, Cutter Belt 1
6 A118034Z Plate, Reinforcement, Front 1 7 A118036Z Plate, Reinforcement, Upper 1 8 A118039 Spring, Extension, Cutter Belt 1
7 A118036Z Plate, Reinforcement, Upper 1 8 A118039 Spring, Extension, Cutter Belt 1
8 A118039 Spring, Extension, Cutter Belt 1
o hillson
Cult Ann. Deflactor
9 A118055 Sub-Assy, Deflector 1
10 A118016 Deflector, Discharge, 38" 1
11 A118054 Spring, Torsion, Deflector 1
12 N06CN Nut 1
13 B0680C Bolt 1
14 A118026Z Bracket, Pivot, Deflector 1
15 A118058B Guard, Blade 1
16 A118101B Deck, Mower 1
17 A118118B Plug, Discharge, Mulch, 38", Black 1
18 A118121R Attachment, Link, Drag 1
19 A118124Z Guide, Belt 1
20 A118149 Sub-Assy, Arm, Brake, Cutter 1
21 AM033I95 Pad, Brake, Cutter 1
22 PR0205 Rivet 2
23 NM8NT Nut 2
24 A118218B Guard, Pulley 2
25 AM034H0 Cutter Head Brake Adj Brkt 1
26 AM035 Spring, Compression, Cutter Brake 1
27 AM040 Spring, Extension, Cutter Belt 1
28 BCHSNM8X20 Bolt, Cup, Sq Neck 10
29 DEC116 Decal, Danger, Mowing Attachment 2
30 NFM8 Nut, Hex, Flange 2
31 NM6NT Nut 1
32 NM8NT Nut 14
NS05C Nut, Square 1
34 NW08M Nut, Wing 2
35 RP01 Pin, 'R' 1
36 SH0616M Screw 1
37 SH0820M Screw 4
38 V48 Belt, V 1
39 V51 Belt, V 1
40 W051218 Washer, Flat 4
41 W061216 Washer, Flat 4
42 W10102225 Washer, Flat, Nylon 2


Model A12308G, A13309G, A14510K:- 38" Cutter Attachment Drive Components

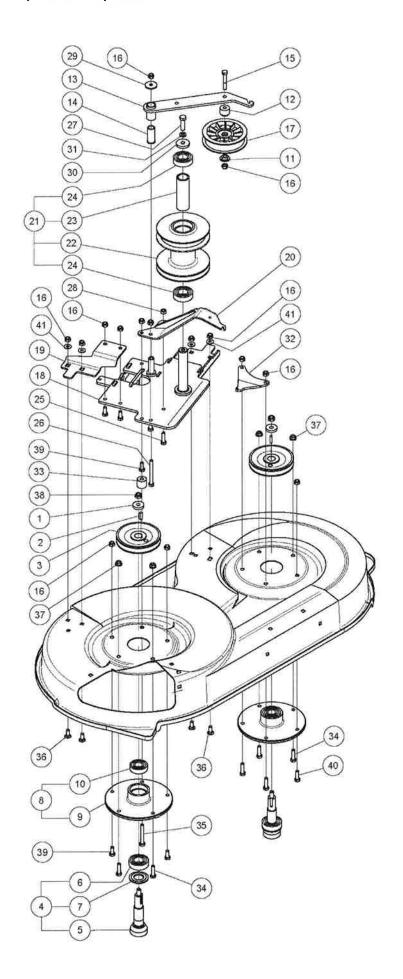


Model A12308G, A13309G, A14510K:- 38" Cutter Attachment Drive Components

ITEM	PART NUMBER	DESCRIPTION	QTY
1	13247	Washer	2
2	A100025	Key	2
3	A118003	Pulley, Cutter	2
4	KIT240	Sub-Assy, Spindle (includes 2 shafts)	1
5		Spindle, Cutter	1
6	BB255215NN	Bearing, Ball	1
7	A118012Z	Shield, Bearing	1
8	A118014	Sub-Assy, Housing, Bearing, Cutter	2
9		Housing, Bearing, Flange	1
10	BB204714NN	Bearing, Ball	1
11	14025	Boss, Idler, 17dia, 3high	1
12	15176	Boss, Idler, 17dia, 17high	1
13	A118028Z	Arm, Tensioner, Belt	1
14	AM017C1	Steering Shaft Bush With Collar	1
15	B0850M	Bolt	1
16	NM8NT	Nut	14
17	PIFBB02	Idler, Flat, Flg, Brg, Sealed	1
18	A118130B	Mount, Pulley, Transfer	1
19	A118032Z	Brace, Transfer Pulley Mount	1
20	A118038Z	Mount, Spring, Tensioner	1
21	98007	Sub-Assy, Pulley, Transfer	1
22	98010	Pulley, Transfer	1
23	98009	Sleeve, Spacer, Bearing	1
24	BB255215NN	Bearing, Ball	2
25	B0830M	Bolt	1
26	B0875M	Bolt	1
27	B1035M	Bolt	1
28	NHM8	Nut	1
29	W052003	Washer	1
30	W103506	Washer	1
31	WS103.52.2M	Washer, Lock, Spring	1
32	A118051Z	Bracket, Mount, Spring	1
33	A118057Z	Spacer	1
34	B0830M	Bolt	6
35	B0860M	Bolt	1
36	BCHSNM8X20	Bolt, Cup, Sq Neck	4
37	NFM8	Nut	4
38	NHCM10	Nut	2
39	SH0820M	Screw	4
40	SH0825M	Screw	1
41	W051218	Washer	5


Model A12208G, A12308G, A12408G:- Decals Side Discharge

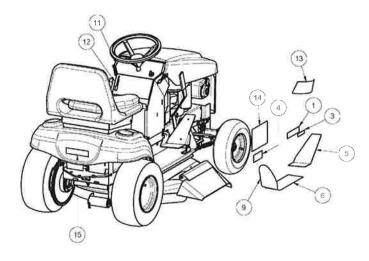


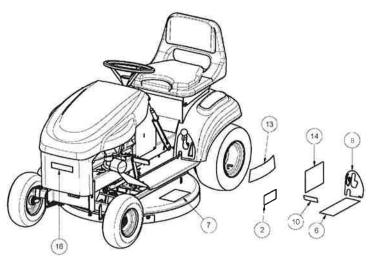

ITEM	PART NUMBER	DESCRIPTION	QTY
1	DEC125	Decal, Cutter Disengage	1
2	DEC127	Decal, Mount This Side Only	1
3	DEC135	Decal, Caution, Hot Muffler	1
	DEC135	Decal, Caution, Hot Muffler 16HP Honda Only	3
4	DEC136	Decal, Drive Pedal	1
5	8906608A	Non-Slip, Drive Pedal	1
6	13094	Pad, Non-Slip, Running Board	2
7	DEC116	Decal, Danger, Mowing Attachment	2
8	DEC231	Decal, Park Brake	1
9	DEC198	Decal, Depress to Start	1
10	95067	Non-Slip, Brake Pedal	1
11	DEC202	Decal, Console Top	1
12	DEC203	Decal, Console, Lower	1
13	DEC228	Decal, Bonnet, Side, S/Man SERIES 3	2
14	DEC207	Decal, 13/32, 13 HP	2
	DEC243	Decal, 13/32, 13.5 HP	2
	DEC212	Decal, Console Side 15HP	2
	DEC213	Decal, Console Side 15.5HP	2
	DEC234	Decal, Console Side 16HP	2
	DEC235	Decal, Console Side 17HP	2
	DEC239	Decal, Console Side 17.5HP	2
15	DEC205	Decal, Cox Logo, Rear	1
16	DEC230	Decal, Bonnet, Front	1
	DEC240	Decal, PROUDLY AUSTRALIAN, RED	2


Model A13109G, A13209G, A13309G, A14310K, A14510K:- Decals Side Discharge

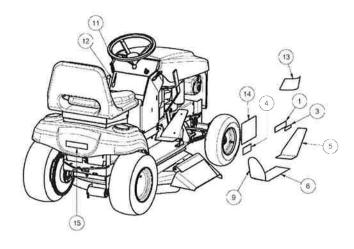

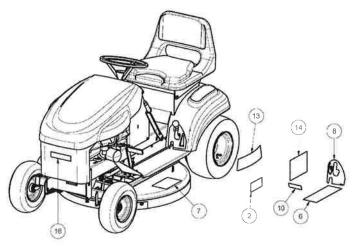


ITEM	PART NUMBER	DESCRIPTION	QTY
1	DEC125	Decal, Cutter Disengage	1
2	DEC127	Decal, Mount This Side Only	1
3	DEC135	Decal, Caution, Hot Muffler	1
	DEC135	Decal, Caution, Hot Muffler 16HP Honda Only	3
4	DEC136	Decal, Drive Pedal	1
5	8906608A	Non-Slip, Drive Pedal	1
6	13094	Pad, Non-Slip, Running Board	2
7	DEC116	Decal, Danger, Mowing Attachment	2
8	DEC231	Decal, Park Brake	1
9	DEC198	Decal, Depress to Start	1
10	95067	Non-Slip, Brake Pedal	1
11	DEC247	Decal, Console Top	1
12	DEC244	Decal, Dash	1
13	DEC228	Decal, Bonnet, Side, S/Man SERIES 3	2
14	DEC249	Decal, Console Side 13HP	2
	DEC250	Decal, Console Side 13.5HP	2
	DEC251	Decal, Console Side 15.5HP	2
	DEC234	Decal, Console Side 16HP	2
	DEC260	Decal, Console Side 16.5HP	2
	DEC239	Decal, Console Side 17.5HP	2
	DEC261	Decal, Console Side 18.5HP	2
15	DEC205	Decal, Cox Logo, Rear	1
16	DEC230	Decal, Bonnet, Front	1
	DEC240	Decal, Proudly Australian	2
	DEC246	Decal, Instruct, Wiring, Switch, Seat	1

Model A12508L:- Decals Rear Discharge

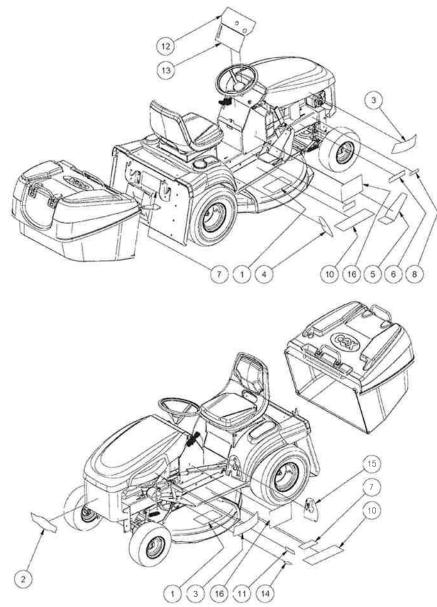

ITEM	PART NUMBER	DESCRIPTION	QTY
1	DEC116	Decal, Danger, Mowing Attachment	2
2	DEC230	Decal, Cox, Bonnet Front	1
3	DEC228	Decal, Bonnet, Side, S/Man Series 3	2
4	DEC198	Decal, Depress To Start	1
5	8906608A	Non-Skid, Pedal, Drive	1
6	DEC125	Cutter Disengage	1
7	DEC127	Mount This Side Only	1
8	DEC135	Decal, Caution, Hot Muffler	1
9	DEC136	Decal, Drive Pedal	1
10	13094	Pad, Non-Skid, Running Board	2
11	95067	Non-Slip, Brake Pedal	1
12	DEC202	Decal, Lawn Boss, Console Top	1
13	DEC203	Decal, Lawn Boss Console, Lower	1
14	DEC124	Decal, Brake	1
15	DEC231	Decal, Brake, Park, Stockman 3	1
16	DEC213	Decal, Console Side	2

Model A13409G, A14410K:- Decals Rear Discharge

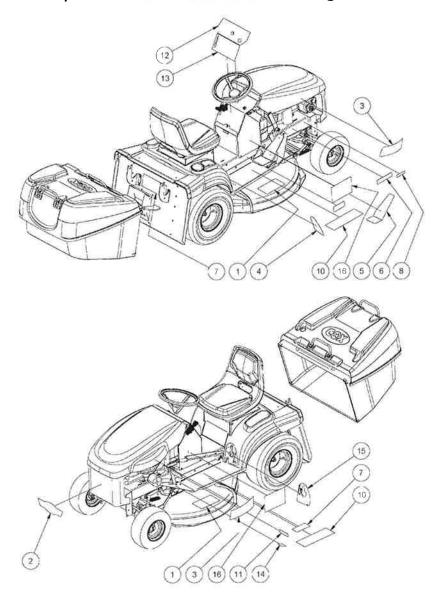

ITEM	PART NUMBER	DESCRIPTION	QTY
1	DEC116	Decal, Danger, Mowing Attachment	2
2	DEC230	Decal, Cox, Bonnet Front	1
3	DEC228	Decal, Bonnet, Side, S/Man Series 3	2
4	DEC198	Decal, Depress To Start	1
5	8906608A	Non-Skid, Pedal, Drive	1
6	DEC125	Cutter Disengage	1
7	DEC127	Mount This Side Only	1
8	DEC135	Decal, Caution, Hot Muffler	1
9	DEC136	Decal, Drive Pedal	1
10	13094	Pad, Non-Skid, Running Board	2
11	95067	Non-Slip, Brake Pedal	1
12	DEC247	Decal, Console Top	1
13	DEC244	Decal, Dash	1
14	DEC124	Decal, Brake	1
15	DEC231	Decal, Brake, Park, Stockman 3	1
16	DEC213	Decal, Console Side, 15.5HP	2
	DEC260	Decal, Console Side 16.5HP	2
	DEC240	Decal, Proudly Australian	2
	DEC246	Decal, Instruct, Wiring, Switch, Seat	1



COX INDUSTRIES WARRANTY POLICY

NEW MOWER:

COX INDUSTRIES warrants in respect of each new ride-on mower sold, that for a period of two (2) years (Domestic/Consumer use**) or six (6) months Commercial/Contractors/Hire use***) to the original purchaser from the date of purchase, COX INDUSTRIES or an authorised dealer will repair or replace free of charge any ride-on mower parts found to be defective in materials or workmanship under normal use and operating conditions provided that:

- The mower has been properly and reasonably used, operated, maintained and regularly serviced as per the maintenance schedule during the warranty period.
- The replacement or repair is performed by an authorised COX INDUSTRIES Dealer.
- ** "Domestic/Consumer use" means the personal residential household (property) used by the original retail purchaser.
- *** "Commercial use" means all other uses, including income producing, rental, schools, government departments and charity operators.

PARTS INSTALLED DURING NEW MOWER WARRANTY PERIOD:

Warranty coverage for parts installed during new mower warranty period shall consist of the remainder of the new mower warranty period or ninety (90) days, which ever is greater, provided the installation is performed by an authorised COX INDUSTRIES Dealer.

ENGINE

The engine in a new Mower is covered by the manufacturer of that specific engine, not by COX INDUSTRIES. Refer to the engine owners manual for details.

BATTERY:

The battery in a new mower is covered for a period of twelve (12) months by the battery supplier to the original purchaser from the date of purchase.

WARRANTY SERVICE:

In the event of a need for warranty service contact your local authorised COX INDUSTRIES Dealer.

Date of purchase of machine must be given before warranty claim will be accepted for processing.

WARRANTY REGISTRATION:

The warranty registration card must be completed by the dealer with the customer at the time of purchase and returned to COX INDUSTRIES or an authorised Dealer within 14 days.

WARRANTY EXCLUSIONS:

- 1) The rental of another machine or related equipment while unit repairs are in progress.
- 2) Telephone, facsimile expenses or other related communication expenses.
- Transportation and Insurance charges during transportation of failed unit or any part thereof.
- The labour, parts, mechanical adjustments or lubricant costs which, in the judgement of COX INDUSTRIES or their authorised dealer, are made or should be made as standard maintenance according to the COX-INDUSTRIES maintenance schedule.
- 5) The replacement of normal maintenance parts such as (mower discs, blades, bolts and nuts, vee belts, bearings, chains and clutch cones) made in connection with normal maintenance services as opposed to manufacturing defects.
- Any defect caused by alteration, modification, fitment of a non-genuine part or attachment not approved by COX INDUSTRIES.
- 7) Any defect caused by misuse, negligence, accidents or failure to carry out proper maintenance procedures.
- **8)** Any defect caused by work carried out by other than an authorised dealer.
- **9)** Damage caused by continued operation of the machine after it is known to be defective.
- Damage caused by racing and similar activities or by overloading.

All implied warranties (save those preserved by stature) are excluded. Liability for consequential damages under any and all warranties are excluded to the extent exclusion is permitted by law.

To the extent that it is not prevented from doing so from statute, the manufacturer will not accept liability for costs of labour, postage, cartage or delivery to replace faulty materials or parts; or for any loss, damage or accident directly, indirectly, or consequently suffered by the purchaser, operator or any other person or property as a result of such faults whether due to defective materials or workmanship or otherwise

The careless or improper use of a machine of this type can be dangerous. The manufacturer or selling agent does not accept responsibility for accident either to the operator, to the owner or to any person directly or indirectly or to property if such accident is caused by circumstances arising other than by the negligence or default of COX INDUSTRIES.

Due to COX Industries on-going commitment to product improvement, we reserve the right to change at any time, product specifications, configurations and company policies.



Cox Industries (Australia) Pty Ltd

70 Landseer Street
Acacia Ridge Qld 4110
Australia
PH 07 3323 2222 FAX 07 3344 6233

Web Site Address: www.coxmowers.com.au

Email: sales@coxmowers.com.au