

WWW.JBJLIGHTING.COM

RIMLESS DESKTOP

TABLE OF CONTENTS		
IMPORTANT SAFETY INTRUCTIONS	3—5	
INTRODUCTION		
Specifications	7	
Parts View	8	
Removable Bio-Filter	9	
Handling/Choosing a Location	10	
Filter Placement	11	
Lyra LED Light	12	
Glass LID	13	
MAINTENANCE		
Water Changes	14	
Pump Replacement	15	
WARRANTY 1		

RIMLESS DESKTOP Important Safety Instructions

WARNING

To guard against injury, basic safety precautions should be observed, including the following:

READ ALL SAFETY INSTRUCTIONS BEFORE USE. DANGER

To avoid possible electric shock, special care should be taken since water is employed in the use of aquarium equipment. For each of the following situations, do not attempt to repair yourself: return the appliance to an authorized service facility for service or discard the appliance.


A. If the appliance falls into water, DON'T reach for it! First unplug it and then retrieve it. If the electrical components of the appliance get wet, unplug the appliance immediately.

B. Carefully examine the appliance after installation. It should not be plugged in if there is water on parts not intended to be wet.

C. Do not operate any appliance if it has a damaged cord or plug, or if it is malfunctioning or if it is dropped or damaged in any manner.

D. To avoid the possibility of the appliance plug or receptacle get-

ting wet, position aquarium stand and tank to one side of a wall mounted receptacle to prevent water from dripping onto the receptacle or plug. A "drip loop", shown in the Figure at the right should be arranged by the user for each cord connecting an aquarium appliance to a receptacle. The "drip loop" is that part of the cord below the level of the receptacle or the connector if an extension cord is used, to prevent water travel along the cord and coming in contact with the receptacle. (Continued on pg. 4)

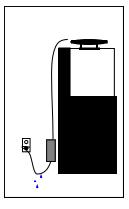

RIMLESSIDESKTOP Important Safety Instructions

D. (Continued from pg. 3)

If the plug or the receptacle do get wet, DON'T unplug the cord. Disconnect the fuse to the circuit breaker that supplies power to the appliance. Then unplug and examine for the presence of water in the receptacle.

E. Close supervision is necessary when any appliance is used by or near children.

F. To avoid injury, do not contact moving parts or hot parts such as heaters, reflectors, lamp bulbs, and etc.

G. Always unplug an appliance from the outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank the cord to pull plug from the outlet. Grasp the plug and pull to disconnect

H. Do not use an appliance for other than intended use. The use of attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.

I. Do not install or store the appliance where it will be exposed to the weather or to temperatures below freezing.

J. Make sure an appliance mounted on a tank is securely installed before operating it.

K. Read and observe all the important notices on the appliance.

L. This Appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

M. This appliance is intended FOR HOUSEHOLD INDOOR USE ONLY.

RIMLESS DESKTOP Important Safety Instructions

HANDLING

- A. Do not use ammonia base chemicals to clean the RIMLESS DESKTOP AQUARIUM
- B. Unplug Rimless Desktop electrical components before performing any maintenance
- C. Do not place anything on top of the Riimless Desktop Aquarium or Light

SAVE THESE INSTRUCTIONS



Introduction

INTRODUCTION


JBJ's Rimless Desktop aquariums are small in size and big on features. With it's low iron glass, three stage removable filter cartridges and it's dimmable 2 channel LED light the JBJ Rimless Desktop series is the perfect choice for your desktop, countertop or bookshelf. Lean back, relax and enjoy the new contemporary addition to your decor.

FEATURES

- Low Iron Glass
- Crystal Clear Viewing
- Raised Pedestal or Feet
- Removable Bio Filter
- Removable Filter Cartridge
- Designated Heater Column in Filter
- Lyra LED light
- Feather Touch 2 Channel Controls
- Low Wattage



INTRODUCTION

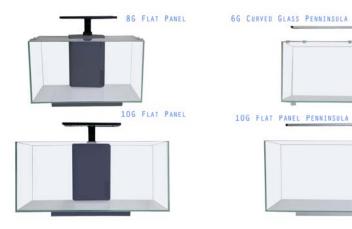


Specifications

MODEL	VOLUME	DIMS	PUMP		LIGHT
		LxWxH	WATTS	FLOW	WATTS
RL-6-CP	6g	17.7"x8.2"x10.2"	4W	76gph	7W
RL-8-FP	8G	18.8"x10.2"x10.6"	4W	76gph	10W
RL-10-FP	10G	23.6"x10.2"x10.6"	4W	76gph	10W
RL-10-FPP	10G	23.6"x10.2"x10.6"	4W	76gph	9W



PARTS VIEW

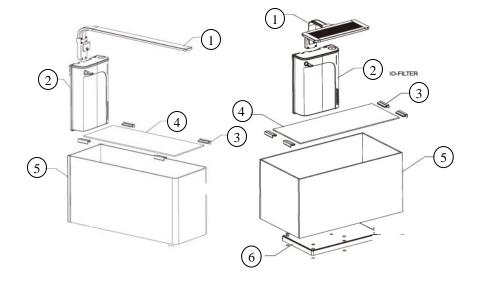


#	DESCRIPTION					
1	LYRA LED LIGHT					
2	REMOVABLE BIO-FILTER					
3	GLASS LID CLIPS					
4	GLASS LID					
5	LOW IRON RIMLESS AQUARIUM					
6	PEDESTAL					



REMOVABLE BIO-FILTER

Rimless Desktops comes standard with a Removable 3 Stage Filter with a Designated Heater Column and Return Pump Column. This filter can be placed to your desired location in your Rimless Desktop. Mounting Clip

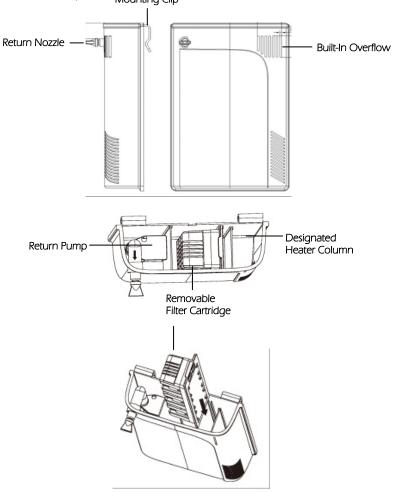



HANDLING

- Do not lift or move aquarium when filled with water
- Drain water to at 25% before lifting or moving aquarium
- Do not lift aquarium from side walls or light fixture




• Move or Lift Aquarium from the underneath



CHOOSING A LOCATION

- Find a leveled surface that can support the weight of the tank, water, and livestock. An average aquarium can weigh 10lbs per gallon once filled with water plus the weight of rock, gravel, and other accessories.
- Do not place in direct sunlight to prevent excessive algae growth and higher water temperatures.

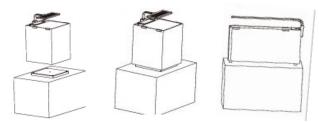






FILTER PLACEMENT

 - Attach Removable BIO-FILTER to desired location on your Rimless Desktop Aquarium
- Slide BIO-FILTER clips to glass wall
- Confirm BIO-FILTER is secure



FILLING THE TANK

- Always dechlorinate tap water before adding into the aquarium.
- Always fill with room temperature water.
- Rinse Activated Carbon in the sink for 30 seconds or until water runs clear.
- Fill the main body of the Rimless Desktop until water flows through overflow on the BIO-FILTER. Once the BIO-FILTER pump chamber is full, plug in pump power cord into an approved electrical outlet with a fuse or circuit breaker.
- Once pump is on, water will flow from the BIO-FILTER through the directional flow nozzle into the main body of the Rimless Desktop. Adjust accordingly to desired flow position.



LYRA LED LIGHT

Rimless Desktop Aquarium comes standard with the LYRA LED light. The Lyra LED Light features 2 channel smart controls and is only 24V.

MOUNTING LYRA LED LIGHT


- Loosen mounting screw located on the mounting bracket ٠ on the Lyra LED light.
- Slide light onto the desired location of the Rimless Desktop • Aquarium



CONTROLLING LYRA LED LIGHT

-Blues & Whites

There are 2 Smart control buttons on the Lyra LED Light •

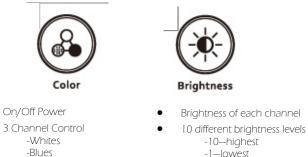



-1—lowest

 


 
GLASS LID

• Slide Glass Clips onto included Glass Lid



• Mount Glass Lid onto Rimless Desktop





RIMLESS DESKTOP

Maintenance

Regular maintenance is the key to a successful thriving aquarium. Maintaining an aquarium can be very easy with a regular cleaning schedule.

WATER CHANGES


A. Water changes should be carried out on monthly to bi-monthly schedule depending on how much bio-load is kept.
B. 25% water changes with gravel vacuuming is essential to keep dissolved organic carbons to a minimum.

REPLACING THE FILTER CARTRIDGE

• Filter Sponge should be changed on a monthly basis to remove trapped debris and free floating particulate matter.

REPLACING THE ACTIVATED CARBON

- Activated Carbon adsorbs dissolved pollutants and removes the yellow discoloration of water and associated odors.
- Replace Activated Carbon Bag on a monthly basis.

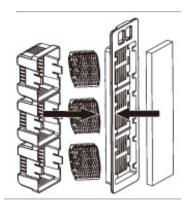





Maintenance

PUMP REPLACEMENT

- •
- Unplug Pump Pull 90deg elbow out from return chamber Pull up return pump •
- •

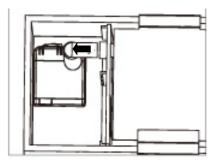

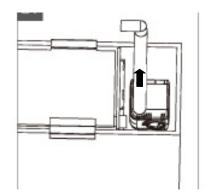





RIMLESS DESKTOP

WARRANTY INFORMATION <u>1 Year Limited Warranty</u>

Warranty

This **RIMLESS DESKTOP AQUARIUMS** is warrantied to the original purchaser against defective material and workmanship for 1 Year from the date of original purchase. This warranty is valid only under the following conditions: additions, modifications, or changes made to the product by the purchaser and not by the manufacturer shall void this warranty. Damages brought on by abuse, misapplication, or mishandling also voids this warranty.

This warranty is limited to the repair or replacement of the product at the discretion of the manufacturer. This warranty does not cover personal injury, property loss, including livestock or damage (direct, incidental, or consequential) arising out of use of this product. This warranty gives you specific rights and you may also have other rights, which may vary from state to state.

This warranty card must be filled out completely and returned within (14) days from the date of purchase. Failure to do so will void this warranty. A proof of purchase from an authorized dealer must be provided when making a warranty claim.

Upon discovery of a defect, please call us to obtain an RMA #. Tel: (310) 672-4099 / Tel: (310) 672-4021 All claims should be sent prepaid to the following address: Transworld Aquatics Enterprises, Inc. 3730 Unit 3, West Century Blvd. Inglewood, CA 90308

Custome	r Name:
Address:	
City:	
State:	Zip:
Phone#:	
Email:	
	Yes I would like to receive emails on JBJ News—New Products, Sale Rebates
	No I do not want receive emails on JBJ News
Date of F	Purchase:
Dealer P	urchased From:
Date of F	Purchase:
Please ma	il warranty registration and Proof of Purchase to:
	orld Aquatics Enterprises, Inc.
	arranty Dept.—RIMLESS DESKTOP it 3, West Century Blvd.

i

Tear Off

т



Fold Here

Stamp

Transworld Aquatic Enterprises, Inc 3730 W. Century Blvd #3 Inglewood, CA 90303 Phone: (877) 374-9981

JBJLIGHTING.COM