

CORE™ 10P Straight Wall Cabin Tent
 14ft x 10ft x 86in 4.27m x 3.05m x 2.18m 14pi x 10pi x 7.2pi

Model #40218

We Recommend...



Setup Tips

- For a comfortable night's rest, clear your camp area of debris before setting up your tent.
- When opening for the first time, the rainfly and room divider are rolled together with the tent body.
- Lay out all of the contents of the bag and assemble all tent poles before setting up your tent.
- The tent poles are color-coded to match the sleeves and pole joints.
- Push the poles through the sleeves, don't pull.
- Make sure the sleeve fabric is evenly distributed to avoid catching the pole.


Pin-and-Ring System

Pin-and-Ring: Pins are inserted into ends of leg poles.
Webbed Loop: Insert stakes through these loops to keep the tent secure.

Pole Joints


Color-Coded Pole Connector: Color-coded to match corresponding roof poles.
Roof Pole Connector: Connects to steel roof poles.
Leg Pole Connector: Leg poles lift tent roof and connect to pin-and-ring system.

Contents & Repair Parts

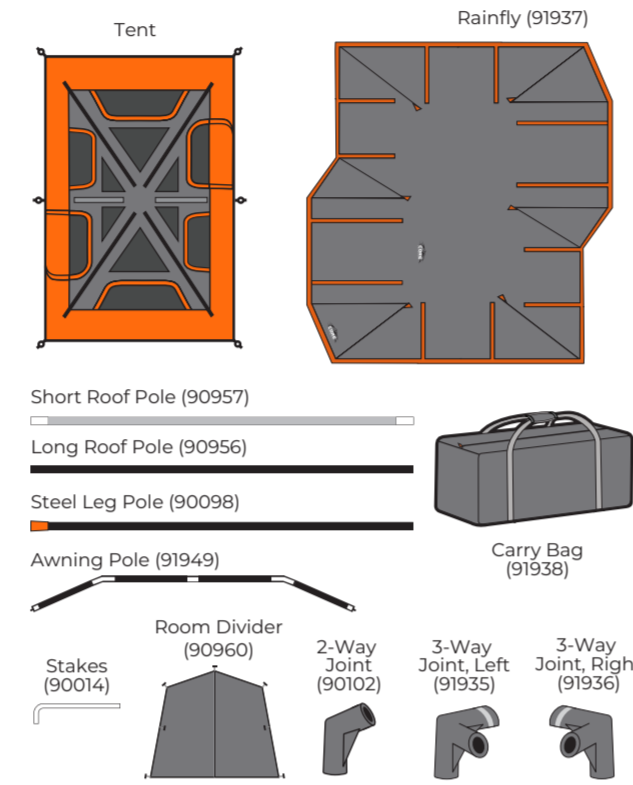


1 Stake Tent

- Pull tent out flat and tight.
- Drive stakes through all webbed loops (fig. 1).
- You may need to adjust stakes after setup.

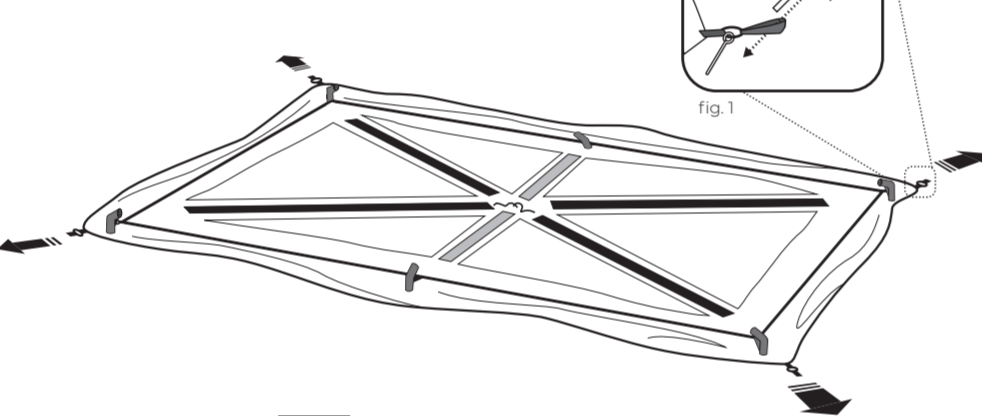


2 Insert Black Poles

- Push black poles through the black sleeves.
- Insert one end of each black pole into the ribbed end of the corner pole joint (fig. 2).
- Flex poles into an arch and insert other end of the poles into the ribbed end of the opposite corner pole joint.

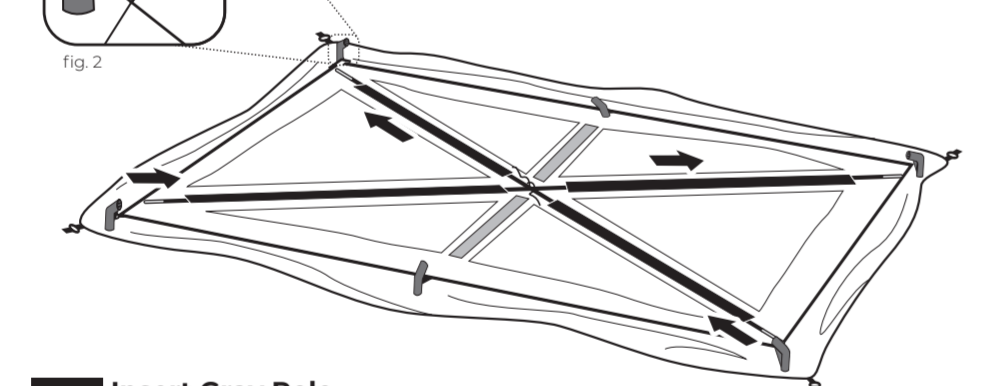


3 Insert Gray Pole

- Push gray pole through light gray sleeves, placing over black poles at the center of roof.
- Insert one end of gray pole into the ribbed end of the side pole joint.
- Flex gray pole into an arch and insert other end into the ribbed end of the opposite side pole joint.
- Tie fastener to all three poles at the intersection (fig. 3).

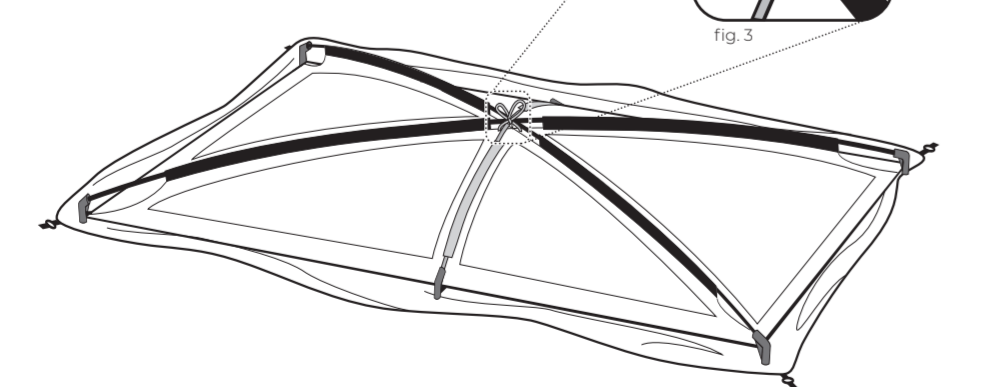

4 Insert Leg Poles

- Starting on one end, place the leg poles into the leg pole connector on pole joint (fig. 4).
- Insert the pin from the pin-and-ring system into the orange end of the leg pole (fig. 5).
- Repeat until all poles are in place, putting the poles with "D" rings in the center position on tent front and back.
- Clip plastic hooks from tent to all leg poles (fig. 6).
- Extend and stake the ground air vents located at both ends of the tent (fig. 7).

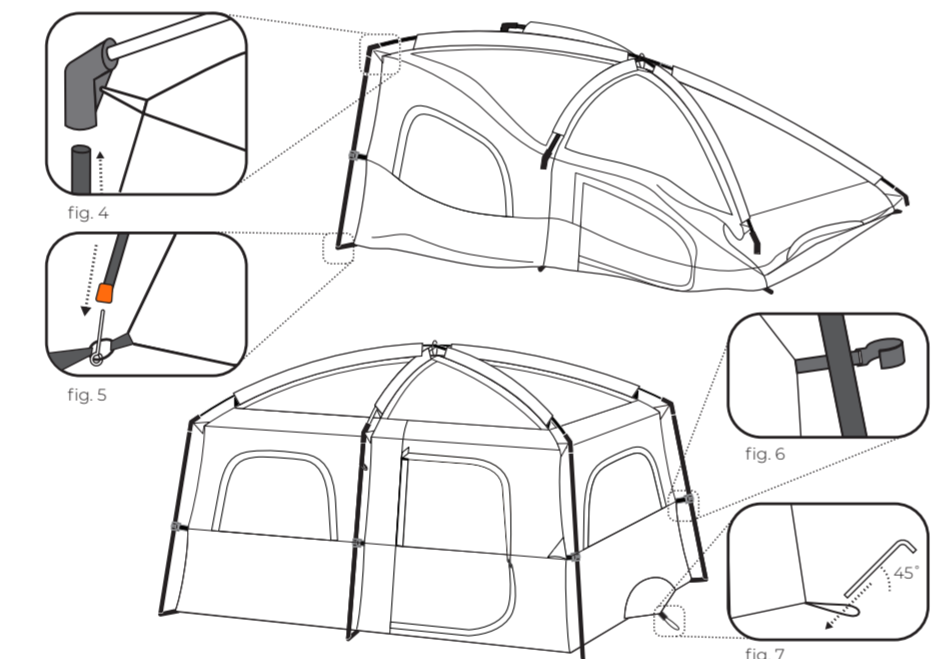

5 Attach Rainfly

- Drrape rainfly over the tent, aligning "CORE" logo above the T-door.
- Push black awning pole through the sleeve on the inside front of rainfly.
- Arch black awning pole and insert the pins on each end into the grommets located at the top of each front corner of the tent door. Repeat on opposite side with the final awning pole (fig. 8).
- Attach rainfly to leg poles using hook-and-loop fasteners located on the underside of the rainfly (fig. 9).
- Stake out each guyline and rainfly loop at a 45° angle (fig. 10).



Take Down Instructions:

- Remove stakes from guylines and ground vent. Store in stake bag.
- Disconnect S-hooks from pin-and-ring system at base of tent.
- Unfasten hook-and-loop fasteners on the underside of the rainfly from poles.
- Remove rainfly and fold into thirds length wise. This will be rolled up with the tent.
- Remove leg poles from the metal pins on pin-and-ring system and allow tent to lay flat.
- Remove the roof poles by carefully pushing poles through the sleeves away from the end at which you are standing.
- Disassemble all poles and place in pole bag.
- Remove remaining stakes. Store in stake bag.
- Fold tent lengthwise 4-5 times so the tent width is even with the carry bag. Place folded rainfly on top of tent.
- Lay bag of poles on edge of tent and rainfly, then roll around poles.
- Store in carry bag with bag of stakes.

Frequently Asked Questions:

- How do I get everything back in the bag?** The trick is to take your time and remove all the air. Use the weight of the poles to roll the tent on the ground and force air out.
- What are the ground vents?** The ground vents are designed to help with air flow throughout the tent, which keeps the tent cooler in warm weather and prevent condensation. It can be zipped shut in colder weather.
- How to clean the tent?** Clean the tent with a soft sponge, mild soap and tepid water. Be sure to scrub gently and remove all soap. Let dry in sunlight, which also naturally cleans the tent.
- What is the wall plug symbol?** That is a port for an electrical cord to access your tent. The electrical cord can be used on a campsite with power or with a generator outside your tent. It closes fully when not in use.
- Can the tent be used in the rain?** Absolutely. The tent and rainfly have a water-resistant treatment, and the seams have been sealed with water-resistant tape at the factory.
- How many seasons is this tent?** This is a 2-3 season tent, not recommended for use in severe weather conditions.
- What are the dimensions of the tent?** The tent is 14' x 10' x 86" (4.27m x 3.05m x 2.18m).

1-Year Limited Warranty:

CORE™ Equipment and Elevate LLC warrants, for a period of one year from the original date of purchase, this product against any defects in materials or workmanship. At its discretion, CORE™ Equipment may provide replacement parts to original purchaser. Original receipt or proof of purchase as well as proof of defect in the form of a photograph or video is required. CORE™ Equipment will not be responsible for shipping costs incurred outside the continental USA. Warranty is valid for the original purchaser one year from the date of purchase and is not transferable.

This warranty does not cover any product purchased through unauthorized dealers/distributors and/or unauthorized resellers on online auction websites. CORE™ uses approved and authorized distributors to furnish quality products, and CORE™ provides warranty coverage only on products purchased from those distributors. If the product was purchased from an unauthorized reseller, this warranty does not apply. Unauthorized resellers may sell products that are used, defective, counterfeit, or which may not be designed for use in that specific country. To determine whether the seller of a CORE™ Equipment product is one that has been approved and authorized by Elevate LLC owner of the CORE™ Equipment brand, please contact help@coreequipment.com.

This 1-Year Limited Warranty does NOT cover normal wear and tear, abuse or misuse of this product including damage from inclement weather conditions, such as wind, rain or hail. In case of inclement weather, remove all valuables and persons and seek appropriate shelter. Under no circumstances will CORE™ Equipment or Elevate LLC be liable or responsible for any incidental or consequential damages.

This product is designed and intended for recreational use only. Prolonged exposure to UV rays will cause any fabric to fade and deteriorate and is NOT covered by this 1-Year Limited Warranty. All replacement products or parts will assume the remaining warranty of the original product. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Warnings and Cautions:

⚠ WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC
 This tent is made of flame-resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIREPROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the product fabric may render the flame-resistant properties ineffective.

DO NOT use fuel burning devices inside or near tent materials.

DO NOT permit children to light matches, operate burning appliances or handle any flame sources in or near the tent.

Do not smoke, use matches, candles or open flames of any kind in or near the tent.

Do not refuel lanterns, stoves or heaters inside tent.

Do not cook inside tent.

Do not store flammable liquids inside tent.

⚠ WARNING: Keep clear of overhead power lines.

Do not set up your tent under trees because of potential lightning strikes or falling tree limbs in inclement weather.

For best results in windy conditions, position narrow end of tent into the wind.

Secure with all stakes and guylines provided to prevent property damage or personal injury.

Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration or any wet clothing inside the tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation throughout the tent. Never store the tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt.

Do not pack stakes inside your tent. Use the separate storage bag.

STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT TO REMOVE STAKE.

Do not leave your tent setup for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.



DO NOT SPRAY!

IMPORTANT: THE ORIGINAL FIRE RETARDANT AND WATER-REPELLENT PROTECTIVE COATINGS MAY BE COMPROMISED IF SPRAYS OR OTHER CHEMICAL TREATMENTS ARE USED ON THE TENT. FABRIC HAS BEEN FACTORY TREATED. IT IS HIGHLY WATER-REPELLENT; HOWEVER, IT IS NOT WATERPROOF. ALL TENTS CAN EXPERIENCE SEAM LEAKAGE DURING WET WEATHER. IF YOU WANT ADDITIONAL MOISTURE PROTECTION, TRY A SEAM SEALING COMPOUND ONLY; STRICTLY FOLLOW THE MANUFACTURER'S DIRECTIONS. IT IS RECOMMENDED THAT YOU SEAL THE TENT DURING THE INITIAL SETUP AS WELL AS PRIOR TO EACH CAMPING SEASON. SEAM SEALER COMPOUNDS CAN BE PURCHASED AT YOUR LOCAL CAMPING PRODUCTS OUTLET. FOR MISSING PARTS EMAIL HELP@COREEQUIPMENT.COM.

PLEASE DO NOT RETURN THIS PRODUCT TO THE RETAIL STORE.



Elevate LLC
 Overland Park, KS 66223

Made in Bangladesh · Printed in Bangladesh

Revised 7/30/21