

# Core 9 Person Dome Tent Instruction Manual

11 IN

## CORE® 9 Person Dome Tent 16ft x 9ft x 72in

Model #40269



### We Recommend...




### Setup Tips

- For a comfortable night's rest, clear your camp area of debris before setting up your tent.
- When opening for the first time, the rainfly is rolled together with the tent body.
- Lay out all of the contents of the bag and assemble all tent poles before setting up your tent.
- Push the awning pole through sleeve, don't pull.
- Make sure the sleeve fabric is evenly distributed to avoid catching the pole section ends.

### Need some help?

✉ [help@coreequipment.com](mailto:help@coreequipment.com)  
 🖱 [coreequipment.com](http://coreequipment.com)

### Contents & Repair Parts

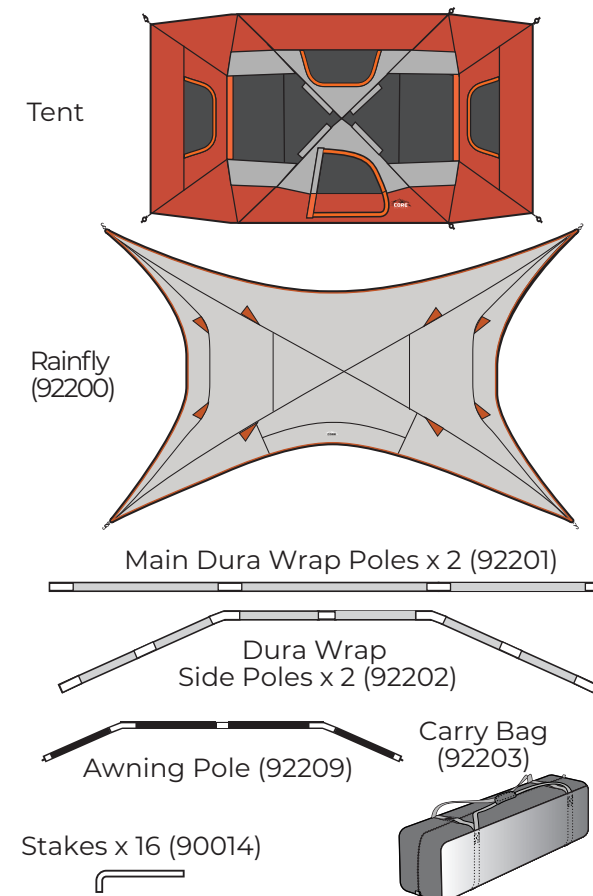

16 IN

### 1 Prepare Tent

- Pull tent out flat and tight.

- Assemble poles.
- Insert tent poles into sleeves on top of tent.
- Secure plastic "J" hook to tent poles where they cross (fig. 1).

### 2 Raise Tent

NOTE: 2 people are required for this step.

- Flex poles into an arch to raise the roof. Insert the end of each tent pole into grommets at corners of tent until tent is fully upright (fig. 2).

- Insert side poles into orange sleeves, arch and insert the tips on each end into the grommets located at the corners of the tent (fig. 3).

### 3 Secure Tent to Poles and Stake

- Clip plastic hooks to all tent poles (fig. 4).
- Drive stakes through corner webbed loops at a 45° angle (fig. 5).

### 4 Attach Rainfly

- Drape rainfly over the tent, aligning "CORE" logo above the door.
- Insert awning pole into sleeve located underneath rainfly above door of tent.
- Arch awning pole and insert the pins on each end into the grommets located at the end of each front tent pole sleeve (fig. 5).
- Attach rainfly to leg poles using hook-and-loop fasteners located on the underside of the rainfly (fig. 6).

- Fasten rainfly by attaching all four buckles around the base (fig. 7).

### 5 Attach Guylines & Stake Out

- Stake out each guyline at a 45° angle (fig. 8).
- Tighten guylines as needed by adjusting the slider up the cord.
- Stake out ground vent on both sides of tent (where air intake graphics are).



(continued on back)

### Take Down Instructions:

- Before starting take down, leave tent door and window partially open to allow air to escape.
- Remove stakes from guylines and tent corners. Store in stake bag.
- Disconnect rainfly buckles located around the base of the tent.
- Unfasten hook and loop fasteners on the underside of the rainfly from poles.
- Remove awning pole from rainfly. Disassemble and store in pole bag.
- Remove rainfly and fold into thirds lengthwise. This will be rolled up with the tent.
- Unclip all clips from tent poles.
- Remove tent poles and allow tent to lay flat.
- Disassemble tent poles, fold up and store in pole bag.
- Fold tent lengthwise 2-3 times so the tent width is even with the carry bag. Place folded rainfly on top of tent.
- Lay bag of poles on edge of tent and rainfly. Then roll around poles.
- Store in carry bag with bag of stakes.

### Frequently Asked Questions:

- Are replacement parts available?** Yes, just call Customer Service at 1-888-775-5628 for replacement parts. All parts can be replaced.
- How do I get everything back in the bag?** The trick is to take your time and remove all the air. Use the weight of the poles to roll the tent on the ground and force air out.
- How to clean the tent?** Clean the tent with a soft sponge, mild soap and tepid water. Be sure to scrub gently and remove all soap. Let it dry in sunlight, which also naturally cleans the tent.
- What is the wall plug symbol?** That is a port for an electrical cord to access your tent. The electrical cord can be used on a campsite with power or with a generator outside your tent. It closes fully when not in use.
- Can the tent be used in the rain?** Absolutely. The tent and rainfly have a water-resistant treatment, and the seams have been sealed with water-resistant tape at the factory.
- How many seasons is this tent?** This is a 2-3 season tent, not recommended for use in severe weather conditions.
- What are the dimensions of the tent?** The tent is 16' x 9' x 72" (4.88m x 2.74m x 1.83m).

### 1-Year Limited Warranty:

CORE® Equipment and Elevate LLC warrants for a period of one year from the original date of purchase, this product against any defects in materials or workmanship. At its discretion, CORE® Equipment may provide replacement parts to original purchaser. Original receipt or proof of purchase as well as proof of defect in the form of a photograph or video is required. CORE® Equipment will not be responsible for shipping costs incurred outside the continental USA. Warranty is valid for the original purchaser one from the date of purchase and is not transferable.

This warranty does not cover any product purchased through unauthorized dealers/distributors and/or unauthorized resellers on online auction websites. CORE® uses approved and authorized distributors to furnish quality products, and CORE® provides warranty coverage only on products purchased from those distributors. If the product was purchased from an unauthorized reseller, this warranty does not apply. Unauthorized resellers may sell products that are used, defective, counterfeit, or which may not be designed for use in that specific country. To determine whether the seller of a CORE® Equipment product is one that has been approved and authorized by Elevate LLC owner of the CORE® Equipment brand, please contact [help@coreequipment.com](mailto:help@coreequipment.com) or call customer service at 1-888-775-5628.

This 1-Year Limited Warranty does NOT cover normal wear and tear, abuse or misuse of this product including damage from inclement weather conditions, such as wind, rain or hail. In case of inclement weather, remove all valuables and persons and seek appropriate shelter. Under no circumstances will CORE® Equipment or Elevate LLC be liable or responsible for any incidental or consequential damages.

This product is designed and intended for recreational use only. Prolonged exposure to UV rays will cause any fabric to fade and deteriorate and is NOT covered by this 1-Year Limited Warranty. All replacement products or parts will assume the remaining warranty of the original product. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

### Warnings and Cautions:

**⚠ WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC**  
 This tent is made of flame-resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIREPROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the product fabric may render the flame-resistant properties ineffective.

**DO NOT** use fuel burning devices inside or near tent materials.

**DO NOT** permit children to light matches, operate burning appliances or handle any flame sources in or near the tent.

- Do not smoke, use matches, candles or open flames of any kind in or near the tent.

- Do not refuel lanterns, stoves or heaters inside tent.

- Do not cook inside tent.

- Do not store flammable liquids inside tent.

**⚠ WARNING: Keep clear of overhead power lines.**

- Do not set up your tent under trees because of potential lightning strikes or falling tree limbs in inclement weather.

- For best results in windy conditions, position narrow end of tent into the wind.

- Secure with all stakes and guylines provided to prevent property damage or personal injury.

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration or any wet clothing inside the tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation throughout the tent. Never store the tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt.

- Do not pack stakes inside your tent. Use a separate storage bag.

- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT TO REMOVE STAKE.

- Do not leave your tent set up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.



**DO NOT SPRAY!**

**IMPORTANT:**  
 THE ORIGINAL FIRE RETARDANT AND WATER-REPELLENT PROTECTIVE COATINGS MAY BE COMPROMISED IF SPRAYS OR OTHER CHEMICAL TREATMENTS ARE USED ON THE TENT. FABRIC HAS BEEN FACTORY TREATED. IT IS HIGHLY WATER-REPELLENT; HOWEVER, IT IS NOT WATERPROOF. ALL TENTS CAN EXPERIENCE SEAM LEAKAGE DURING WET WEATHER. IF YOU WANT ADDITIONAL MOISTURE PROTECTION, TRY A SEAM-SEALING COMPOUND ONLY; STRICTLY FOLLOW THE MANUFACTURER'S DIRECTIONS. IT IS RECOMMENDED THAT YOU SEAL THE TENT DURING THE INITIAL SETUP AS WELL AS PRIOR TO EACH CAMPING SEASON. SEAM SEALER COMPOUNDS CAN BE PURCHASED AT YOUR LOCAL CAMPING PRODUCTS OUTLET. FOR MISSING PARTS EMAIL [HELP@COREEQUIPMENT.COM](mailto:HELP@COREEQUIPMENT.COM).



Distributed by Elevate LLC.  
 8681 West 137th Street  
 Overland Park, KS 66223 USA

©2022 Elevate LLC. All rights reserved.

CORE is a trademark owned by Insight 2 Design LLC and Elevate, LLC.

Made in Bangladesh

Revised 11/10/22

STITCH LINE