 


User Guide

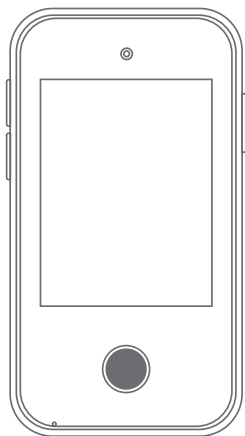 


Kids Smartphone

To watch the video instructions, Scan the QR code now or visit Bambibo.com/instructions.



Overview

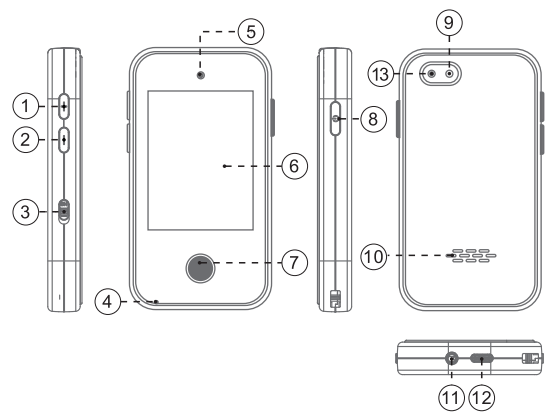


- ① Volume Up
- ② Volume Down
- ③ Reset Switch
- ④ Microphone
- ⑤ Front Camera
- ⑥ IPS Screen
- ⑦ Home
- ⑧ Power Button
- ⑨ Flashlight
- ⑩ Lower Speaker
- ⑪ 3.5 Headphone Connector
- ⑫ Type-C Port
- ⑬ Rear Camera

1

Operation Guide

- Getting Start and Switching off.
 - Long press the Power Button on the right side of the device to turn on.
 - Return back to the smartphone wallpaper interface and long press the Power Button to turn the device off.
- Please fully charge the phone before use.

 Charging Method Connect the Type-C port with the smartphone, and USB port with 5V 1A power adapter. When charging, the battery symbol will show charging. After full charged, battery symbol will show full.
- Reset Switch is used in below situation.
 - First time use, please switch on the reset button, and long press the power button.
 - Frozen in one interface cannot turn off.
 - Full charged, but cannot switch on

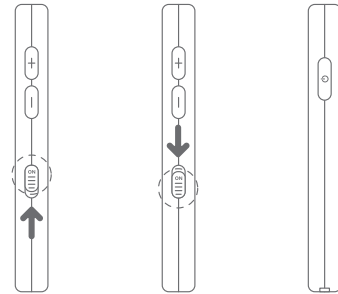

2

Functions

- Desktop Shortcut
 - Click the " " icon on the desktop shortcut key to enter the flashlight function directly.
 - Click the " " icon to enter the camera function interface directly.
- Camera
 - Tap to take photos
 - Tap to shift the front and rear camera
 - Tap to view the photo gallery
 - Tap to shift to the Sticker Camera
- Phone Gallery
 - Tap Photo Gallery to browse the captured photos. The latest file will be shown first, tap the arrow icons or swipe the screen to see the previous or next file.
 - Tap recycle bin on screen to delete the photo.
- Video Recorder
 - Tap the video icon on the screen to begin video recording.
 - Tap to stop and save the video recording.
 - Tap the to view video gallery.
 - To delete a file, tap "Options - Delete/Delete all files".
 - Tap to shift front and rear camera.

3

- Video Player
 - Tap the video gallery icon to view videos players.
 - The latest file will be shown firstly.
 - Tap the arrow icons to see the previous or next video. To delete a file, tap Option to delete.
- Music Player
 - To upload music to the smartphone, use the Type-C USB cable to connect the smartphone to a computer/laptop. Copy any MP3 music files to the smartphone folder "My Music". After transferring is complete, safely eject the smartphone from your computer and unplug the USB cable.
- Voice Recorder
 - Tap to start voice record.
 - Tap to end voice record and save.
 - Tap to play voice record.
 - Tap to stop voice record.
 - Tap to delete voice record.
- Calculator
 - Use the calculator for basic calculations. Don't use this to cheat on tests, or you will never learn how to work out the answers by yourself.
- Calendar
 - Use the calendar to view the date. If the date shows incorrect, please go to the settings menu to reset the date and time information.

4

- Flashlight
 - Tap go into the function
 - Tap the orange button to turn on or off the flashlight.
- Theme
 - There are a few different wallpapers built in, choose the one you like to set the wallpaper.
- Alarm
 - Tap the Alarm icon to set the time, can set 4 different alarms at one time.
- Stopwatch
 - Tap the play icon to start the stopwatch.
 - While the stopwatch is running, tap to pause the stopwatch, tap again to resume.
 - Tap to stop the stopwatch and reset the stopwatch to zero.
- Timer/Countdown
 - Use this activity to set a countdown timer.
 - Tap the Timer to set the time.
 - Tap the play icon to start the timer.
 - Tap to pause the timer.
 - Tap to stop the timer and reset the timer.
- Games
 - There are 13 games built-in.
 - Tap "Help" or "?" to learn game instruction.
 - Game lists: Crawl 2048, Basketball Shoot Master,

5

Pinball Hit Bricks, Car Grab Goods, Ultimate Racing, Bee War, Beauty Princess, Snake in the Grass, Finger-guessing, Table Tennis, Aircraft, Colorful Jerry, Sweet Together.

- Funny ABC
 - This is an educational function to help kids to learn 26 letters. Each letter will match one animal with the relative sound.
- Buildings
 - This is an educational function to help kids to know the famous buildings in the world. Tap the national flag, will show the relative famous building of this country.
- Habit Tracker
 - This is a puzzle function, which can set alarm to remind the kids to build up good habits.
- Daily Guide
 - Learn from the LifeGuide!
 - How to make up your bed?
 - How to wash your hands?
 - How to brush your teeth?
 - How to tie your shoes?
 - How to dress?

6

- DIY
 - Free drawing: with lovely stickers and colorful pens.
- Story
 - There are 10 classic fairy tales and fable stories, with gentle voice, accompany the kids to sleep.
- Settings
 - Languages (13) : English/French/Russian/German/Italian/Spanish/Dutch/Turkish/Russian/Bulgarian/Swedish/Estonian/Korean
 - Time and Date Setting
 - Volume Setting
 - Screen Setting: Brightness and Brightness Time Setting
 - School Mode: Period Setting, Date Setting and ON-OFF
 - Factory Reset

Attention:

- Children 0-3 years old should use this product under the supervision of their parents
- Do not use while charging
- Do not put the product near fire

7

Troubleshooting

Please check the troubleshooting steps outlined below, and if you still have any issues, contact supplier support.

| | Problems | Solution | Reference Pictures |
|---|--|--|--------------------|
| 1 | Screen freezes or blocks | Restart the phone according to the pictures indicated of the reset switch. | |
| 2 | Serious noise | Please check whether the earphone jack is clean, foreign matter can cause noise; Check whether the music file is damaged, and change other music to determine. If the file is damaged, it may cause serious noise or skipping. | |
| 3 | No sound after connecting with earphone or headphone | ① Please check if the volume is set to 0. ② Please check if the earphone or headphone are no problem and well connected. | |
| 4 | Abnormal connection between phone and computer | ① Check the connections if the USB transferring cable is well connected between phone and computer. ② Reset the kids smartphone and try again. ③ Unplug from the computer and reconnect. | |

8

Product Parameters



| | |
|------------------|------------------------|
| Screen | 2.8 Inch IPS HD Screen |
| Resolution | 240*320 |
| Material | ABC, Silicone |
| Built-in Memory | 32 GB |
| Camera | Dual Camera |
| Audio Format | MP3 |
| Video Format | AVI |
| Battery Type | Li-ion Cobalt Battery |
| Battery Capacity | 850mAh |
| Video Resolution | 1080p HD |
| Charging Type | Type-C |

WARNING
CHOKING HAZARD - Small Parts.
Not for children under 3 years.

Importer Name: Shama International FZE
Address: Dubai Traders Market, Jebel Ali Freezone, Dubai, UAE
Email: hello@bambibo.com
Visit us at www.bambibo.com
Designed In Dubai
Made In China



FOR MORE INSTRUCTIONS

visit

www.bambibo.com/instructions

Follow, Like & Share



@BambiboToys

@bambibo_toys

THANK YOU!!!

We Care About Your Happiness The Most.

To receive a complimentary one-year replacement warranty.



or visit us

www.bambibo.com/register