



## Rowan Engineering

### Single Shot Loader .177 and .22 cal. Daystate Revere

Thank you for your purchase. Please read these fitting instructions before using the loader.

Your kit should contain –

1 off SSL

1 off 1.5mm short allen key

1 off 2.0 mm allen key

1 off eccentric lock tab and bolt

Safety first.

Observe safe practices when handling your rifle and follow the manufacturer's safety instructions when doing so.

Take extra care when working on your rifle. Ensure that the rifle is switched OFF and the safety catch is set to safe and is absolutely not loaded with pellets.

1. Before fitting the loader, please read and understand these instructions fully.

 
The loader can set to enable it to be fitted from either the left or right side of the rifle depending on your preference.

This is done in a similar manner as fitting the Daystate multi-shot magazine.

2. A locking tab on the end of the loader prevents the loader from sliding out. Rotate the tab to fit the loader and then rotate the tab outwards to prevent the loader from moving.


A M3 grub screw located in the side wall of the loader. This can be optionally very gently tightened to prevent the loader from moving. Don't forget to loosen this when removing the loader from the rifle.

Access the grub screw from the central slot in the loader body.

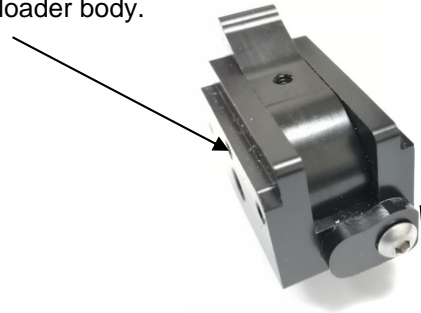

3. On the underside of the loader are location pins. These have two positions:-

 A) Outside for Pulsar and Wolverine R

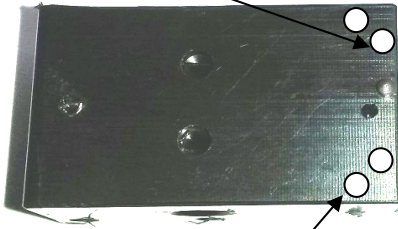

B) Towards centre for Revere, Wolverine B, C etc.

Set this for each particular rifle to position the loader centrally.

To move, grip the pin with small pliers to pull out.

4. The grub screw fitted to the top of the loader arm allows the oring which grips the pellet to be adjusted for grip. Screw inwards to swell the oring and provide more grip.

Photo shows when loader is fitted from the right side.

Swap to other face for Right side fitting.



6. Once fitted, the loader is ready for use.