

Mimaki TS330 Xmas Shutdown



Cleaning Tools

MS Cleaning Solution 03 (MML003ZK1-B).

Plastic Eye Dropper.

Cleaning Foam Swab (Jet100) and lint-free Cloth.

Important Notice

Check Ink Levels - Replace any INK Cartridges with LOW ink level - Red Led Light.

Replace any Expired or "One month to expired" Ink Cartridges - Yellow Light.

Replace the Mild Solvent Cleaning Cartridge if it is less than half full.

Raise the clamps and remove the media.

Empty the waste ink bottle.

Replace the wiper cloth if below 50%

Agitate White ink if applicable

Steps

Perform DAILY CLEANING Maintenance (Clean Wiper unit, Caps, Printhead surrounds).

Perform NORMAL CLEAN

Perform NOZZLE TEST draw pattern check.

Perform CUSTODY WASH.

Switch off SUB POWER (Green front button).

Do not switch off main power at the side of the printer or at the wall.

Do not leave the printer in a warm room over 35c.

Check screen - No errors

User Manual

Please refer to the user manual if unsure how to perform the steps above.