# MORECOM

IPV58

# User Guide



# MORECOM



# User Guide

#### Make a Call

1. Pick up the handset.

2. Enter a number, and then press the Call soft key.

### Make a Call with a Headset

- 1. Plug in headset and make sure the icon displays on the screen.
- 2. Press Headset 💽 button.
- 3. Enter a number using the keypad and then press the **Call** soft key or the Headset **(2)** button

#### Make a Call with the Speakerphone

Press Speakerphone 
 Enter a number, and then press the Call soft key.

#### **Answer a Call**

Pick up the handset or if you are using the **speakerphone**, press button or **Call** soft key.

#### Put a Call on Hold

Press d or the **Hold** soft key during an active call. To resume a held call, press button or the **Resume** soft key.

#### **View Your Recent Calls**

- 1. Press the **Call log** soft key when the phone is idle, scroll through the list by moving your finger up or down on the screen.
- 2. Select an entry from the list, and use the **Call** soft key to place the call.
- Press the **Delete** soft key to delete the entry from the list.

### **Transfer a Call to Another Person**

- 1. From a call that is not on hold, press . button or the **Transfer** soft key.
- 2. Enter the other person's phone number or press users **BLF** soft key if you that feature enabled.

#### Add Another Person to a Call

- 1. From a connected call that is not on hold, press the **Conference** soft key.
- 2. Enter the number of the second party, and then press the **Call** soft key.
- Press the Conference soft key again when the second party answers. All parties are now joined in the conference.

### **Mute Your Audio**

Press Mute button.
 Press Mute button again to turn mute off.

#### Listen to Your Voice Messages

The Message Waiting Indicator on the idle screen indicates that you have new voice messages waiting. The power indicator LED slow flashes red.

To listen to voice mail messages:
1. Press I or dail \*123
2. Follow the voice prompts to listen to your voice messages and enter your pin.

## **Call Forwarding**

Press (•) to enable predefined call forward Press (•) to disable call forward

#### Adjust the Volume in a Call

Press Volume - Press Volume - Press Volume - Press Volume - Press Volume, adjust the handset, headset, or speakerphone volume, during a call.

#### **Adjust the Ringtone Volume**

Press Volume - left or right to adjust the ringer volume when the phone is not in use.

#### **Change the Ringtone**

 Press the Menu soft key when the phone is idle, and then select Basic > Sound > Ring Tones.
 Press ( ) or ( ) to select. the desired ring tone.
 Press the Save soft key to accept the change.

#### **Call Pickup**

Lift Handset and press Call Pickup softkey, or dial \*88.

#### **Do Not Disturb mode**

To enable **DO NOT DISTURB** press the **DND soft** key.

#### **External Directory**

Press the **Directory** soft key
 Use and buttons to scroll through the list
 Select an entry fom the list and use the **Call** soft key to place the call.