



## QUICK START GUIDE



Spin



Speed Ratio



Flight Speed



Arm Speed



Thank you very much for your trust and patience. You are one of the first members of our Disko-family and you are holding the limited edition first run GameProofer tag with disc.

1. Charge the GameProofer tag before use with wireless charger. The wireless charging supports all major Qi-compatible wireless chargers. If the charging does not start, move the tag on top of the wireless charger to find the right place.



2. Download the GameProofer™ app from Google Play Store or Apple App Store and install it on your mobile device. Follow the instructions to create user account



3. Wake up the GameProofer tag by hovering the GameProofer magnet over the GameProofer tag. Blue light will light for a second.
4. Pair the GameProofer tag and app by logging in to the GameProofer app and follow the instructions in the app.
5. Be sure to update your GameProofer tag to the latest firmware before using it.
6. GameProofer tag will automatically recognize the throw. After the throw, the disc can be picked up, when the led turns green and the data will appear to the app.
7. Power off the GameProofer tag when stopping the practice, this can be done from the "My Discs" and selecting "Power off" from settings of the disc.

The GameProofer tag is intended for training in the open field outdoors or indoors, either thrown into the net or in a purposeful hall.

We hope you enjoy practicing with GameProofer tag and we wish to hear your feedback through GameProofer app.

Distance



Wobble



Nose Angle



Tilt

