

# KRISONS®

## USER MANUAL



## Eiffel Tower

*SIMPLY MATCHLESS!*

## Tower Speakers

### Dear User,

Thank you for purchasing this products. You are requested to read this manual carefully before using this device.

Marketing and Manufacturing by

**KRISONS ELECTRONICS SYSTEMS LIMITED.**

**Address :** A-137, IInd Floor, Okhla Industrial Area  
Phase-II, New Delhi-110020 INDIA

**Email id:** info@krisons.com

**Website:** www.krisons.com

**Customer Helpline No:** +91-9910016757 (Timing: 10:30am - 6:00pm)

**Landline:** 01149053145

Monday - Saturday

## Remote Key Function



1. **Power** : while press off the product comes in standby mode, display goes off no function will work .
2. **Mode**: (Short press) Change the function to FM, Bluetooth, Line in/Aux & USB .
3. **Equalizer Function**: Select Audio Effect through Pre Equalized Tone (i.e.) Jazz, Rock, Pop ,Classic, Country, Normal.  
*Note: This function will work only during USB Play & Bluetooth*
4. **Mute** : while press you can mute the sound
5. **CURSOR BUTTON** :
  - I. **Volume +/-** in all mode.
  - II. **Next** ►►  
**USB**: (Short press) will be next song (Long press) will be fast forward the song.  
**FM**: (Short press) Manual tuning (+), (Long press) will be Fine tuning.(+)  
**Bluetooth** : Next song
  - III. **Previous** ◀◀  
**USB**: (Short press) will be previous song (Long press) will be fast rewind the song.  
**FM** : (Short press) Manual tuning (-), (Long press) will be Fine tuning.(-)  
**Bluetooth** : Previous song.
- IV. **Play/Pause** ►◄  
**USB & Bluetooth** : You can play & pause the songs.  
**FM** : Select saved channel of FM (+)
6. **SCAN**: Auto tune the FM channel and memorized also sequentially .
7. **REPEAT** : You can choose option of song play Repeat Random, folder option while USB play.
8. **Numeric buttons**: (0 – 9) You can select songs track while Playing USB drive and change FM Programs/stations directly.

## WARRANTY CARD

### WARRANTY REGISTRATION CERTIFICATE

Mr /Mrs/Ms First Name: .....

Last Name: .....

Address: .....

Contact no: .....

Model no: .....

Serial no: .....

Date of purchased: .....

Invoice no : .....

Retail outlet / Website name Where Purchased: .....

Purchased Order no /date: .....

## WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 15 days from the date of purchased .We guarantee the provision of free services of KRISONS product within the warranty period from its date of purchased from Authorised dealer.

The period and conditions of our service are as follow:

1. The warranty covers services by our KRISONS Authorised service center. The warranty card together with invoice must be presented when servicing is required. The warranty card is irreplaceable in the event of lose.
2. Repair services will be provided for defects arising from normal usage for the following period commencing from the date of purchase from KRISONS Service center.(Parts would be replace when necessary)
  - A. Electrical parts .....1 year
  - B. Technical service free.....1 year
3. Under the following circumstance, service and parts will be chargeable even within warranty period:
  - A. Failure to present the warranty card and invoice when service is required. Full particulars not clearly shown or alterations made against information. For E.g...Alteration of date of purchases, serial number altered or removed.
  - B. This unit being tempered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This warranty does not cover damage .occurring in transit by or from the customer.
  - C. The defect is caused by the attack of household pests, fire, lighting, natural disasters pollution, abnormal voltage or the usage of generator.

## Specifications

### Eiffel Tower

**Output Power:**

**Satellite Speakers :** 15X7 (THD+N=10%,1KHz)

**Subwoofer:** 35W THD+N=10%,80Hz)

**Speaker Unit:**

Satellite Speakers: 3" 4Ω

Subwoofer: 5.25" 4Ω

**Power:** 220V-240V ~50Hz

**Compatible:** Smartphone's and tablets supporting Bluetooth (A2DP) Protocol.

**Frequency Response:**

Subwoofer: 50 Hz-120 Hz

Satellites: 120 Hz -15 KHz

Separation: ≥ 35db

S/N Ratio: ≤ 65db

## Contains Package

1. Main Unit Tower-1
2. Remote control- 1Pc
3. Operating manual-1 Ps
4. 2 RCA to 1 EP Stereo Aux cable -1 Pc
5. Warranty Card.


## CAUTION:

- Do not place the system in the high -temp and humid environment, prevent it from raining or rough handling and strong shock
- In order to avoid electric shock and other accidents ,do not open the set for repair without any professional guidance.
- In case fragments or other liquids is accidentally sprinkled inside the cabinet please switch off power immediately in case of repair please come to the professional maintenance for help.
- Switch off the power and take off the plug from the power jack when the system is not on work.
- Keep it safe from water drops or splashing water, and no liquids container should be allowed to be put on its top side.
- Keep the cabinet vent away from the wall by least 20 mm the vent should not be blocked from air. Do not keep it close to the fire

## Key Function of Front Panel & Back Panel Eiffel Tower



Front View

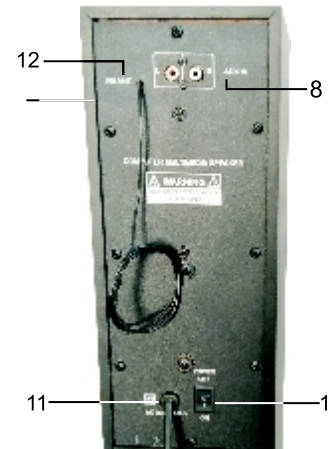

Back View

1. **Rotary Volume/Bass / Treble Control**
2. **USB / Pen Drive Port**
3. **Display**
4. **Mode:** (Short press) Change the function to FM, Bluetooth, Line in/Aux & USB .(Long press) Recording will start or stop/replay of Line in or FM, when the pen drive inserted in the set .
5. **Play /Pause/ Scan :** ►| (Short Press) Play/ Pause the songs during USB Play & Bluetooth, during FM change the FM Programs/stations (+)(Long Press) In FM mode Auto tune the channel and memorized also sequentially, In Bluetooth it will be unpair from mobile phone.
6. **Next :** ►► (Long press) Volume will be increase (+) in all modes . (Short press) during USB Play & Bluetooth will be select next song , in FM will be manual tuning.(+)
7. **Previous :** ◀◀ (Long press) Volume will be decrease (-) in all modes . (Short press) during USB Play & Bluetooth will be select previous song, in FM will be manual tuning.(-)
8. **Aux/ Line in Socket.**
9. **TF Socket**
10. **On/ Off -Power Switch**
11. **Power cord**
12. **FM Antenna**