The warranty will be effective only if the warranty card is completed and returned to company within 15 days from the date of purchased our guarantee the provision of free services of KRISONS product within the warranty period from its date of purchased from Authorised

This period and conditions of our services are as follows:

- 1. The warranty covers services by our KRISONS Authorised service center. The warranty card together with invoice must be presented when servicing is required. The warranty card is irreptaceable in the event of lose.
- 2. Repair services will be provided for defects arising from normal usage for the following period commencing from the date of purchase from KRISONS Services center. (parts would be replaces when necessary)

 - B. Technical services free
- 3. Under the following circumstance, service and parts will be chargeable even within warranty period
 - A. Failure to present the warranty card and invoice when service is required Full particulars not clearly shown or alterations made against information. For E.g. Alteration of date of purchases. serial number altered
 - B. This unit being tempered with, altered in any way by any unathorised technicians or which has been subjected to misuse, negligence or accident. This warranty does not cover damage occurning in transit by or from the customer.
 - The defect is caused by the attack of household pests, fire lighting, natural disasters pollution. abnormal voltage or the usage of generator.

Panel Function Rockstar

Front Speakers: 10w x 2 (THD+N=10%, 1KHz) **Speakers Unit**: Frontspeakers: $4^{"}/3 \Omega x^2$

Power: 3.7 V / 1800 mAh

Compatible: Smartphone's and tables supporting

Bluetooth (A2DP) Protocol. Frequency Response: Front Speakers: 840 Hz - 10 KH

Separation :> 35 db s/nRatio: 65db

Contains Package

1. Main Unit - 1Pc.

Wired Mic-1Pc

4. Operating Manual - 1Pc.

5. Chargeable Cable - 1Pc.

5. Warranty Card.

Marketing and Manufacturing by :

ZYTEL ENTERPRISE PRIVATE LIMITED

Address: A-137, 2nd Floor, Okhla Industrial Area, Phase-2, New Delhi-110020, INDIA

E-mail: service@krisons.com Website: www.krisons.com

Customer Helpline No.: +91 9910016757, 8287124581

(Timing: 10.30 AM-6.00PM (Monday - Saturday)

USER MANUAL

KRISÖNS®



Rockstar

Bluetooth Speaker

 
Dear User,

Thank you for purchasing this products. You are requested to read this manual carefully before using this device.

CAUTION:

- Do not place the system in the high-temp and humid environment prevent it from raining or rough handling and strong shock.
- In order to avoid electric shock and other accidents do not open the set for repair without any professional guidance.
- In case fragments or other liqids is accidentally sprinkled inside the cabinet please switch off power immediately in case of repair please visit to the professional maintenance for help.
- Switch off the power and take off the charger from the power socket when the system is not on work.
- Keep it safe from water drops or splashing water. and no liquids container should be a allowed to be put on its top side.
- Keep the cabinet vent away from the wall by least 20 mm the vent should not be blocked from air. Do not keep it close to the fire.

Panel Function Rockstar



Mode. Change the function to FM, Bluetooth, Line in and USB

TOP VIEW

- Next ▶▶ Short press in (USB & BT) will be select next song. In (FM) preset program will change in next .Long press Volume will be increase in all mode.
- Play/Pause: Short press:(FM, USB & Bluetooth): You can play & pause the songs. Long Press: its work only in FM, if you long press in FM, it will Auto tune the FM channel and memorized also
- 4. Previous ◀◀ Short press in (USB & BT) will be select previous song. In (FM) preset program will change in previous .Long press Volume will be decrease in all mode.
- Charging/Function indicator. During Charging this will indicate in Red, In Bluetooth Blue LED will blink, after paired with any device this will be steady, during auto tuning of FM, Blue LED will blink after stop tuning this will be steady, In USB when search the song Blue LED will blinking in fast speed, when the song normal play LED blinking speed will slow.
- 6. Micro SD Card Socket. (You can play Audio songs in MP3
- 7. USB/ Pen Drive Port. (You can play Audio songs in MP3 Format)
- ON / Off Switch.
- 9. 5V Charging socket. You can charge with any charger whose capacity is Minimum 1 Amp or More
- 10. AUX Socket (Any other source of external stereo audio signal can apply from TV, Mobile Laptop, and Computer by connecting the
- 11. Mic Socket

WARRANTY CARD

WARRANTY REGISTRATION CERTIFICATE

Mr/Mrs/Ms First Name :
Last Name:
Address
Contact No.
Model No.
Serial No.
Date of Purchased:
Invoice No.
Retail outlet/Website name Where Purchased :
Purchased Order No./Date