

BOLZZEN

Magneto

ELECTRIC SCOOTER
USER MANUAL



www.bolzzen.com



BEFORE READING MANUAL

This manual contains important information to help you use your scooter in the safest way possible.

DANGER Indicates a hazardous situation that will result in serious injury.

WARNING Indicates a hazardous situation that could result in serious injury.

CAUTION Indicates a hazardous situation that could result in minor or moderate injury.

BEFORE READING MANUAL

✓ Please read this manual carefully before using this Scooter

! General safety guidelines and restrictions

Even if your scooter is within the warranty period, you may be liable for any accident caused by any of the following causes.




1. Be careful of water!

This product and components are **NOT** waterproof. Do not let water get into your scooter and components.

*Never use your scooter if the road is wet due to rain, snow or hailstone.

*If you wash your scooter the electrical components may be vulnerable for water ingress so please take extreme care when doing so as this can result in malfunction and/or permanent damage.

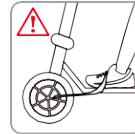

2. Beware of folding and moving parts!

If parts of the body, such as a finger or hair, get caught in the moving or folding parts of the scooter, this may lead to severe injuries. Please be careful.



3. No stunts or tricks

Stunts and tricks such as jumping, wheel-stands etc are strictly prohibited as they can cause malfunction, permanent damage & increase risk of accidents resulting in injury.




4. No companion boarding

This scooter is intended for one adult only, so children, infants, or two people are prohibited from boarding.




5. Self-maintenance

Do not open or modify any electrical component including but not limited to batteries, controllers or motors. Doing so will void your warranty. Changing of brake pads, tubes, tyres and other general **non-electrical** maintenance is encouraged.

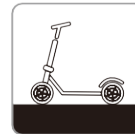

6. Laws and regulations

Certain States and Territories of Australia either prohibit the use of, or have specific laws in place for the use of this Bolzen scooter. Please comply with the applicable laws and regulations of your location and operate this scooter safely, legally and with enjoyment.

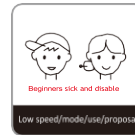

7. Novice riders

Novice riders who are not experienced in riding electric scooters should avoid high speed mode riding and recommend low speed riding.



8. Use of brakes

Sudden braking should be done safely. To do this you will need to apply equal amount of pressure to both front and rear brakes. Using excess pressure on the front opposed to the rear could result in the scooter overturning forwards.

With this in mind, it is certainly not recommended to only use the rear brakes which will reduce stopping power and cause uneven wear of your brake pads.



9. Riding on inclines

Acceptable gradeability is different for each scooter. Excessive inclines exceeding the specification may cause damage to the electrical components due to temperature cut, overcurrent or low voltage cut, which may cause the scooter to malfunction.



10. Safety warning when lifting the product

Please always lift the scooter with at least one other person. When lifting the scooter, please use correct lifting procedures to avoid injury.



11. Safety gear

For your safety, be sure to wear a full face helmet and other protective gear (knees, elbows, hands, upper body) and do not wear inappropriate footwear such as thongs, high heels etc. that can hinder safe riding.

2 Precaution before riding

1 Night riding should be avoided where possible. If doing so, all scooter lights should be switched on and a high visibility vest is strongly encouraged.

2 Select the mode that best suits your riding ability. In order to handle sudden situations, be prepared to slow down and brake at all times.

3 When turning left / right, slow down to avoid the danger of overturning or slipping, then turn safely.

4 When crossing a pedestrian crossing, dismount and walk alongside the scooter.

5 Do not ride in a way that threatens any other means of transport, such as pedestrians, bicycles, motorcycles, cars and trucks etc.


6 When passing speed bumps and road obstacles, be sure to slow down.

7 When decelerating or braking, do not stop with your foot, but by using the brake appropriately.

8 Beware of the risk of burns due to heat from the motor and brake (especially disc rotor) after riding.

9 Always keep two hands firmly on the handlebars whilst riding. Due to small diameter of scooter wheels/tyres relaxed or one-handed riding will almost certainly result in an accident.

10 Do not ride with the kick stand down.

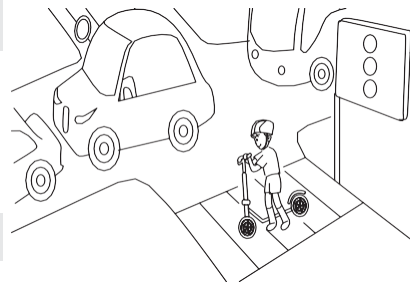

COMPONENTS LIST / DIAGRAM



- | | |
|---------------------------|----------------------|
| 1. Handle bar grip | 13. Rear Suspension |
| 2. Right Brake lever | 14. Rear tail light |
| 3. Display | 15. Hub Motor |
| 4. Power and Mode buttons | 16. Rear 10" Tyre |
| 5. Left Brake Lever | 17. Kickstand |
| 6. Handle Bar grip | 18. Stem Lock |
| 7. Thumb Throttle | 19. Headlight |
| 8. Stem Hook | 20. Front 10" Tyre |
| 9. Stem | 21. Front Suspension |
| 10. Deck | 22. Disc Brake |
| 11. Stem Hook Lock | 23. Charging Port |
| 12. Rear mudguard | |

DISPLAY

Operation ON/OFF

Press and hold the POWER button to switch the display.

Short press the M button once (<1 second) to switch gears, a total of 3 gears (1 gear, 2 gear, 3 gear)

Switch the display content

Short press the M button twice to cycle through the display content. Speed display (KM/H) > battery voltage (XX)-> accumulated mileage (ODO). Note: The accumulated mileage will continue to accumulate every time the scooter is turned off and on again.

Light control

The headlight button turns both the headlight and the taillight ON/OFF. Note: The headlight on with icon on

Battery undervoltage

When the battery undervoltage is detected, the last indicator of the power flashes, the scooter can still be ridden for a short distance, but it is recommended to charge scooter immediately.

Cruise

When entering cruise control, the current speed unit will flash. Adjust accordingly to set speed.

Brake status

Brake warning. After the brake power-off switch fails, this sign will always be displayed.

WARRANTY TERMS & CONDITIONS

- The Bolzen warranty does not cover the following:
- Damage caused by improper use, tampering, or modification
- Damage caused by not following the recommendations in this knowledge base
- Damage and breakages caused by accidents
- Damage or failure caused by intentional misuse of this product
- Bolzen Scooters are NOT made for jumping, this will void warranty.
- Reasonable wear and tear on consumables (i.e., tires and brake pads/discs)
- All Bolzen scooters have a water IP rating but this DOES NOT allow for such things as – use in medium to heavy rain and hosing. Water damage only occurs when this has not been followed and therefore voids warranty.
- Warranty is not transferable. We recommend only buying from our authorised dealers.
- Warranty claims must be made through your authorised Bolzen retailer.
-
- Each warranty claim is subject to Bolzen approval based on evidence and advice provided to us by our own technicians, and/or supplier, repairer network.
-
- All Bolzen scooters come with a unique serial number. This is the buyers responsibility to keep a record of for cases of theft. Bolzen do not store this information.

MOTOR	12-Months From Purchase
ACCELERATOR MODULE	12-Months From Purchase
CONTROLLER MODULE	12-Months From Purchase
CHARGER	12-Months From Purchase
BATTERY	12-Months From Purchase
FRAME	12-Months From Purchase

