

## **LED Codes**

LED 1

Power and Fault Codes

**ECU Hold Power Active BLUE** 

No connection to comms board RED

[ECU Fault Codes - Flashing codes using the color above]

LED 2

Wi-Fi and Bluetooth

**OFF** 

**FLASHING GREEN** 

SOLID GREEN **FLASHING BLUE** 

SOLID BLUE

Wi-Fi Turned off

Wi-Fi in AP Mode

Wi-Fi in AP Mode with client connected

Wi-Fi in Client Mode

Wi-Fi in Client Mode connect to Wi-Fi

**SOLID WHITE** Client connected over UDP

## LED 3

## Logging/GPS Status

	GPS Off	GPS Enabled	GPS Locked	GPS Error
ECU Logging Off	LED Off	Flashing Blue	Solid Blue	Flash Purple
ECU Logging Armed	Flashing Green	Flashing White	Alternating Blue/ White	Flashing Purple
ECU Logging Running	Solid Green	Alternating Green/ White	Solid White	Flashing Purple
ECU Logging Error	Flashing Yellow	Flashing Yellow	Flashing Yellow	Flashing Red

