


ORIGIN

WITH YOU ON THE JOURNEY

INSTRUCTION MANUAL

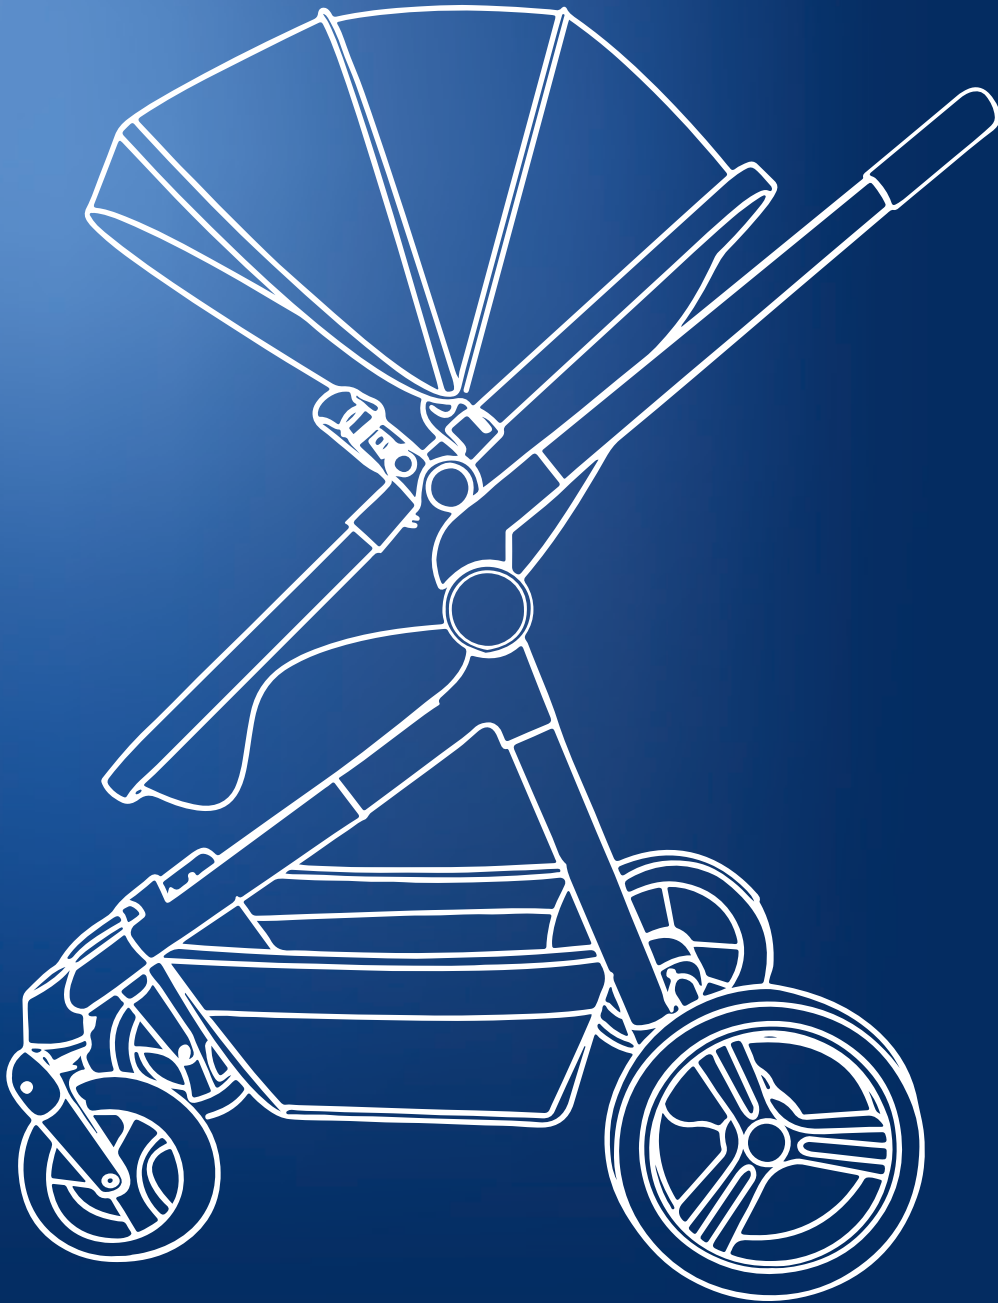

EN 1888-2:2018+A1:2022



EN - Please read instructions before use.



WARNINGS

TO KEEP FOR FUTURE REFERENCE.

PURPOSE OF THE PRODUCT

A stroller has the primary purpose of providing a safe and comfortable means of transporting young children during outdoor walks, travel and everyday activities.

1. WARNINGS

- The bassinet mode shall not be used, once the child is able to sit up, or roll over, or push itself up on hands and knees. Maximum weight of the child: 22kg.
- Using an infant car seat in conjunction with a chassis does not replace a cot or a bed. When the child needs to sleep, then it should be placed in a suitable pram body, cot or bed.
- Don't add additional mattress.
- Discard plastic bags immediately. Keep them away from children.
- Ensure that all locking devices are engaged before use.
- Avoid serious injury falling or sliding out. Always use the restraint system.
- Never leave the child unattended.
- Any load attached to the handle and/or on the back of the backrest must be less than 3kg.
- You must enable the brake device whenever the stroller is stopped.
- Over loading or incorrect use may damage the stroller.
- Accessories which are not approved by the manufacturer shall not be used.
- Don't use on slopes where the stroller is liable to tip over.
- Keep children clear when adjusting the seat.
- To avoid injury ensure that the child is kept away when unfolding and folding this product.
- The shopping basket has a maximum weight limit 3kg.
- Don't carry two or more children.
- Do not allow children to climb from the guardrail or stand on the seat.
- The parking device shall be engaged when placing and removing the child
- Keep away from the fire.
- Do not let a child play with this product.

- This product is not suitable for running or skating.
- Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.
- Beware of a child slipping into leg openings, and any strangulation hazard.
- Do not use any other pram body or seat unit.
- The seat unit is not suitable for children under 6 months. Use the bassinet mode for children under 6 months.
- Only replacement parts supplied or recommended by the manufacturer shall be used.

2. PARTS OF THE STROLLER

1. Canopy
2. Push handle
3. Chassis
4. Rear wheels
5. Basket
6. Front wheels
7. Seat
8. Bumper bar



3. PARTS FOR ASSEMBLY



Front wheels



Rear wheels



Bumper bar



Chassis



Seat



Footmuff

4. ASSEMBLY



Step 1 (Pictures 1, 2 and 3). Open the buggy chassis until you hear two corresponding “clicks” on both sides, this indicates that the chassis has been opened correctly, as shown in picture 3.

Step 2 (Pictures 4, 5 and 6). Insert the rear wheel axle into the hole in the chassis, when you hear a click, this indicates that the rear wheel has been installed correctly. Perform the same action to install the front wheels into the chassis. Finally, the wheel assembly with the chassis should look as shown in picture 6.

Step 3 (Picture 7). To install the seat, insert the seat adapter/anchorage into the hole in the chassis as shown in picture 7. When you hear a click, it indicates its installed correctly. Pull up to check.

5. REVERSIBLE SEAT



As shown in picture 1, the seat of the buggy is facing outwards. To reposition the seat, simply press the button on the seat located at the connection of the anchorage to the chassis at the same time as you pull the seat upwards (fig. 2).

Turn the seat 180 degrees, then insert the seat into the chassis anchorage (picture 3).

The stroller should look as shown in picture 4. Adjust the seat back and recline function as you prefer.

6. BASSINET CONVERSION

When the fasteners A, B and C, shown in the picture, are clipped, the function is for a stroller seat. When they are unfastened, the function is for the bassinet.



CLIPPED



UNCLIPPED

7. BACKREST ADJUSTMENT



As illustrated in picture 1, press the button on the sides and rotate the seat to the desired position.

8. REMOVAL OF WHEELS



As shown in picture 1, press the button on the chassis just above the front wheel, and at the same time pull the wheel downwards, thus ejecting it from the chassis anchorage.

To remove the rear wheels, press the button next to the wheel on the chassis, and at the same time pull outwards, thus releasing the rear wheel anchorage.


9. BRAKE



As shown in the picture, the brake acts by pressing it downwards towards the B side. With this gesture, the wheels be locked.

On the other hand, if you release the brake upwards, towards side A, the wheels will be unlocked and able to move.

10. FOLDING

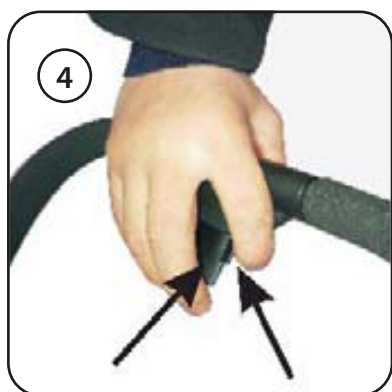

To fold the stroller, press the buttons on both sides (picture1), and at the same time, fold the seat as shown in pictures2 and 3.

Then, as shown in picture 4, on the handlebar of the chassis, press the button while pressing the lock button, and push down the handlebar to finish folding the stroller, as in pictures 5 and 6.

11. UNFOLDING





To unfold the stroller, pull the handlebar of the chassis upwards until you hear two “clicks” (pictures 1 and 2).

Next, open the stroller seat as shown in picture 3, and then fully open the canopy as shown in picture 4. Make sure the seat is firmly and securely attached to the stroller chassis.

12. USE OF THE SAFETY HARNESS

Fastening the harness



picture1



picture2



picture3

As shown in pictures 1 and 2, you must first join A to C and B to D, resulting in picture 2. Once this step is done, anchor H and J at M, i.e. the two joints made earlier at the central anchorage point (M). See picture3.

When you hear a clicking sound, pull the belt to ensure that it is correctly fastened and does not come loose.

Opening of the harness



Press the button on the centre anchorage and the harness will automatically release.


13. MAINTENANCE AND CLEANING

1. If the material or parts are broken, replace them for proper functioning of the stroller.
2. Keep the stroller clean and do not place sharp or edged objects on the stroller to avoid injury to the child.


3. Use a damp cloth to clean the stroller. Do not rinse with alkaline or acidic water to avoid corrosion of the metal parts.
4. The fabric cover can be hand washed, not machine washed.




Hand wash at
30°C or less

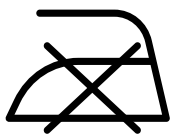


Do not iron

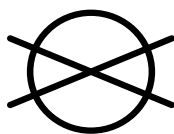

Do not dry
clean

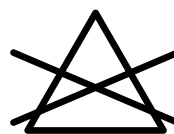

Do not use
bleach

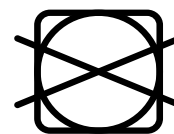

Do not tumble
dry

