

STACYC 18-20 EDRIVE RECOMMENDED SERVICE

	BEFORE EACH RIDE	EVERY 5 CHARGES or 1 month	EVERY 30 CHARGES or 3 month
Visually inspect throttle, wires and brake cable for damage.	X	X	X
Check throttle proper function. Throttle should rotate freely and automatically spring back to "zero" when released.	X	X	X
Check brake for proper function - brake should provide positive braking action when lever is squeezed. Ensure brake is not dragging when lever is released.	X	X	X
Verify handlebars & front fork-wheel turn without obstruction or restriction.	X	X	X
Check tire pressure in front & rear tires. Recommended 25-30psi for OEM tires. Inflate per recommendation on sidewall of tire - Do Not Exceed 35psi.	X	X	X
Ensure that all bolts, screws, nuts & fasteners are securely tightened	X	X	X
Check front & rear axle nut are torqued to spec.	X	X	X
Verify side panels and chain guard are properly installed and secure.	X	X	X
Inspect rims for cracks, breaks, nicks or any signs of damage. DO NOT USE IF DAMAGED	X	X	X
Inspect frame, fork, stem & handlebars for cracks, breaks, nicks or any signs of damage. DO NOT USE IF DAMAGED	X	X	X
Install fully charged battery	X	X	X
Ensure desired power mode is selected	X	X	X
Ensure proper chain tension (2-3mm) of "free play" or "slack" at the tightest point and lubricate chain.		X	X
Check that seat collar is tight and seat post is positioned such that the "min insert" indicator line is Not visible.		X	X
Inspect tires for wear, damage and aging. Replace if any wear, damage or aging is present.		X	X
Inspect brake pads & discs for wear & alignment. Replace if any wear or alignment issues are detected		X	X
Inspect gearbox, gearbox assembly bolts and bolts securing drivetrain to the frame - rebuilt with Gearbox Kit if any loose bolts/screws are found.		X	X
Service gearbox with new grease (ECO-LI 91 grease)			X