

**DEMI30BK/BZ-B, DEMI33BK/BZ-B, DEMI36BK/BZ-B, DEMI42BK/BZ-B,
TRES30BK/BZ-B, TRES33BK/BZ-B, TRES36BK/BZ-B, TRES42BK/BZ-B**
Installation Instructions



Leave this manual with party responsible for use and operation.

CAUTION! Risk of Cuts, Abrasions or Flying Debris.
Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.

DANGER



HOT GLASS WILL CAUSE BURNS.

DO NOT TOUCH GLASS UNTIL COOLED.

NEVER ALLOW CHILDREN TO TOUCH GLASS.

A barrier designed to reduce the risk of burns from the hot viewing glass is provided with this appliance and shall be installed for the protection of children and other at-risk individuals.

WARNING! Risk of Fire! Combustible materials MUST NOT overlap or be placed under a surround.

CAUTION! Do not install damaged components.

WARNING! Risk of Fire! DO NOT apply combustible materials beyond the minimum clearances. Comply with all minimum clearances to combustibles as specified. Overlapping materials could ignite and will interfere with proper operation of doors and louvers.

For Models:

**NDV3630I-B, NDV3630IL-B, NDV3933I-B,
NDV3933IL-B, NDV4236I-B, NDV4236IL-B,
NDV4236I-NVR, NDV4842I-B, NDV4842IL-B
NDV30-IFT, NDV30L-IFT, NDV33-IFT, NDV33L-IFT
NDV36-IFT, NDV36L-IFT, NDV36-IFT-NVR,
NDV42-IFT, NDV42L-IFT**

**NBV3630I-B, NBV3933I-B, NBV4236I-B, NBV4842I-B,
NBV30-IFT, NBV33-IFT, NBV36-IFT, NBV42-IFT**

**NNXT3933IF-B, NNXT3933ILF-B, NNXT4236IF-B,
NNXT4236ILF-B, NNXT33-IFT, NNXT33L-IFT, NNXT36-IFT,
NNXT36L-IFT**

CONTENTS:

- Decorative Front Assembly
- Installation Instructions

PREPARATION:

- Verify and remove contents from packaging before beginning installation.
- Refer to cleaning instructions on page 3.

TOOLS REQUIRED:

- 1/4 inch drill driver with 1/4 hex bit

Proceed to “Install Upper Shoulder Screws”

For the models listed below, it will be necessary to remove the lower magnet latches and replace with a shoulder screw:

**NDV3630I, NDV3630IL, NDV3933I, NDV3933IL,
NDV4236I, NDV4236IL, NDV4842I, NDV4842IL**

NBV3630I, NBV3933I, NBV4236I, NBV4842I

**NNXT3933IF, NNXT3933ILF, NNXT4236IF,
NNXT4236ILF**

TOOLS REQUIRED:

- 1/4 inch drill driver with #2 Phillips bit and 1/4 hex bit

CONTENTS:

- Decorative Front Assembly
- Installation Instructions

PREPARATION:

- Verify and remove contents from packaging before beginning installation.
- Refer to cleaning instructions on page 3.

1. Locate the magnetic latches in the bottom corners of the appliance. Using a #2 Phillips bit, remove the two screws retaining both latches. See Figure 1.

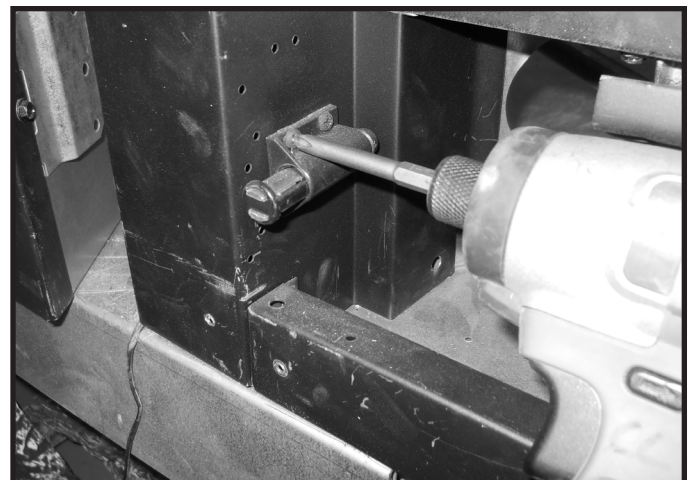


Figure 1. Remove Screws from Magnetic Latches

2. Install a shoulder screw in the outermost hole from where the latches were removed. See Figure 2. Shoulder screws are located in the manual bag. Tighten shoulder screw until snug. Do not overtighten.

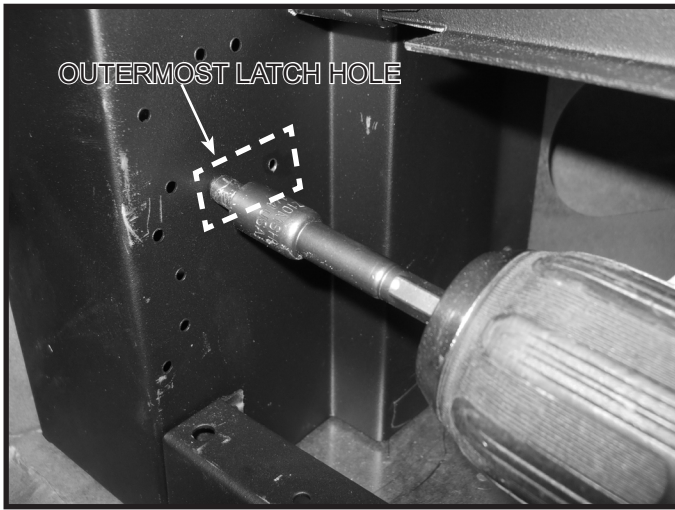


Figure 2. Install Shoulder Screw (1 Per Side)

INSTALL UPPER SHOULDER SCREWS (All Models)

1. Carefully remove decorative front from packaging.
2. Locate the two shoulder screws that are factory-installed on the upper door hanging brackets. Remove them and retain for later use. See Figure 3.



Figure 3. Remove Shoulder Screws

3. Using a 1/4 inch drill driver, attach the two shoulder screws removed in Step 2 into the pilot holes on the top left and top right side columns of the appliance, as shown in Figure 4. Tighten until snug. Do not overtighten.

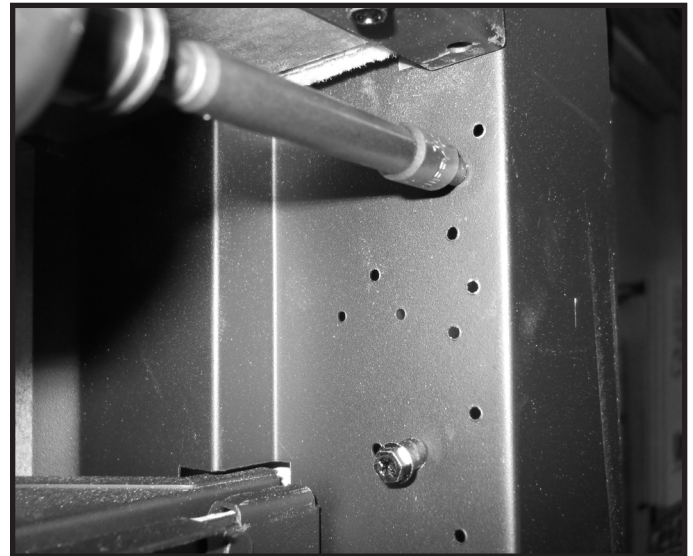


Figure 4. Install Shoulder Screws

INSTALL THE DEMI/TRES FRONT (All Models)

1. Bend all four of the hanging brackets (two upper and two lower) to a 90 degree angle as shown in Figure 5.

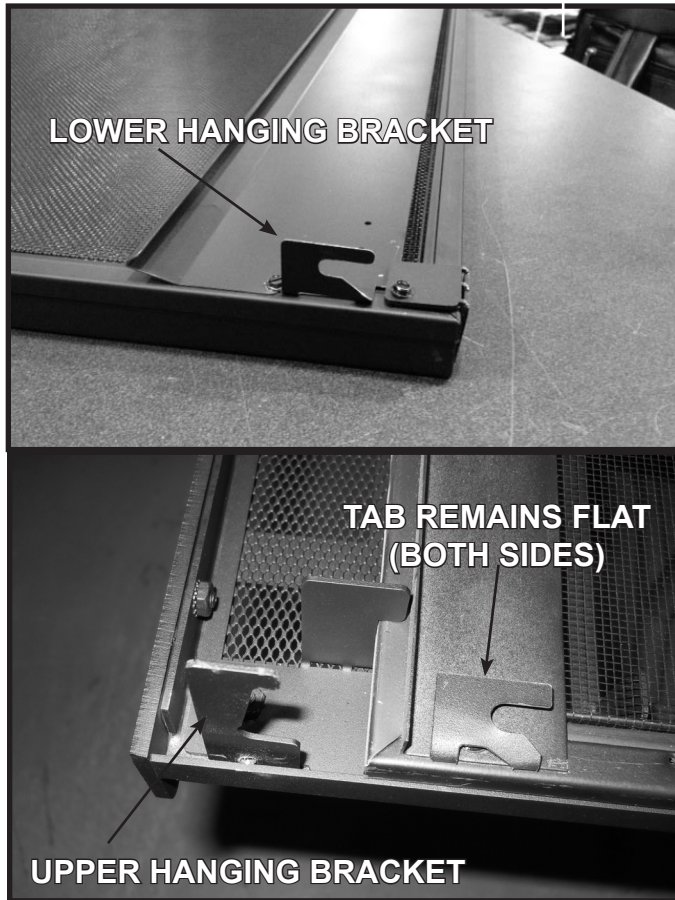


Figure 5. Bend Hanging Brackets

2. The front will hang on the upper shoulder bolts previously installed and the two lower shoulder bolts. Hang the bottom of the front on the two lower shoulder bolts first. See Figure 6.

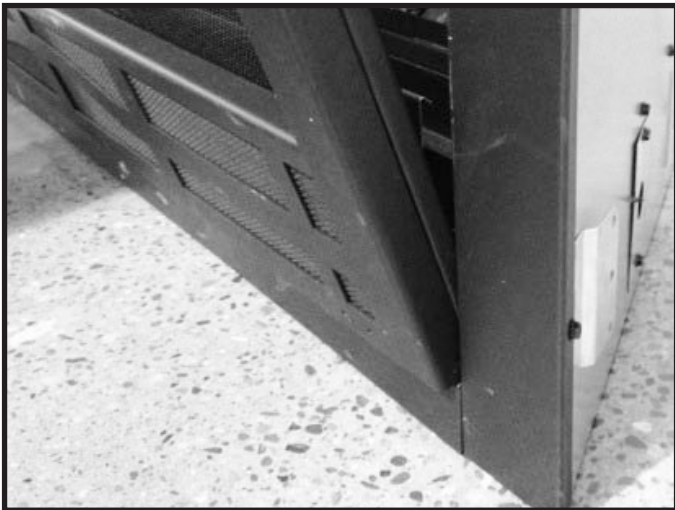


Figure 6. Hang Bottom of Front on Shoulder Bolts

3. Rotate top of front toward appliance. Lift front slightly so upper hooks clear upper shoulder bolts. See Figure 7.
4. Push front toward appliance and hang on upper shoulder bolts.

Note: It may be necessary to adjust the hanging brackets slightly to make the decorative front hang squarely in the appliance opening.



Figure 7. Hang Top of Front on Shoulder Bolts

Replacement Mesh

FRONT	PART #	FRONT	PART #
DEMI30BK/BZ-B	SIM-3630	TRES-30BK/BZ-B	SRV2380-042
DEMI33BK/BZ-B	SIM-3933	TRES-33BK/BZ-B	SRV2381-042
DEMI36BK/BZ-B	SIM-4236	TRES-36BK/BZ-B	SRV2382-042
DEMI42BK/BZ-B	SIM4842	TRES-42BK/BZ-B	SRV2383-042

Cleaning Instructions for Decorative Fronts

Use a microfiber cloth and Windex® Original Glass Cleaner or 03M003 Stove Bright® Glass Cleaner to clean the decorative front immediately after installation to remove acids deposited by the installer or technician. Spray the cleaner onto the microfiber cloth and carefully wipe the entire surface. The decorative front should be cleaned in this manner annually by the homeowner to remove fingerprints or other contaminants. Once oxidation of the paint pigment has occurred, cleaning will not restore the original color.

Please contact your Heatilator dealer with any questions or concerns.

For the location of your nearest Heatilator dealer, please visit www.heatilator.com.

Heatilator, a brand of Hearth & Home Technologies
7571 215th Street West, Lakeville, MN 55044
www.heatilator.com