

HZMR-ADP

Models: 6K/8K, 6KL/8KL, 6KX, 8KX, CAL36, CAL42, CAL36X, CAL42X, MER36, MER42, MER36P, MER42P, 6KMOD, 8KMOD, MER36MN, MER42MN

Heat-Zone®-Gas Adapter Installation Instructions



Leave this manual with party responsible for use and operation.

CAUTION! Risk of Cuts, Abrasions or Flying Debris.
Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.

CAUTION! Do not install damaged components.
If any parts are missing or damaged, contact your dealer before starting installation. **DO NOT** install a damaged kit.

DANGER

HOT GLASS WILL CAUSE BURNS.

DO NOT TOUCH GLASS UNTIL COOLED.

NEVER ALLOW CHILDREN TO TOUCH GLASS.

A barrier designed to reduce the risk of burns from the hot viewing glass is provided with this appliance and must be installed for the protection of children and other at-risk individuals.

Kit Contents

Verify and remove contents from packaging before beginning installation.

- (1) Damper
- (1) Zip Tie, 14 inch
- (3) Screws

Introduction

This adapter kit is for use with the HEAT-ZONE®-GAS Kit and is **required** when the optional Heat-Zone-Gas is installed on the 6/8 Series, CAL/CALX Series and MER/MERP Series. This kit is **not required** when the HEAT-ZONE-GAS Kit is installed with Passive Heat.

Installation

1. Locate the HEAT-ZONE-GAS knockouts on the top of the appliance as shown in Figure 1. Remove only one of the outer knockouts from the appliance with a tin snips or screwdriver. Remove inner knockout from the same side. See Figure 1.

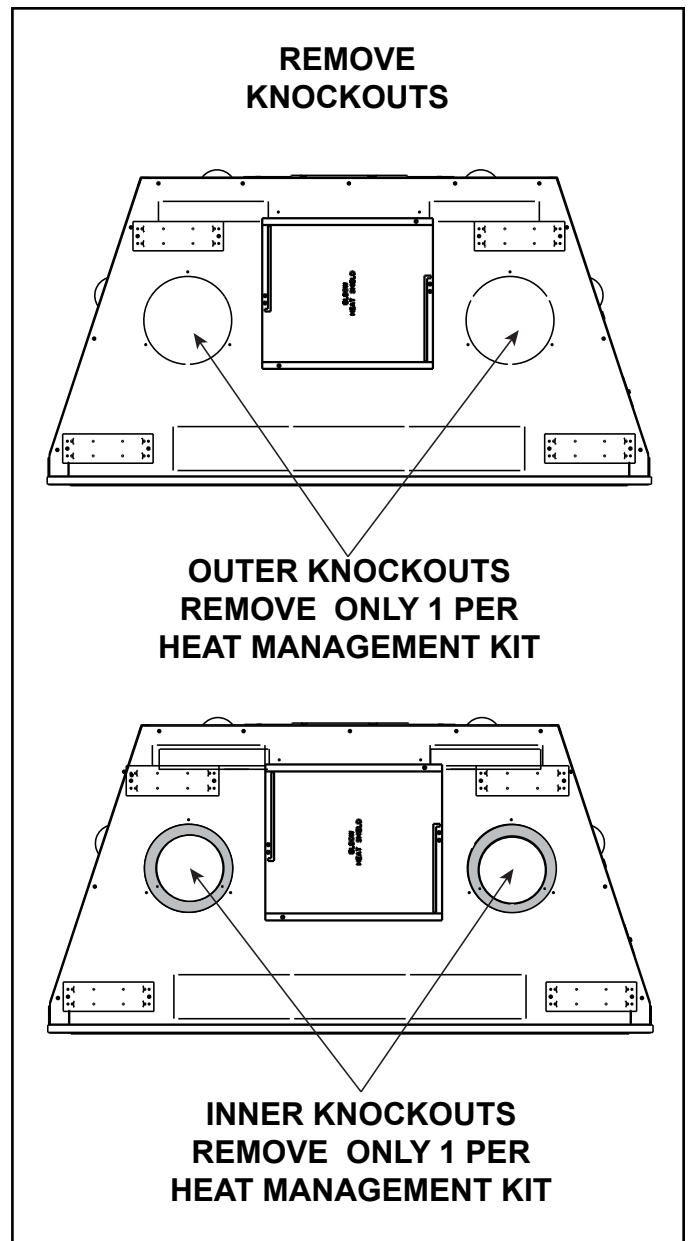


Figure 1 Top Knockout Locations

- Center the duct collar, included with the HEAT-ZONE-GAS kit, around the open hole and attach it to the appliance with 3 screws included in the Heat-Zone-Gas kit. See Figure 3.
- Attach the damper, included in the HZMR-ADP kit, to the HEAT-ZONE-GAS duct collar with the three screws included in the kit. Install damper with the crimped side up as shown in Figure 3. Figure 2 shows screw locations on damper.

CAUTION! Risk of Overheating! Risk of Burns! Damper must be installed. Register will become hot in absence of damper.

NOTICE: Damper must be installed correctly or it will not function properly.

- Verify the damper opens and closes properly.
- Attach six inch duct to the damper using a zip tie. Do not use any other method for attachment, such as screws or hose clamps.

Refer to the HEAT-ZONE-GAS Kit instructions for the remaining installation steps.

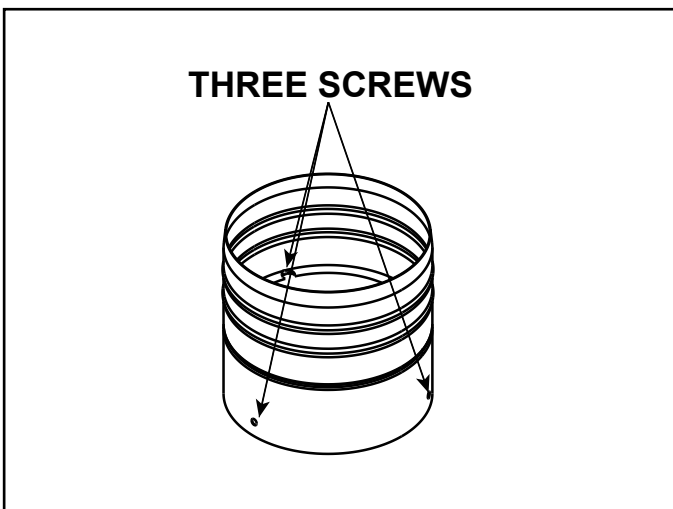


Figure 2 Install Damper with Three Screws

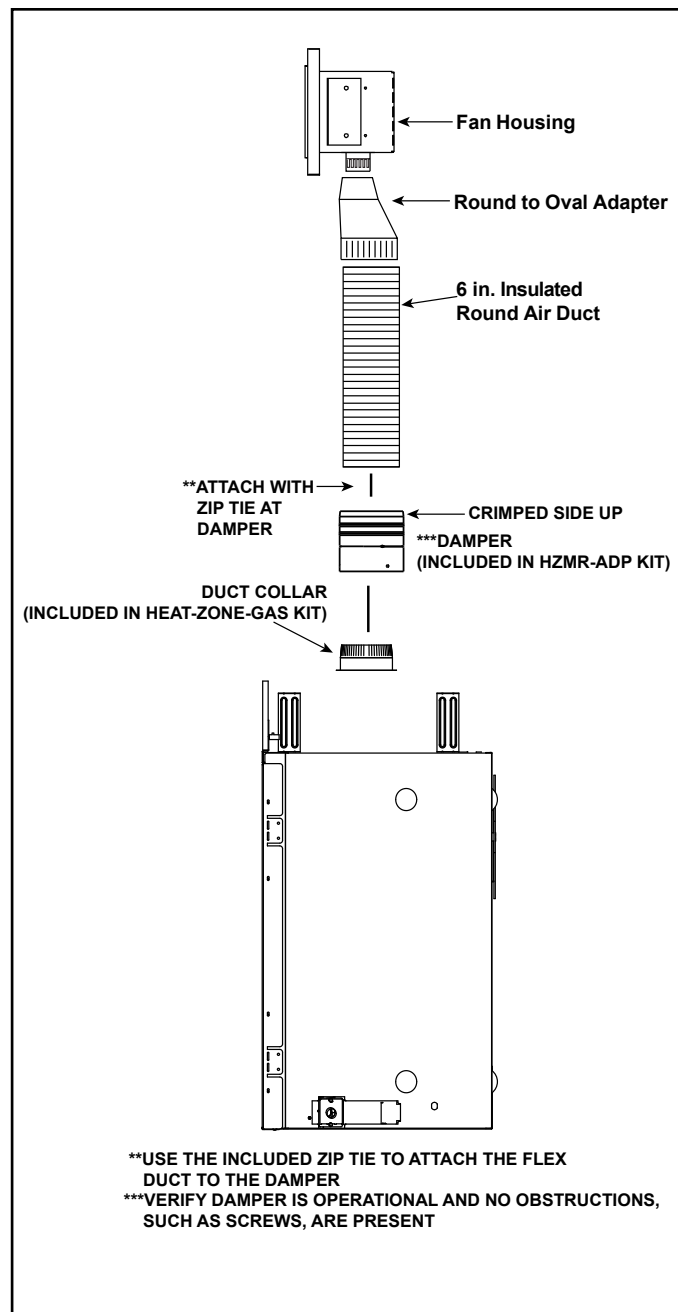


Figure 3 Assemble the Heat-Zone®-Gas Components

Maintenance

Service and maintain the gas fireplace per instructions. Keep the air register(s) clean and free of any blockage.

Please contact your Hearth & Home Technologies dealer with any questions or concerns. For the location of your nearest Hearth & Home Technologies dealer, please visit www.hearthnhome.com.

Hearth & Home Technologies
7571 215th Street West, Lakeville, MN 55044
www.hearthnhome.com