
MEGATRON STANDARD

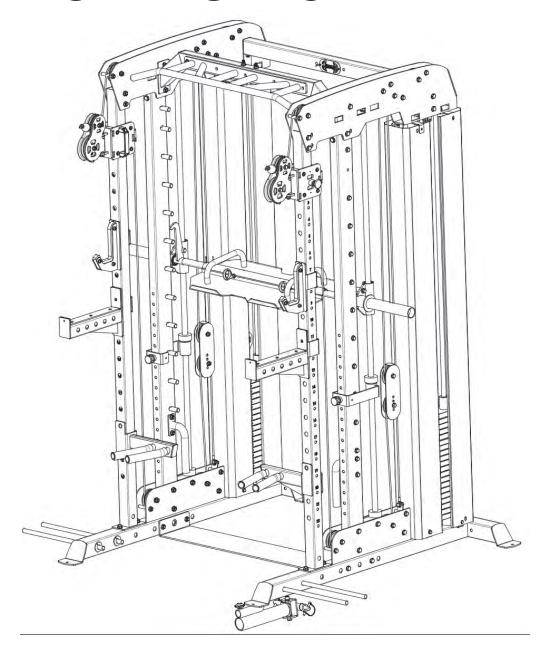

MT-R-2S ASSEMBLY INSTRUCTIONS MEGATRON STANDARD MACHINE

CONTENTS

01/IMPORTANT NOTICE
02/ ASSEMBLY PROCEDURE AND BILL OF MATERIALS
03/PRODUCT DESCRIPTION
04/PRODUCT PARAMETER
05/MAINTENANCE GUIDELINE
06/TROUBLESHOOTING
07/WARRANTY INSTRUCTION

Pg 3

01/IMPORTANT NOTICE


Thank you for choosing our machine, proper use of the machine is important to keep you convenient and away from

danger. Please read the instruction before operating the machine:


1. Please read all user manuals before operating the machine and operate the machine according to the instructions.

Please keep the user manual until the machine is no longer in use!


- 2. Please read and understand all cautions!
- 3. Keep enough space for users when operating the machine.
- 4. Keep the machine in good condition. Ensure all fixed parts are tightened and no parts are left over. Inspect the parts subject to wear regularly.
- 5. Please contact the dealer or after-sales department to change worn out or defective parts. DO NOT operate the machine when it is out of use.
- 6. Please wear proper sports dress and gym shoes before operating it. DO NOT wear a skirt or jewelry while using. Tie up user's hair to avoid any possible dangers.
- 7. Do warm-up exercises before operating the machine.
- 8. Stop workout and ask your doctor when the user experiences abnormal symptoms occur such as headache, pain, etc.
- 9. Children must exercise under the supervision of adults.
- 10. WARNING: Keep hands and feet away from moving parts.
- 11. WARNING: DO NOT beyond adjustable setting range.
- 12. WARNING: Keep children or pets away from the machine when operating it.
- 13. WARNING: Keep all control apparatus in proper position.
- 14. WARNING: Please operate the machine in proper way as improper operating may not achieve the desired workout effect of the machine...and may lead to injury!
- 15. Operating the machine in a controlled area is recommended.

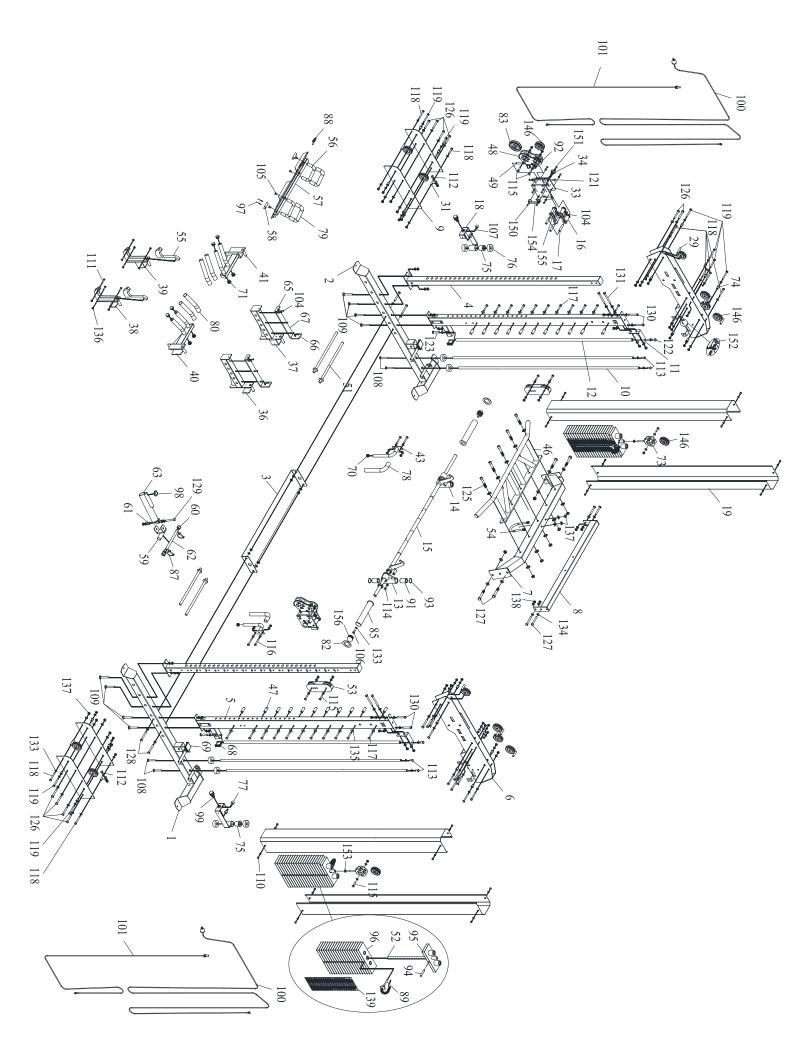


02/ASSEMBLY PROCEDURE

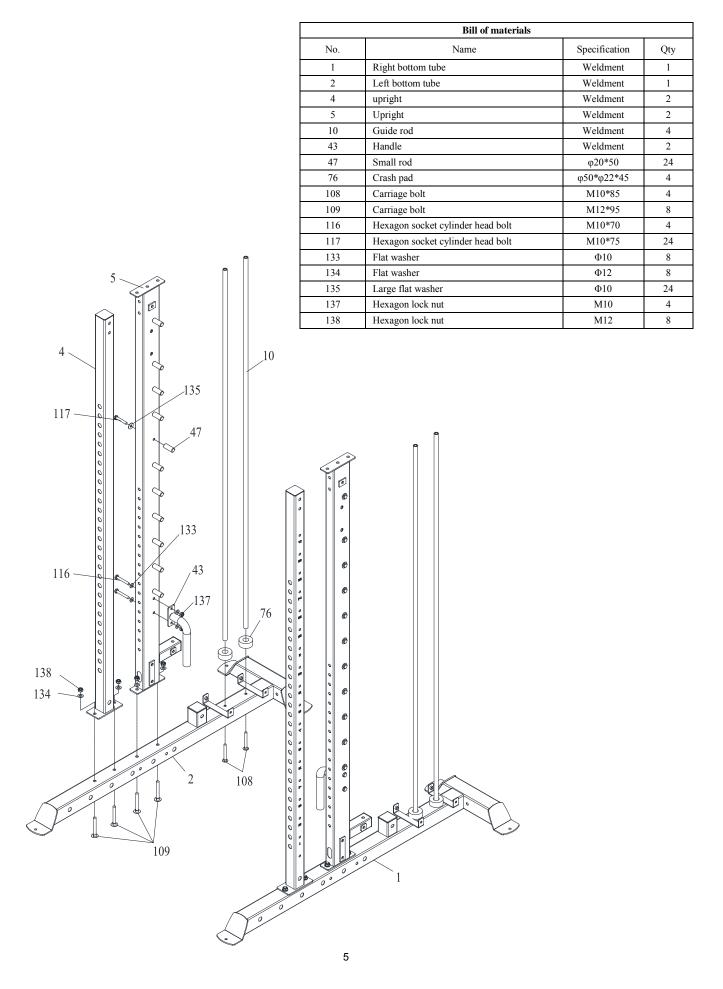


| | Bill of materials | | | |
|-----|-----------------------------------|---------------|-----|--|
| No. | Name | Specification | Qty | |
| 3 | Checkered plate | T6*200*1227 | 1 | |
| 128 | Hexagon socket cylinder head bolt | M12*95 | 4 | |
| 134 | Flat washer | Ф12 | 8 | |
| 138 | Hexagon lock nut | M12 | 4 | |

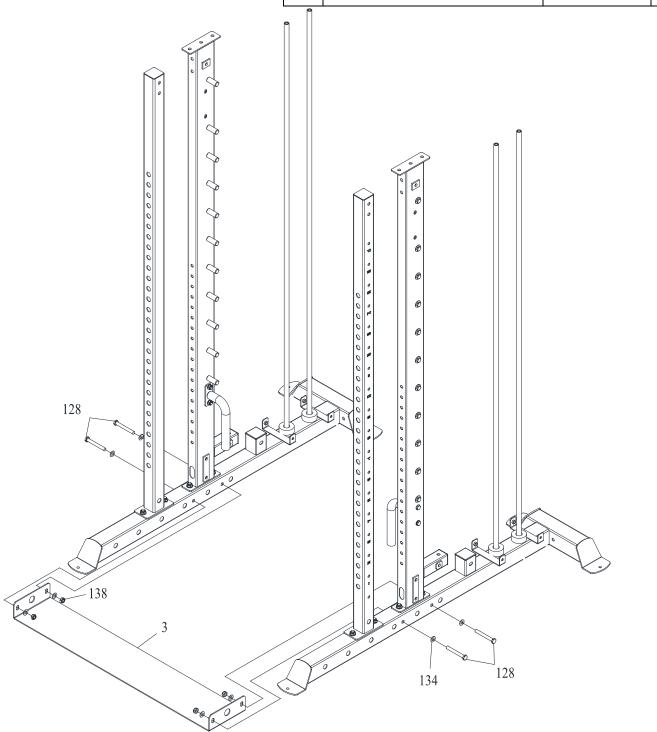


| Bill of materials | | | | |
|-------------------|-----------------------------------|---------------|-----|--|
| No. | Name | Specification | Qty | |
| 33 | Sliding block | Weldment | 2 | |
| 52 | Weight stack selector B | | 2 | |
| 83 | Aluminum pulley | Ф114 | 2 | |
| 89 | Selector pin | | 3 | |
| 94 | Round-shaped shaft | | 3 | |
| 95 | Top plate | | 3 | |
| 96 | Weight stack | | 62 | |
| 115 | Hexagon socket cylinder head bolt | M10*50 | 2 | |
| 133 | Flat washer | Ф10 | 4 | |
| 137 | Hexagon lock nut | M10 | 2 | |
| 139 | Weight stack label | | 3 | |
| 146 | Aluminum pulley | Ф90 | 2 | |

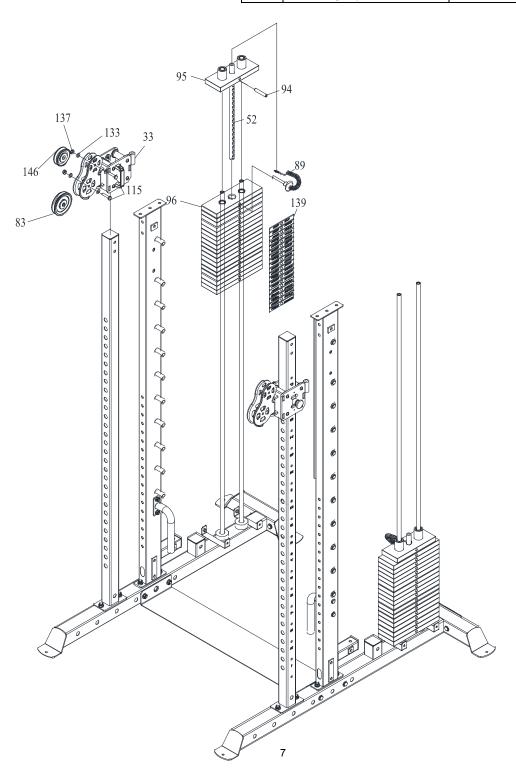


| Bill of materials | | | |
|-------------------|-----------------------------------|---------------|-----|
| No. | Name | Specification | Qty |
| 11 | Guide rod bracket | Weldment | 2 |
| 12 | LM shaft | φ25*1929 | 2 |
| 18 | Buffer bracket | Weldment | 2 |
| 76 | Rubber Bumper | φ50*φ22*45 | 4 |
| 82 | Rubber buffer ring | Ф80*Ф50*Т5 | 2 |
| 99 | Quick pull pin | Ø38*M16*1.5 | 2 |
| 122 | Hexagon socket cylinder head bolt | M12*25 | 2 |
| 123 | Hexagon socket cylinder head bolt | M12*70 | 2 |
| 131 | Hexagon socket cylinder head bolt | M12*120 | 4 |
| 134 | Flat washer | Ф12 | 12 |
| 138 | Hexagon lock nut | M12 | 4 |

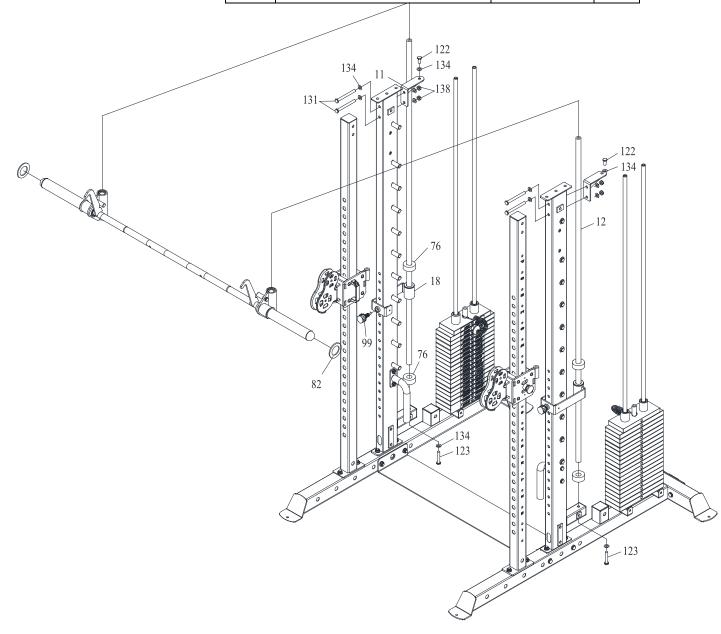


| | Bill of materials | | | |
|-----|-----------------------------------|------------------------|-----|--|
| No. | Name | Specification | Qty | |
| 6 | Short frame | Weldment | 2 | |
| 29 | Cable bumping post 1 | Round tube φ14*T1.5*60 | 8 | |
| 74 | Nylon bush | Ф16*24 | 16 | |
| 113 | Hexagon bolt | M10*25 | 4 | |
| 118 | Hexagon socket cylinder head bolt | M10*85 | 8 | |
| 119 | Hexagon socket cylinder head bolt | M10*90 | 8 | |
| 126 | Hexagon socket cylinder head bolt | M12*85 | 4 | |
| 130 | Hexagon socket cylinder head bolt | M12*80 | 4 | |
| 133 | Flat washer | Ф10 | 36 | |
| 134 | Flat washer | Ф12 | 16 | |
| 137 | Hexagon lock nut | M10 | 16 | |
| 138 | Hexagon lock nut | M12 | 8 | |
| 146 | Aluminum pulley | Ф90 | 8 | |

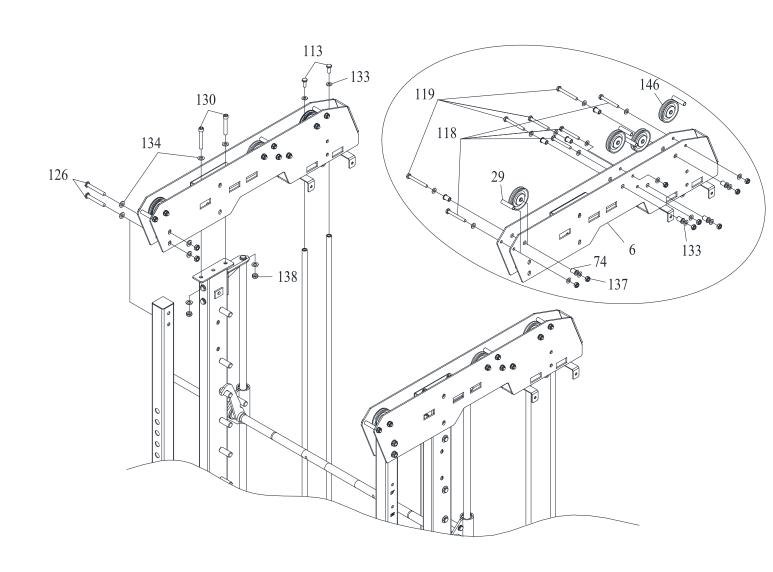


| Bill of materials | | | | |
|-------------------|-----------------------------------|--------------------|-----|--|
| No. | Name | Specification | Qty | |
| 7 | Front upper connecting assembly | Weldment | 1 | |
| 8 | Rear upper connecting assembly | Weldment | 1 | |
| 46 | Chin-up frame | Weldment | 1 | |
| 54 | Lifting hook | Round steelφ12*314 | 1 | |
| 125 | Hexagon socket cylinder head bolt | M12*80 | 9 | |
| 127 | Hexagon socket cylinder head bolt | M12*90 | 8 | |
| 133 | Flat washer | Ф10 | 6 | |
| 134 | Flat washer | Ф12 | 34 | |
| 137 | Hexagon lock nut | M10 | 6 | |
| 138 | Hexagon lock nut | M12 | 17 | |

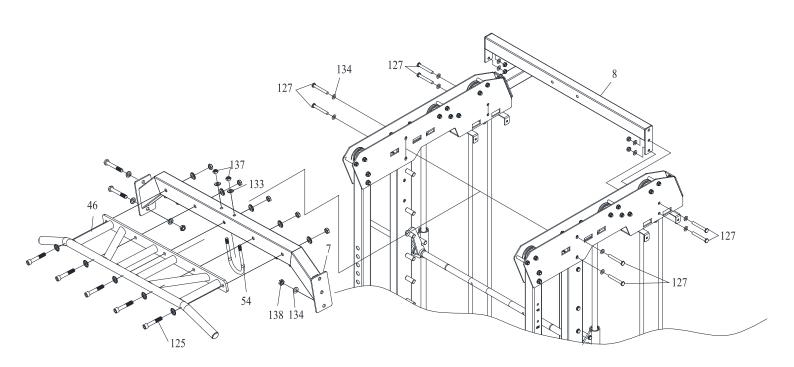


| Bill of materials | | | | |
|-------------------|-----------------------------------|-------------------------|-----|--|
| No. | Name | Specification | Qty | |
| 9 | Bottom pulley baffle | Steel plateT5*532.5*150 | 4 | |
| 29 | Cable bumping post 1 | Round tube φ14*T1.5*60 | 2 | |
| 31 | Bracket | Weldment | 2 | |
| 74 | Nylon bush | Ф16*24 | 8 | |
| 118 | Hexagon socket cylinder head bolt | M10*85 | 4 | |
| 119 | Hexagon socket cylinder head bolt | M10*90 | 4 | |
| 126 | Hexagon socket cylinder head bolt | M12*85 | 8 | |
| 133 | Flat washer | Ф10 | 16 | |
| 134 | Flat washer | Ф12 | 16 | |
| 137 | Hexagon lock nut | M10 | 8 | |
| 138 | Hexagon lock nut | M12 | 8 | |
| 146 | Aluminum pulley | Ф90 | 4 | |

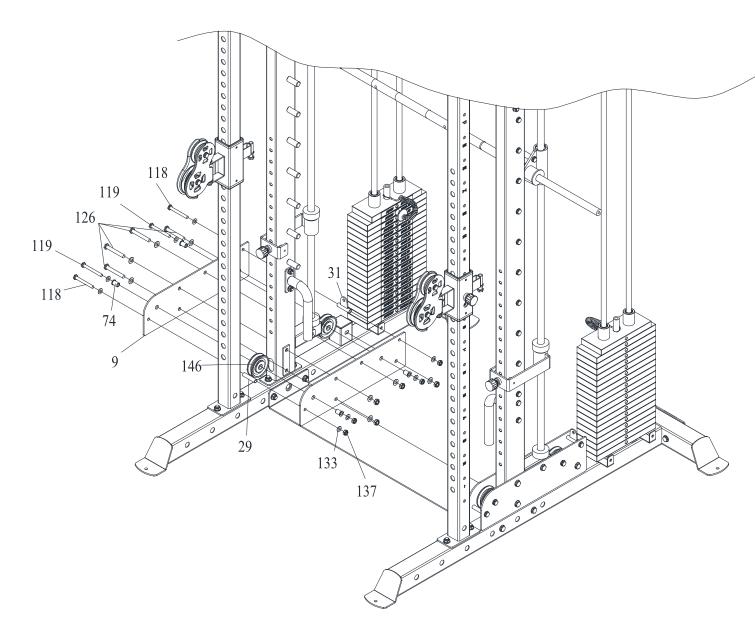


| Bill of materials | | | | |
|-------------------|-----------------------------------|---------------|-----|--|
| No. | Name | Specification | Qty | |
| 53 | Pulley frame | Weldment | 3 | |
| 73 | Pulley seat | Weldment | 2 | |
| 100 | SWC08 Cable 3 | Ф5*6955 | 2 | |
| 101 | SWC08 Cable 4 | Ф5*3220 | 2 | |
| 112 | Hexagon socket cylinder head bolt | M10*25 | 2 | |
| 115 | Hexagon socket cylinder head bolt | M10*50 | 8 | |
| 133 | Flat washer | Ф10 | 24 | |
| 137 | Hexagon lock nut | M10 | 12 | |
| 146 | Aluminum pulley | Ф90 | 8 | |
| 152 | Hexagon socket cylinder head bolt | M10*30 | 2 | |
| 153 | Hexagon lock nut | M12 | 2 | |

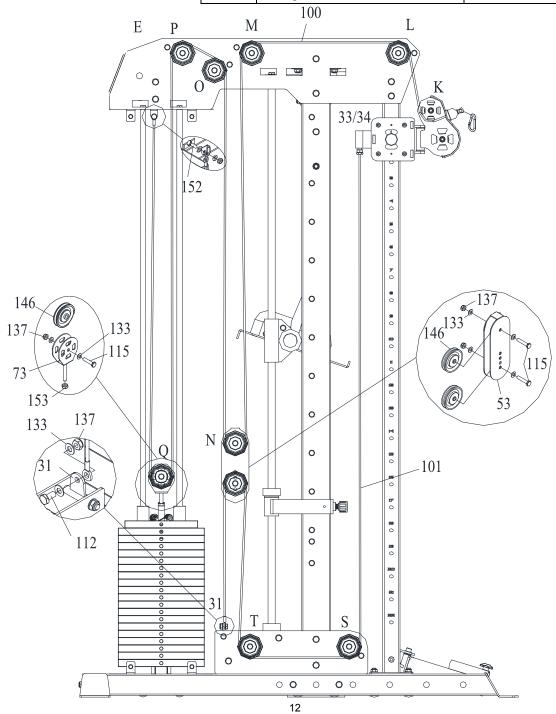

| Bill of materials | | | | |
|-------------------|-----------------------------------|---------------|-----|--|
| No. | Name | Specification | Qty | |
| 19 | Shroud | T1*1963*484.2 | 6 | |
| 110 | Hexagon socket cylinder head bolt | M8*16 | 24 | |
| 132 | Flat washer | Φ8 | 24 | |

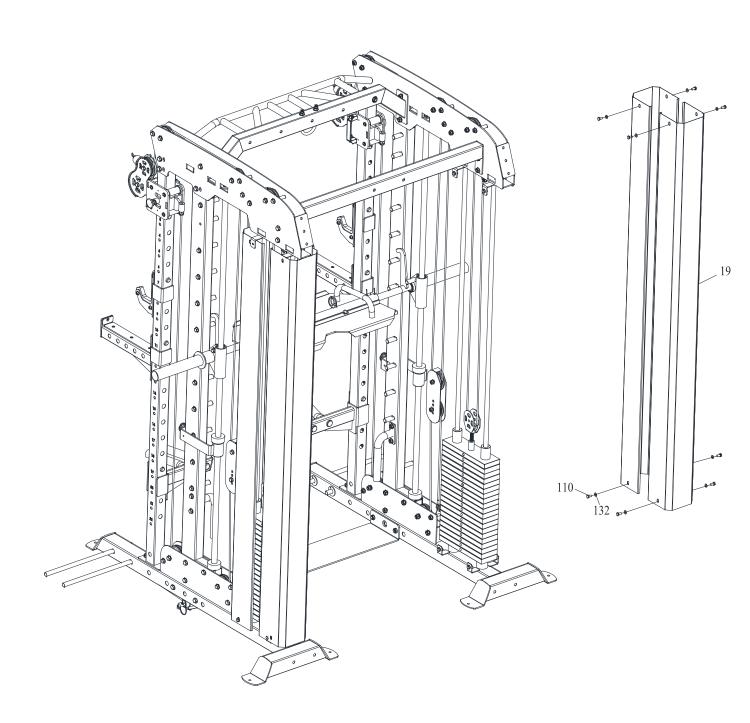

| Bill of materials | | | |
|-------------------|--------------------|---------------|-----|
| No. | Name | Specification | Qty |
| 57 | Footboard assembly | Weldment | 1 |
| 88 | L-shaped latch | Ф10*70 | 2 |

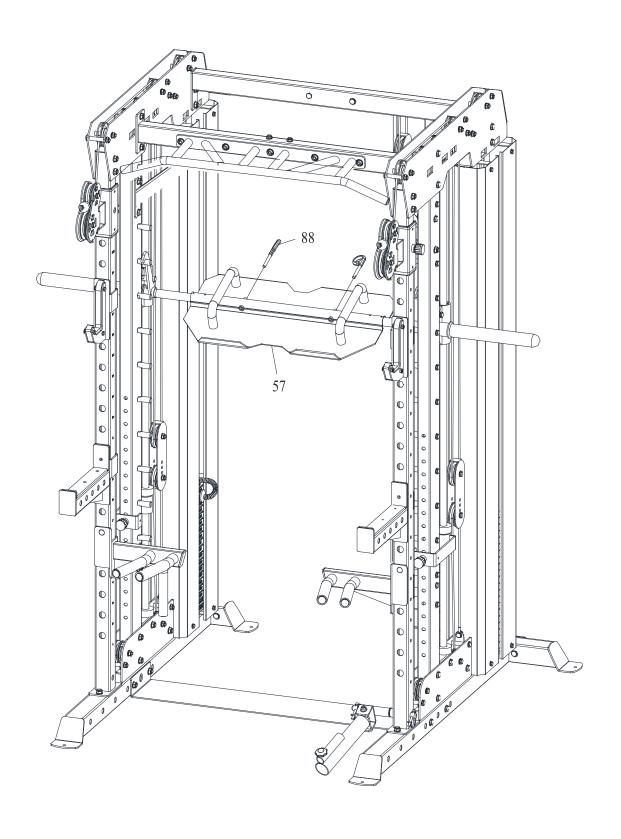

Pg 15

03/ PRODUCT DESCRIPTION

The machine is for indoor fitness equipment use. It is suitable for anaerobic exercise, mainly used to train the total body muscles while improving cardio-pulmonary functions. Working out with the machine will enhance overall muscularity.

Users can adjust the resistance by weight stack easily.

The design and manufacture of the machine meets the human anatomy while the safety and durability are very important for the users.

The design and manufacture of the machine meets the human motion curve, and meets the standard of specifications of GB17498.1-2008 and GB17498.2-2008. The durability is guaranteed.

Large size steel tube and electrostatic spraying guarantee the safety and durability.

04/ PRODUCT PARAMETER

Name: Megatron Deluxe Model SM-12

Floor space 1900mm x 1900mm x 2350mm, 76 in x 76 in x 93 in.

Weight stacks(2), 90 Kg each/(200 lbs each)

05/ MAINTENANCE GUIDELINE

- 1. All the bolts and screws should be inspected regularly and kept tightened, and rotating parts should be flexible without abnormal noise.
- 2. The machine should be kept clean. Please DO NOT clean the machine with strong cleaning solvent
- 3. Any worn or damaged stressed parts should be repaired or changed immediately.

06/TROUBLESHOOTING

07/ WARRANTY INSTRUCTION

1. Warranty scope

The machine is not cover for damages by any misuse while under proper maintenance. The warranty card is valid only for the original buyer.

- 2. The warranty period is one year after purchase of the machine.
- 3. The below-listed damages are out of warranty:
- 1). damages caused by abuse, carelessness, accident or unauthorized modify.
- 2). damages caused by improper adjustment of weight stack pins.
- 3). damages caused by improper maintenance.
- 4). damages caused by other improper operations of the machine.