

YOU ARE A
#FATFISHER
RIDE SAFE

Always wear a helmet and protective gear before you saddle up!

Check your brakes before every ride.

Avoid riding in extreme weather conditions, like the rain.

Regularly inspect the bike for signs of damage such as loose parts.

Never exceed the max load capacity.



CONTACT US

If you require assistance with your Fatfish, email us at:

online@rideelectric.com.au

Monday - Friday 9 AM to 5 PM

www.rideelectric.com.au



FATFISH

USER GUIDE



RIDE YOUR WAY



EVERY JOURNEY IS A BOLD STATEMENT

WARRANTY

It is important that you hold on to your proof of purchase so you can claim the warranty on your Fatfish.

Validity: Refer to your warranty card or our [website](#).
Cover: Defect in parts or workmanship
Exclusions: Usage related wear n tear (brake pads, tyres etc.) and/or Accidental Damage

For further details, refer to your warranty card, our website or contact us.

FAQS

Brakes not responding?

- With hydraulic brakes, check for leaks.
- Check if brake cables are adjusted accurately.
- If the brake pads look worn, get them replaced.

Battery doesn't last long enough?

- Check if the battery is fully charged before use.
- Minimise usage of high power modes.
- Minimise usage in throttle only mode, use pedal assist.
- Bring your battery in to the store if you think it is something else, or for replacement after 2-3 years of use.
- Contact us if your battery is rapidly running out of charge.

Fatfish won't turn on?

- Check if the battery is charged and/or connected properly.
- Check if you switched the battery on.
- Check if you've switched the bike on, press and hold the power button for a few seconds to do so.

KEEP IT SICK!

Avoid direct water pressure on electrical parts, wipe down frame & components with a damp cloth.

Check your tyre pressure regularly, follow the PSI listed on the tyres.

For smooth performance, keep the chain and other moving parts adequately lubricated.

Store the bike in a cool and dry place, if you're not using it regularly. For stowing away- keep the battery charged around 50%-70%.

Only use the charger supplied. Always charge in a cool and dry place.

